EVAPORATIVE AIR COOLER INSTRUCTION MANUAL



Model: SF-614P

Please read this manual thoroughly before using this product. Keep in a safe place for future reference.

CONTENTS

A.	PRODUCT INTRODUCTION2
В.	TECHNICAL PARAMETER2
C.	CONSTRUCTION DIAGRAM3
D.	CONTROL PANEL & OPERATION4
	MODE SCHEMATICS5
E.	MAINTENANCE AND STORAGE6
F.	CAUTION7
G.	WARRANTY8

A. PRODUCT INTRODUCTION

This Evaporative Air Cooler, Humidifier, and Fan is a versatile and an economical way to cool and humidify the surrounding air. The Cooler easily rolls from room to room. Oscillating louvers for even distribution of refreshing cool air. Can also be used as a fan or humidifier if temperature is not an issue. Features a 3-D Honeycomb Cooling Pad, LCD panel and remote control.


BRIEF INTRODUCTION OF FEATURES


- High-grade computer-controlled system with LED panel
- Remote control
- Functions include: Cool fan, humidifier and air filtration.
- Dust filter captures dust and pollen
- Honeycomb pad enhances cooling performance
- Energy saving and effective, only uses 65W of power
- 3 fan speeds: High Medium Low
- Large water tank capacity and high air volume
- Up to 12 hours off-timer

B. TECHNICAL PARAMETER

Voltage / Frequency	110V / 60Hz
Input Power	65W
Water Consumption	0.5-0.6L/h
Air Volume	≤ 500m³/h
Net Weight	13.23 lbs

C. CONSTRUCTION DIAGRAM

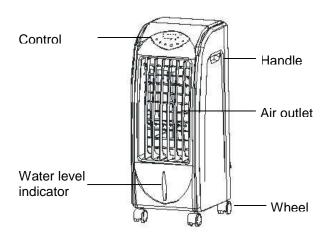

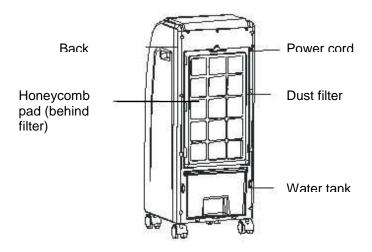




Remote Control

The functions on the remote are the same as the control panel for the exception of timer (deduction function).

D. CONTROL PANEL & OPERATION

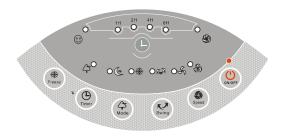

ON/OFF button: Turns the unit on or off Indicator light illuminates when unit is plugged in. Unit operates in default High fan speed.

SPEED button: Selects fan speed: Low – Medium – High. Corresponding indicator light will illuminate.

SWING button: Starts/stops horizontal swing of vertical louvers Swing indicator light will illuminate.

*To direct vertical airflow, adjust the horizontal louvers manually.

MODE button: Selects the operating mode, corresponding indicator light will illuminate.


(Normal): Operates at selected fan speed.

(Natural): Imtates natural air flow. Unit operates according to preset computer program, alternating between different fan speeds. Please refer to next page for schematics.

(Sleep): Unit operates according to preset program. Please refer to next page for schematics.


TIMER button: Press to set off timer between 1 to 12 hours. Each press is 1-hour increments. Illuminated lights add up to set time.

COOL button: Press to engage evaporative cooling function. Make sure water is added before turning on this function. Unit cycles the water to blow cool, humidified air. Add ice/ice pack for added cooling.

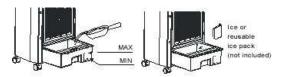


NOTE: Unit does NOT have a water-out indicator. Please add water when you hear a gurgling noise (the water pump trying to pump water).

Natural Mode Schematics

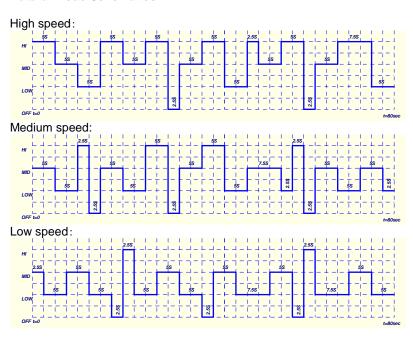

Sleep Mode Schematics

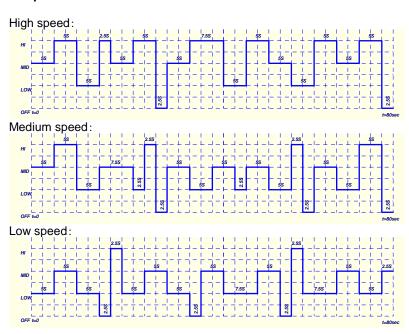

E. MAINTENANCE AND STORAGE

With use, the filter and honeycomb pad will become clogged with dust, which will greatly affect the unit's performance. Sometimes mold and mildew may also occur, due to lack of water changes. It is recommended to clean the filter and honeycomb pad once every two weeks.

- 1. Turn unit off and disconnect power.
- 2. Remove the screw of the rear cover.
- Remove filter and honeycomb pad.
- Wash the filter in a mild detergent and warm water solution and rinse with clean water.
- 5. Wash the honeycomb pad with clean water only. A soft brush can be used for cleaning.
- 6. Replace the honeycomb pad, filter and screw to fix the position.


The water tank should be cleaned periodically:

- 1. With unit powered off and unplugged.
- 2. Remove screws of the filter net and take out the filter and honeycomb pad.
- Unplug the rubber plug in the water tank and clean tank with brush or cloth.

Before putting unit away for storage, please clean filter, honey comb pad and water tank. Allow to dry completely before replacing. Then run the unit in fan only mode for 30 minutes or so to dry the inside. This will prevent mold and mildew growth.

F. CAUTIONS

- Use correct power supply 110V / 60Hz. Plug into dedicated socket with minimum rating current of 5A.
- After filling with water, do not tilt unit and avoid moving unit. Do not cover the unit.

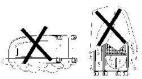

- Do not place any heavy objects on top of the air cooler.
- Do not obstruct the air outlet. Do not place any objects before or behind the unit, so not to obstruct air flow.
- Suitable ambient temperature range is 41F to 104F. Do not place
 unit in area of extremely high or low temperature. When ambient
 temperature is high, change water frequently to prevent mildew and
 mold growth. If using the unit as a humidifier during cold weather
 (below 32F), be sure to empty and dry the surface of unit after use
 to prevent water freezing.
- Avoid exposing unit to water or spraying water onto the control panel LED. Do not use any corrosive cleaner or solvent.
- Empty the water tank before moving the air cooler.
- Before storage, please clean filter, honeycomb pad and water tank.
 Allow to dry completely.
- Unplug power source when not in use.
- Do not use the cool function in a damp and closed space.
- Do not place fingers or insert foreign objects into the louver during operation.
- Do not operate unit with a damp power cord or plug. When the power cord is damaged, it must be replaced or repaired by a qualified electrician.
- Basic precautions should be taken when operating unit near young children.
- When operating in cool mode, pay attention to water level and add water when water level is less than 1/3 full. Do not operate cool mode with an empty tank as this may cause water pump malfunction.
- This appliance is not intended for use by person (including children)
 without operation knowledge or control ability, unless they have been
 given supervision. The person who operates this appliance is
 responsible for its safety and usage.
- Children should be supervised to ensure that they do not play with the appliance.
- Unplug the appliance before filling and cleaning.



Your Guarantee

If this product is found to be faulty as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired free of charge.

This guarantee is subject to the following terms:

- Sunpentown must be notified of the fault.
- Proof of purchase must be presented to Sunpentown's nominated representative.
- The warranty will be void if the product if modified, misused or repaired by an unauthorized person.
- The warranty after repair will not be extended beyond the original one-year period.
- All replacement parts will be new or reconditioned.
- Parts, which are replaced, become the property of Sunpentown.
- The warranty applies for the use of the product in the USA only.

What is NOT COVERED:

- Warranty does not include freight charges.
- Damage due to installation error, product abuse and/or misuse.
- Incidental or consequential damage caused by possible defects with this
 product.
- Labor cost incurred for the installation and/or removal of a possible defective unit.
- Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature.
- Failure of product resulting from unauthorized modifications to the product.
- Improper installation or failure to perform the necessary maintenance.
- Normal wear and tear on parts or replacement of parts designed to be replaced.
- Damage to personal property from use of product.
- Replacement or repair of household fuses, circuit breakers, wiring or plumbing.

This GUARANTEE is in addition to your Statutory Rights

SUNPENTOWN INTERNATIONAL INC.

14625 Clark Ave. City of Industry, CA 91745
Tel: 800-330-0388
service@sunpentown.com
www.sunpentown.com