



AMBER BAY 48" CAST ROUND TABLE

IMPORTANT: PLEASE READ COMPLETE INSTRUCTION SHEET PRIOR TO ASSEMBLY!

Identify all parts packed in carton against the parts list. Remove all protective materials, place parts on a nonabrasive surface to avoid scratching. If any parts are missing or damaged, DO NOT attempt to assemble. Please contact our customer service center (Monday-Friday 9:00 a.m.-5:00 p.m.CST) at 1-866-538-7735 (fax:952-946-0031), e-mail: custserv@homecasual.net or visit our website at www.homecasual.net.

STEP 1

Turn the table upside down. Attach table legs (B) to table rim (A) by inserting bolts (D) with metal washers (F) through the pre-drilled holes of the table rim and legs.

STEP 2

Attach the leg connector bracket (C) to the table legs (B) by inserting bolts (E) with metal washers (F) through the pre-drilled holes of the leg connector bracket (C) and legs (B). Tighten all bolts completely and cover them with plastic bolt caps (G).








 

STEP 3


Turn the table in the upright position.
Keep touch-up paint bottle for future use for both your table and chairs .

Your table is now ready for use.
Thank you for choosing a Home Casual product!

IMPORTANT: To avoid damage to your table:

- An umbrella base must be used at all times.
- Make sure the plastic umbrella safety ring is installed in the center of the table before you insert the umbrella pole through the table.
- Remove the umbrella from the table when not in use or in the event of wind, rain, hail, sleet, snow, or any other inclement weather.
- In storing patio furniture, do not stack anything on glass, stone, tile or marble tabletops.
- Before storing, drain all water that may have accumulated in or around patio furniture frames. If not drained properly, water can cause freeze damage.
- Cover furniture with outdoor furniture covers when not in use.
- For safety reasons, do not sit or stand on the table.

Parts List							
A	TABLE RIM		1	F	METAL WASHER		12
B	TABLE LEG		4	G	PLASTIC BOLT CAP		12
C	LEG CONNECTOR BRACKET		1	H	HEX WRENCH		1
D	BOLT (M6x15)		4	I	TOUCH-UP PAINT		1
E	BOLT (M6x30)		8				

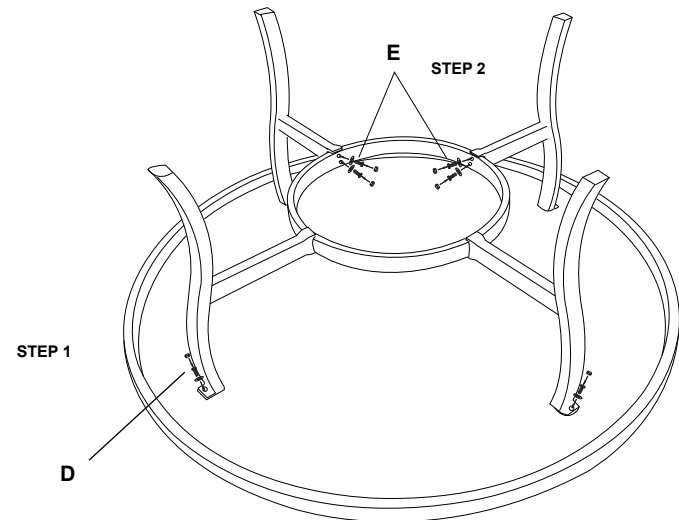





AMBER BAY SWIVEL ROCKER CHAIR

IMPORTANT: PLEASE READ COMPLETE INSTRUCTION SHEET PRIOR TO ASSEMBLY!

Identify all parts packed in carton against the parts list. Remove all protective materials, place parts on a nonabrasive surface to avoid scratching. If any parts are missing or damaged, DO NOT attempt to assemble. Please contact our customer service center (Monday-Friday 9:00 a.m.-5:00 p.m.CST) at 1-866-538-7735 (fax:952-946-0031), e-mail: custserv@homecasual.net or visit our website at www.homecasual.net.

Parts List							
A	CHAIR FRAME		2	B	CHAIR BASE		2

Step 1:

Insert the chair frame into the chair base as shown in the diagram. Make sure you have inserted it all the way. If you experience difficulty, use a twisting motion as you insert. Place cushion on chair.

Your chair is now ready for use.

Thank you for choosing a Home Casual product!

