

User Manual

Toaster Oven

MODEL: WTO950*

1. READ these instructions carefully before installing and operating the toaster oven. Keep them for further reference.
2. Record in the space below the "SERIAL NO." found on the nameplate on your toaster oven and retain this information for future reference.

SERIAL NO.:

Please save sales receipt for warranty.



Westinghouse

INNOVATION YOU CAN BE SURE OF

CONTENTS

SAFETY INFORMATION

Important Safety Instructions	3
Electrical Requirement	5

SET UP & USE

Installation Guide	6
Parts & Features	7
Control Panel	7
Operation Instructions	8
Bakeware For Toaster Oven Use	11

CLEANING & CARE

TROUBLE SHOOTING & WARRANTY

Before You Call For Service	13
Customer Service	13
Troubleshooting	13
Limited Warranty	14

MEMO	15
------------	----

PRODUCT REGISTRATION

Thank you for purchasing our Westinghouse product. This easy-to-use manual will guide you in getting the best use of your toaster oven.

Remember to record the model and date code. They are on a label on the bottom of the toaster oven.

Model number

Serial number

Date of purchase

Staple your receipt to your manual. You will need it to obtain warranty service.

SAFETY INFORMATION

DANGER

DANGER - Immediate hazards which **WILL** result in severe personal injury or death

WARNING

WARNING - Hazards or unsafe practices which **COULD** result in severe personal injury or death

CAUTION

CAUTION - Hazards or unsafe practices which **COULD** result in minor personal injury

IMPORTANT SAFETY INSTRUCTIONS

WARNING

When using electrical appliances, basic safety precautions should be followed, including the following

1. Read all instructions carefully before using.
2. Do not touch hot surfaces. Use handles or knobs.
3. Close supervision is necessary when any appliance is used by or near children.
4. To protect against electric shock, do not immerse cord, plug or any parts of the oven in water or other liquids.
5. Do not let cord hang over edge of table or counter, or touch hot surfaces.
6. Do not operate appliance with damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service center for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.
8. Do not place on or near a hot gas or electric burner, or in a heated oven or in a microwave oven.
9. When operating the oven keep at least four inches (10 cm) of space on all sides of the oven to allow for adequate air circulation.
10. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning.
11. To disconnect, turn the Toast/Time Control to OFF, then remove the plug. Always hold the plug, but never pull the cord.
12. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
13. Do not cover Tray or any part of the oven with metal foil. This may cause overheating of the oven.
14. Use extreme caution when removing Crumb Tray or disposing of hot grease or other hot liquids.
15. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.

SAFETY INFORMATION

16. Oversized foods or metal utensils must not be inserted in a toaster oven as they may cause electric shock or fire.
17. A fire may occur if the oven is covered or is touching flammable material, including curtains, draperies or walls, when in operation. Do not store any item on the oven during operation.
18. Extreme caution should be exercised when using containers constructed of other than metal or glass.
19. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
20. **When not in use always unplug the unit.** Do not store any materials, other than manufacturers recommended accessories, in this oven when not in use.
21. Always wear protective, insulated oven mitts when inserting or removing items from the hot oven.
22. This appliance has a tempered, safety glass door. The glass is stronger than ordinary glass and more resistant to breakage. Tempered glass can break, but the pieces will not have sharp edges. Avoid scratching door surface or nicking edges.
23. Do not place eyes or face in close proximity with tempered safety glass door in event that the safety glass breaks.
24. Do not use outdoors.
25. Do not use appliance for other than intended use.
26. Do not leave this appliance unattended while in use.
27. Do not rest cooking utensils or cookware on glass door.
28. Do not attempt to dislodge food when the toaster oven is plugged into an electrical outlet.

**SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY**

SAFETY INFORMATION

ELECTRICAL REQUIREMENTS

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

POWER SUPPLY CORD

1. A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord.
2. If the power supply cord is too short, do not use an extension cord. Have a qualified electrician or serviceman to install an outlet near the appliance.
3. If it is absolutely necessary to use longer cord sets or an extension cord, extreme care must be exercised.
 - a) Use an extension cord rated no less than 10-amperes.
 - b) The marked electrical rating of the cord set or extension cord must equal to or be greater than the electrical rating of the appliance. The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

NOTE: Neither Westinghouse nor the dealer can accept any liability for damage to the product or personal injury resulting from failure to observe the electrical connection procedures.

SET UP & USE

INSTALLATION GUIDE

1. Carefully unpack the toaster oven.
2. Remove all labels and tags from the products.
3. To remove any dust that may accumulated during packaging, wash the rack, drip/baking pan and crumb tray in warm, soapy water with a clean, soft cloth or sponge or in the dish washer.
4. Ensure each piece is thoroughly dried before use. Wipe the exterior of the toaster oven with a clean, damp cloth. Allow to dry thoroughly. Do not use harsh detergents or abrasive cleansers on any part of the toaster oven.

NOTE: Do not immerse the toaster oven, cord or plug housing in water or any other liquid.

SET UP & USE

PARTS & FEATURES

 
 
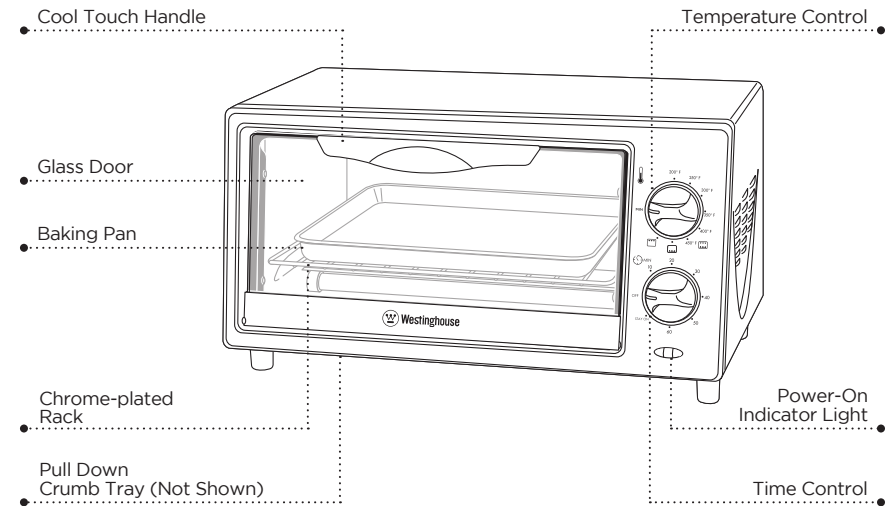 





Diagram for instructional purposes only.

CONTROL PANEL

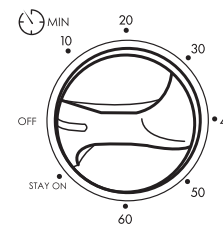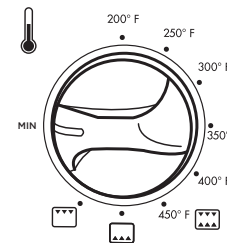

- **Temperature Control:** Use to set the desired temperature from 200°F (Keep Warm) to 450°F (Toast/Bake , Bagel , and Broil ).
- **Time Control:** When you turn this knob to the left (counterclockwise) to the STAY ON position, the toaster will remain ON until it is manually shut off. You will know it is OFF when you hear the bell. Turn the knob to the right (clockwise) to set the required time for toasting, broiling, or baking. When the time has elapsed, a bell will sound and the toaster oven will shut off automatically.

The toaster oven has a fully automatic 60-minute timer. For accurate toasting times under 10 minutes, turn the timer to at least 10 minutes and then back to the desired time.

SET UP & USE

OPERATION INSTRUCTIONS

USING YOUR TOASTER OVEN

Place the Toaster Oven on a dry, flat, level surface such as a countertop or table. Be sure the sides, back and top of the oven are at least four inches (10 cm) away from any walls, cabinets or objects on the counter or table. Plug the cord into a 120 volt 60 Hz AC-only outlet.

We recommend a trial run at a high temperature to familiarize yourself with your oven and to eliminate any protective substance or oil that may have been used for packing and shipping. Set the Temperature Control to and the Time Control to 10 minutes. A small amount of smoke and odor may be detected. This is normal.

Familiarize yourself with these oven functions prior to the first use:

BAKING AND HEATING

When this function is used, the bottom element will cycle on and off to maintain the desired oven temperature.

1. When baking or heating, we recommend preheating the oven for 10 minutes before placing your food into the oven. Turn the temperature knob to the desired temperature. Turn the timer clockwise to the 10 minute mark. When the 10 minutes has elapsed, the timer bell will ring and the toaster oven will automatically shut off.
2. Place the food to be baked/heated into the centre of the toaster oven. Close door.

3. Ensuring that the temperature control is set to your desired temperature, turn the timer knob to the required cooking time as per package or recipe instructions.
4. When the set time has elapsed, the timer bell will ring and the toaster oven will automatically shut off.
5. When baking or heating for more than 60 minutes, turn the time control knob to the STAY ON position. When the food is done, turn the time control knob to the OFF position.

DEFROSTING

To defrost frozen foods, follow instructions 2 - 4 in the "BAKING & HEATING" section; however, we recommend setting the temperature control to the lowest setting of 200°F when defrosting. For food safety reasons, always be cautious when defrosting foods in your toaster oven.


- Thaw pieces or portions only if they are small enough to thaw in an hour or less on the counter. Do not let your food come to room temperature.
- Thawed food held too long or brought to a warm temperature can cause bacteria to form.
- Large amounts of food should be defrosted in a refrigerator.
- Ensure foods are fully defrosted before cooking unless specified to cook from frozen.

NOTE: This oven is not recommended for defrosting meats, dairy products, fish and seafood.

SET UP & USE


BROILING/TOP BROWNING

Only the top element will heat when this oven function is used.

1. Place the food to be broiled on the Baking/Drip Pan and close the oven door.
2. Turn the Temperature Control clockwise to the Broil  setting.
3. Turn the Time Control clockwise to the desired time.
4. When broiling food that needs to be cooked on both sides, set the Time Control for the time necessary to cook on one side. When the bell rings, the oven will automatically shut off. Open the door. Pull the Rack and Drip/Baking Pan about half way out of the oven with a pot holder. Turn the food over, slide the Rack/Pan into the oven and close the door. Turn the Time Control to the desired time.
5. When the time elapses, the bell will ring and the oven will automatically shut off.

TOASTING

Both the top and bottom elements will heat continuously when this function is used.

1. For best results, do not use Baking/Drip Pan when toasting. Put the bread to be toasted directly on the rack in the center of the oven. Close the door. Toast up to four slices of bread. When toasting only one or two slices of bread, center the bread in the oven.
2. Turn the temperature control clockwise to the Toast  setting.
3. Turn the Time Control clockwise to the desired toasting time.
4. The bell will ring and the oven will automatically shut off when the toast is done.

Light	0-3 Minutes
Medium	4-6 Minutes
Dark	7-10 Minutes


The Toaster Oven has a fully automatic 60-minute timer. For accurate toasting times under 10 minutes, turn the Time Control to at least 10 minutes and then back to the desired time.

It is normal for condensation to form on the door when toasting moist or fresh breads.

SET UP & USE

TOASTING BAGELS

Only the bottom element will heat when this function is used.

1. For best results, do not use drip/baking pan when toasting. Put the bagel to be toasted directly on the rack in the centre of the toaster oven, cut sides facing down. Close the door.
2. Turn the temperature control clockwise to the bagel  setting.
3. Turn the Time Control clockwise to the desired toasting time.

Light	0-3 Minutes
Medium	4-6 Minutes
Dark	7-10 Minutes

4. The bell will ring and the oven will automatically shut off when the toast is done.

TOASTER OVEN TIPS

- When setting timer for 10 minutes or less, turn the timer knob beyond the 10 minute mark. Then, turn back to the desired time.
- Experience will teach you how much time to use for toasting various kinds of bread. Frozen, dark, or whole grain breads require a longer toasting time, while fresh, soft, or white breads require a shorter toasting time.
- When cooking small pieces of food or foods that will melt, use the drip/baking pan. This will prevent food from falling onto the heating element.
- For best results, food and/or containers must fit in the toaster oven without touching the heating elements or the inside walls of the toaster oven. The door must close completely.

SET UP & USE

BAKEWARE FOR TOASTER OVEN USE

- The drip/baking pan included with your toaster oven is suitable for items such as rolls, biscuits, nachos and pork chops.
- A variety of standard baking dishes, such as broil pans, 10-inch round or square cake pans, 6-cup muffin pans, and 1- and 2-quart (1L and 2L) round, square and rectangular casserole dishes may be used.
- Choose bakeware made of metal, ovenproof glass or ceramic.
- Make sure when using deep, ovenproof glass or ceramic containers to allow at least 1-inch (2.5 cm) airspace between the top of the container and the upper heating elements.
- Never use glass lids on glass or metal bakeware. If a lid is necessary, cover tightly with aluminum foil.
- Many convenience foods are packaged in nonmetallic containers suitable for use in microwave ovens as well as regular ovens. Check package directions to determine if the container is suitable for use in a toaster oven.

CLEANING AND CARE

CLEANING YOUR TOASTER OVEN

Unplug toaster oven before cleaning. Allow oven and accessories to cool completely before cleaning. Do not use abrasive cleaners or metal scouring pads. This could scratch the surface.

Wipe the outside of the toaster oven with a clean, damp cloth and dry thoroughly. A nonabrasive liquid cleaner may be used for stubborn stains. Rinse and dry thoroughly.

Wash the rack and drip/baking pan in warm, soapy water or in the dishwasher. Rinse and dry thoroughly. To clean the crumb tray, slide it out of the toaster oven and brush off crumbs. Wash with warm, soapy water and dry thoroughly. To remove baked-on stains, scrub with a paste made from baking soda and water. Rinse and dry thoroughly.

To remove baked-on stains, scrub with a paste made from baking soda and water. Rinse and dry thoroughly.

NOTE: · Never immerse the toaster oven, cord or plug in water or any other liquid.
· It is important to periodically clean the crumb tray to remove excess crumbs and drippings. Simply pull down the crumb tray and brush off crumbs. Wipe with a warm, damp cloth and dry thoroughly.

WARNING

- Use the glass window to check on your food. The less you open the door, the more energy efficient your toaster oven will be.
- Be sure all foods and/or containers fit in the toaster oven without touching heating elements or keeping door from closing.
- Remove all plastic and/or paper wrappers from foods before cooking.
- Use only loosely covered containers; airtight containers may cause food to boil over or explode.
- Follow package directions when preparing frozen or packaged foods.
- Metal surfaces will become hot during cooking. Use the handles of your toaster oven.
- Do not place items on top of or near your toaster oven while in use.
- Replace cardboard, glass, or plastic lids with aluminum foil for use in the toaster oven.

TROUBLESHOOTING & WARRANTY

BEFORE YOU CALL FOR SERVICE

IF THE TOASTER OVEN FAILS TO OPERATE:

- A) Check to make sure that the toaster oven is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds and plug it in again securely.
- B) Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.

IF NONE OF THE ABOVE SOLVES THE PROBLEM, CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE TOASTER OVEN YOURSELF.

CUSTOMER SERVICE

IMPORTANT

DO NOT RETURN THIS PRODUCT TO THE STORE

If you have a problem with this product, please contact the W Appliance Co. Customer Satisfaction Center at 1-855-855-0294.

DATED PROOF OF PURCHASE, MODEL # AND DATE CODE REQUIRED FOR WARRANTY SERVICE

TROUBLESHOOTING

Troubleshoot your problem by using the chart below. If the toaster oven still does not work properly, contact W Appliance Co. customer service center or the nearest authorized service center. Customers must never troubleshoot internal components.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Appliance does not turn on	Appliance is not plugged in	Check that appliance is plugged into a working outlet



©, WESTINGHOUSE, and INNOVATION YOU CAN BE SURE OF are trademarks of Westinghouse Electric Corporation. Used under license by W Appliance Company. All Rights Reserved.