



ITEM #1000 047 962
ITEM #1000 047 963
MODEL: KD Column
KD Fleur de Lis

Use and Care Guide KD Chiminea

PACKAGE CONTENTS

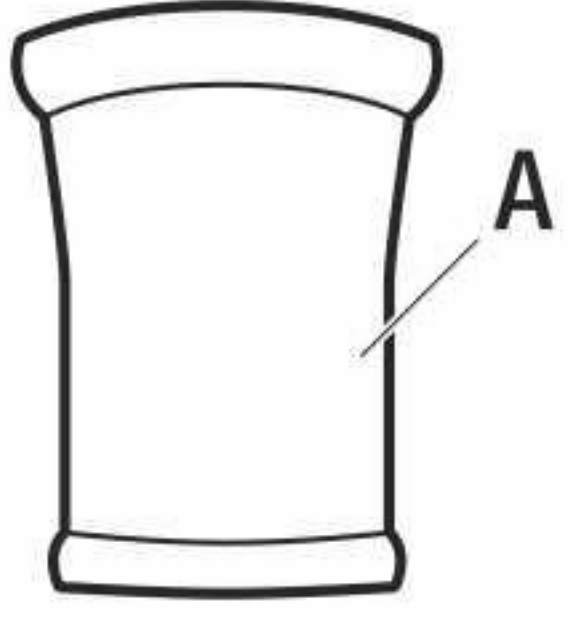

A – Clay Chimney

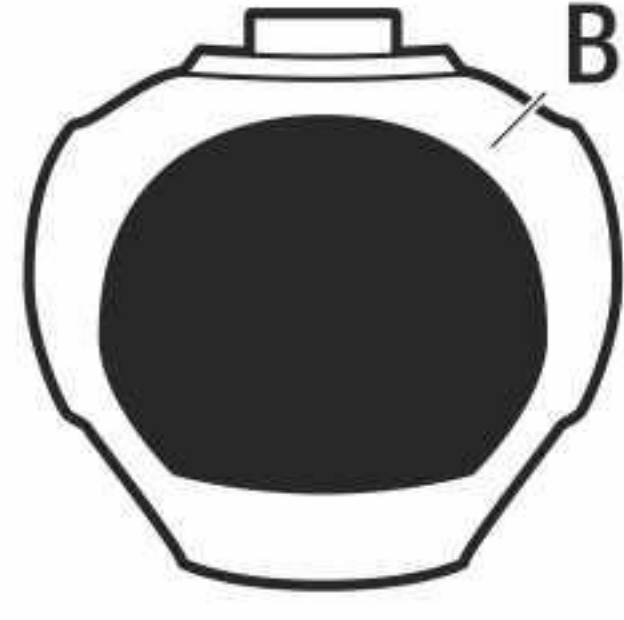

B – Clay Body



C - Stand


PREPARATION

Make sure all parts are present. Compare parts with the Package Contents list. If any part appears missing or is damaged, do not assemble or use this product. Contact Customer Service.

Assembly

1 Assembling the chiminea

- Find a level surface on which to place your chiminea. Inspect and clear the area around the chiminea of any combustible materials.
- Place the clay body (B) in the metal base (C) so that the ridge along the bottom diameter of the body rests on the top of the base. Then place the clay chimney (A) on top of the clay body (B).

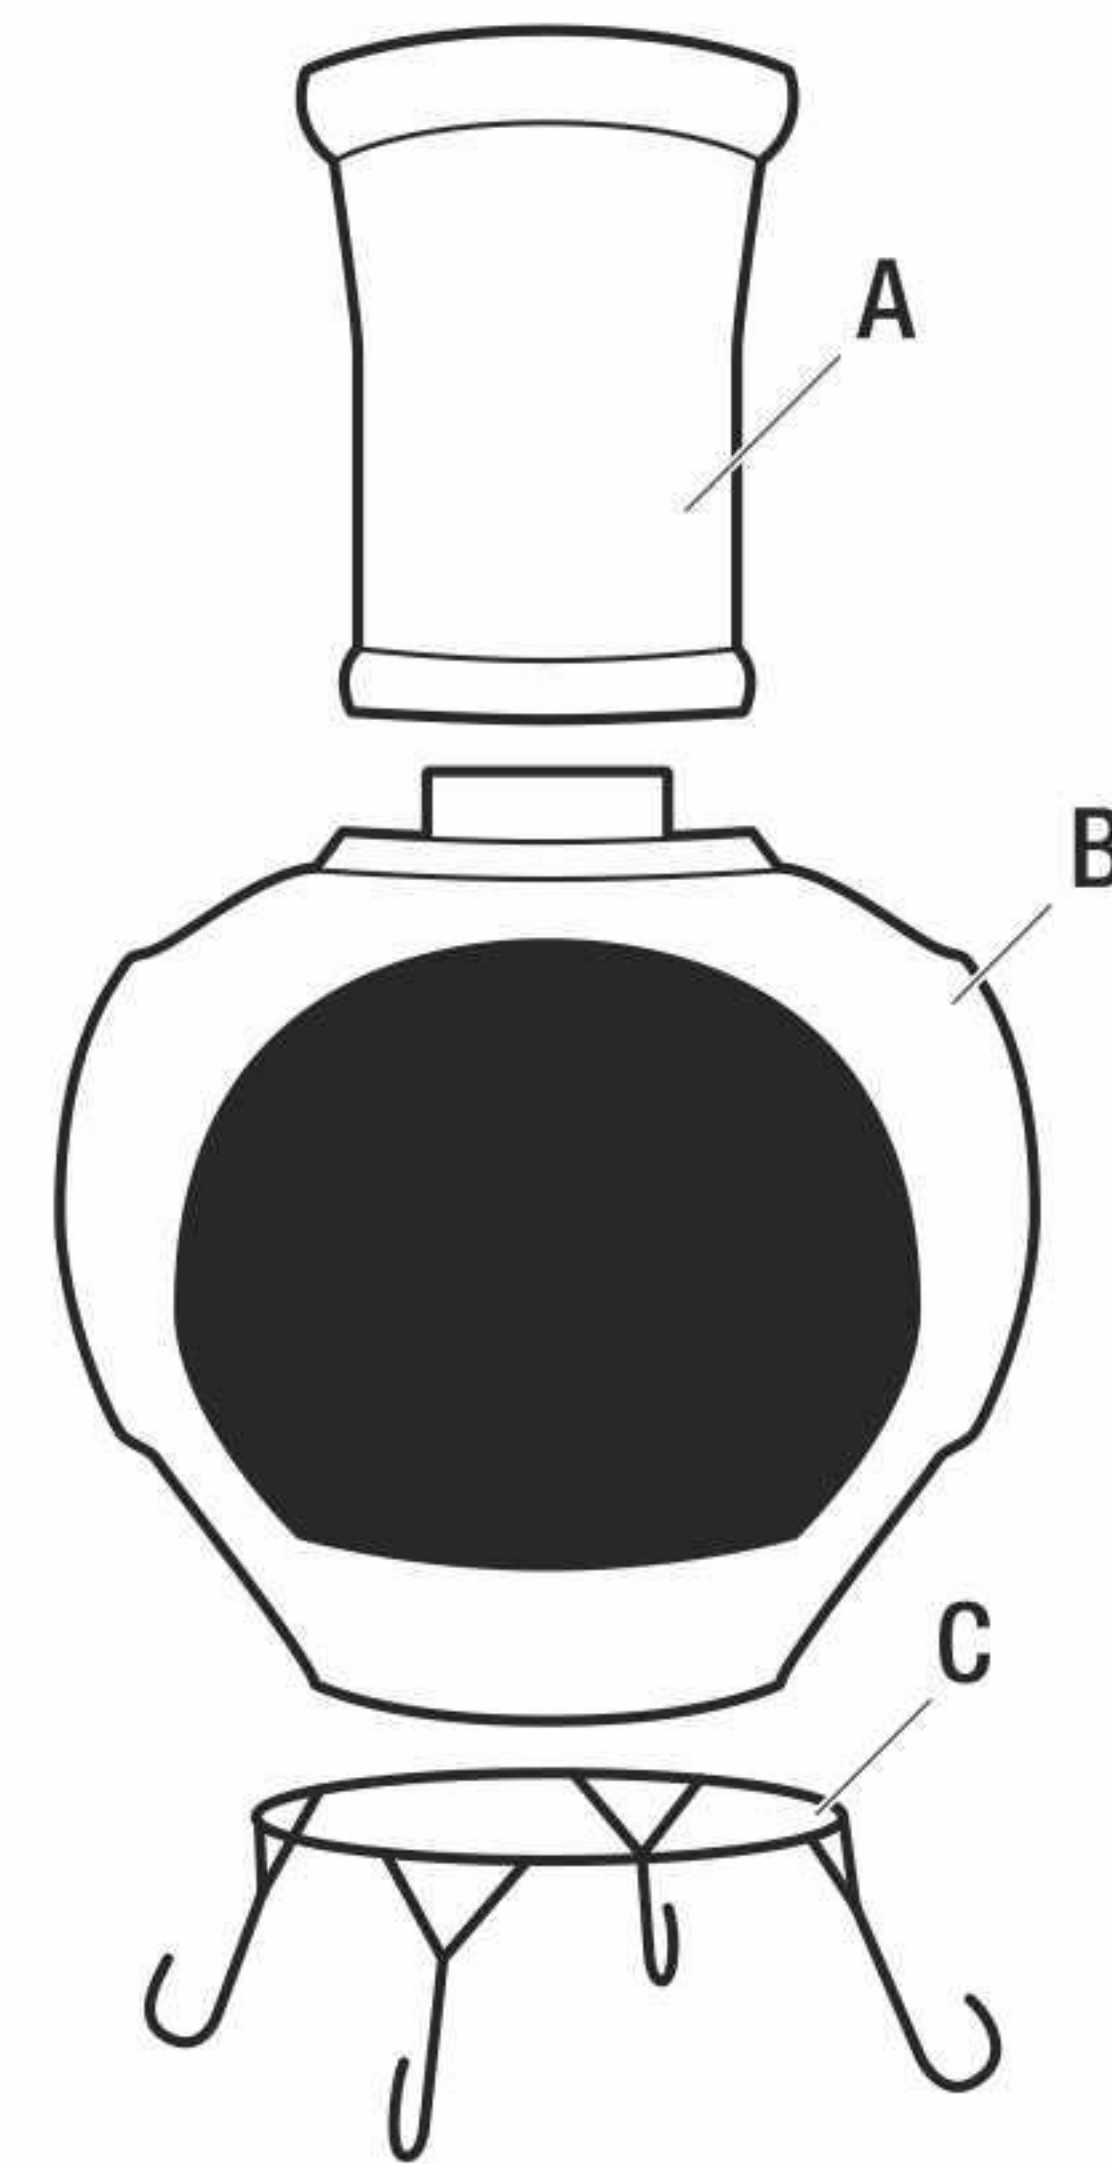

Safety Information

Before lighting your chiminea, read and understand all instructions in this manual.



WARNING: READ THIS MANUAL CAREFULLY AND COMPLETELY BEFORE USING YOUR CHIMINEA TO REDUCE THE RISK OF FIRE, BURN HAZARD, OR OTHER INJURY.



WARNING: FOR OUTDOOR USE ONLY.



WARNING: You must follow the information in this manual EXACTLY. If not, a fire may result, causing property damage, personal injury, or loss of life.



WARNING: Do not store gasoline or other flammable vapors and liquids in the vicinity of this chiminea.



WARNING: When lighted, the chiminea has very hot surfaces. Use heavy duty gloves when handling/tending to your chiminea.



WARNING: After starting a fire, use caution.



WARNING: Keep a minimum of 6 ft. distance around your chiminea from any combustible material, walls, furniture, etc..



WARNING: Do Not use indoors or in a covered patio or near any tree, branches, awnings, umbrellas, etc.



WARNING: Place your chiminea in an open area with no obstruction above of the chiminea.



WARNING: Always keep a fire extinguisher within reach.



WARNING: Do not use lighter fluid, gasoline, kerosene or any other combustible material.



WARNING: Use heavy duty gloves when handling/tending your chiminea.



WARNING: Never leave your chiminea unattended until fire is completely out.



WARNING: Do not leave children alone or unattended in an area where the chiminea is being used. Never allow children to sit on, stand, or play around the chiminea while hot. This also applies to pets.

FOR BEST RESULTS AND TO AVOID CRACKING

- Do not use your chiminea when wet, ONLY when dry.
- Do not use sand, silica sand, or soil in the base of the chiminea or any material that will retain moisture. The use of a metal grill is recommended.
- Do not allow the chiminea to be watered by sprinklers.
- Start a small fire slowly to allow time for the clay to expand and to avoid cracking. Continue to build your fire when the clay heats up. This process can take 15-20 minutes.
- Large fires will crack your chiminea. Never build a fire so large that it comes out of the front or top of the chiminea.
- Store your chiminea indoors out of freezing temperatures.
- Position your chiminea on a solid level surface to avoid tipping.
- Do not fire your chiminea on wooden decks.
- DO NOT put the fire out with water –THIS WILL CRACK YOUR CHIMINEA.