




# Upright Freezer

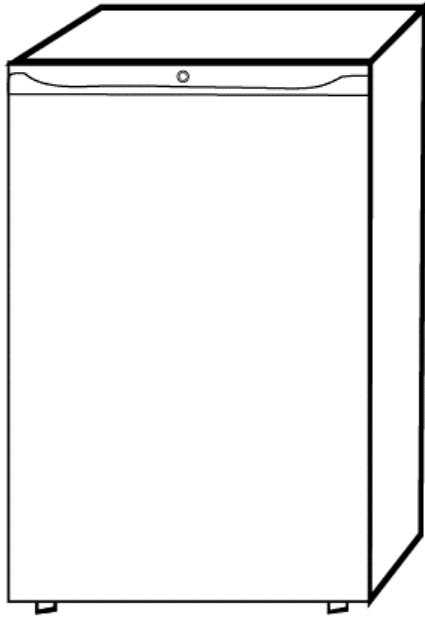

**Model: UF-311W/ UF-311S**

## USER'S MANUAL



## Dear customer:

Thank you for buying the SPT upright freezer. To ensure that you get the best results from your new freezer, please take time to read through the simple instructions in this booklet.

Please ensure that the packing material is disposed of in accordance with the current environmental requirements.

When disposing of any Freezer equipment please contact your local waste disposal agency for advice on safe disposal.

This appliance must be only used for its intended purpose. Use caution to ensure that children do **not** play with or on the appliance.

### CHIEF TECHNICAL DATA

MODEL	UF-311W/ UF-311S
Electric shock Protection	I
Climate type	ST
Volume (L)	85
Rated Voltage (V)	115
Rated Frequency (Hz)	60
Rate Current (A)	1.4
Refrigerant (g)	R134a 80g
Foaming Agent	Cyclopentane
Weight (kg)	64 lbs
Dimension (width/depth/height)	22.3 W x 22.7 D x 34.6 H in

## INSTALLATION

### APPLIANCE PLACEMENT

Place the **freezer** in a location with a firm base. To prevent vibration and noise, level the freezer by adjusting the unit's front feet.

Choose a well-ventilated location, with a minimum of **4-inches** clearance around the freezer.

Keep freezer away from direct sunlight and heat sources such as an oven or boiler.

For your safety, please read the following information

**Warning: This appliance must be grounded. Do not use a plug adapter or extension cord.**

### **USE OF THE APPLIANCE**

Before plugging in your freezer for the first time, please remove all packaging materials and clean the unit with lukewarm water. Wipe dry with soft cloth. Let the unit stand upright for at least 4-hours prior to plugging in.

### TEMPERATURE CONTROL

The temperature inside the unit can be adjusted with the thermostat knob located inside the freezer. Knob settings range from 1 to **6** (5°F to -11°F), with 6 being the coldest setting. Unit is shipped with temperature set at **“3”**.

When using the freezer for the first time or after defrosting, set the temperature control to **6** for at least two hours before placing food inside the unit.

**NOTE:**

- Turning the temperature control to "OFF" position stops the cooling cycle but does not shut off the power to the freezer.
- If the unit is unplugged, loses power, or is turned off; you must wait 3 to 5 minutes before restarting the unit. If you attempt to restart before this time delay, the freezer will not start.
- Turning the temperature control to "6" position may cause the compressor continually run and not shut off.

**STORING FROZEN FOOD**

Follow the storage recommendations printed on the packaging of your frozen food.

**STORING FRESH FOOD**

Ensure that your freezing operations are carried out under the most hygienic conditions, as freezing alone does not sterilize the food. It is suggested to freeze the food by packing it into separate meal portions and not in bulk form. Never put hot or warm foods and items into the freezer. Prior to storing, pack items in suitable plastic bags, aluminum sheets or freezing containers

## DEFROSTING

Remove the power plug from the wall socket, open the door and transfer all contents to another refrigerating unit or a cool place. Defrost using a plastic scraper, or allow the frost to melt naturally. Wipe away the remaining ice and water. To continue operations after defrosting follow the instructions under USE OF THE APPLIANCE.

Note: To avoid damage to the freezer and to your storage containers never use any sharp objects to remove frost or to separate frozen items.

## CLEANING

Before cleaning the freezer, remove the power plug from the power supply and allow the unit to defrost as described in the DEFROSTING section.

Mix baking soda and lukewarm water, clean unit with a soft cloth or sponge soaked in this solution. Wipe dry with a soft cloth.

Do not use cleaning waxes, concentrated detergents, bleach or cleaners containing petroleum on plastic and rubber parts. Do not use paper towels, window sprays, scouring cleansers or flammable fluids on the plastic parts as these can scratch or damage the material.

## TROUBLESHOOTING

### **The freezer is not turning on:**

- Check if plug is inserted correctly and firmly into the wall socket
- Check if there is power to the wall socket by plugging in another appliance.
- Check ambient temperature and control setting.

### **The freezer is noisy when running:**

- Check if the freezer is leveled or in contact with another appliance or furniture.

### **The freezer does not cool sufficiently**

- If the door has been opened frequently, or it has been left open for a while it will take time for the freezer to reach its set temperature.
- Make sure there is sufficient clearance around the unit.
- The freezer is overfilled or the ambient temperature is high.

### **The following characteristics are normal and should not be looked upon as a problem.**

- A gentle tricking (water) sound caused by coolant flowing through the pipe.
- Compressor operating at high temperature.

## PROLONGED OFF PERIODS

If the freezer is not to be used for a long period of time, please disconnect unit from main power supply. Clean and dry the inside as instructed.

Leave the door ajar to prevent any mold and mildew build up.

## **Your Guarantee**

If this product is found to be faulty as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired free of charge.

This guarantee is subject to the following terms:

- Sunpentown must be notified of the fault.
- Proof of purchase must be presented to Sunpentown's nominated representative.
- The warranty will be void if the product is modified, misused or repaired by an unauthorized person.
- The warranty after repair will not be extended beyond the original one-year period.
- All replacement parts will be new or reconditioned.
- Parts, which are replaced, become the property of Sunpentown.
- The warranty applies for the use of the product in the USA only.

What is NOT COVERED:

- Warranty does not include freight charges.
- Incidental or consequential damage caused by possible defects with this product.
- Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature.
- Failure of product resulting from unauthorized modifications to the product.
- Improper installation or failure to perform the necessary maintenance.

This GUARANTEE is in addition to your Statutory Rights

**SUNPENTOWN INTERNATIONAL INC.**

21415 Baker Parkway, City of Industry, CA 91789-5236

Tel: 909-468-5288 · Fax: 909-468-5279 · [service@sunpentown.com](mailto:service@sunpentown.com) ·

[www.sunpentown.com](http://www.sunpentown.com)