

ASSEMBLY

INSTRUCTIONS

CAUTION: IMPORTANT SAFETY INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupter (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- This seasonal use product is not intended for permanent installation or use.
- **When decorating trees, use miniature light bulb strings or LED light strings only. "C" size bulbs are not recommended.**
- Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- **CAUTION:** This is an electrical product– not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
- Do not let lamps rest on the supply cord or any wire.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from cord, wire or light string.
- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- Never operate this product if the power cord or plug is damaged.
- Use only manufacturer specified replacement bulbs.
- Read and follow all instructions that are on the product or provided with the product.

USE AND CARE INSTRUCTIONS

- When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.

 
 
Retain carton for storage purposes.

Each carton contains one top section, one bottom section and a tree stand.

1. Unfold the tree stand and insert the eye bolts. Insert bottom section pole into tree stand making sure it is seated properly (Figure 1). Tighten eye bolts until bottom section is held securely.
2. Insert the middle section of the tree into the bottom section.
3. Plug the light string cords from the bottom section to the middle section. Attention! There are two different strings for, cord with Red tag should be plugged together, and cord without tag should be plugged together.
4. Insert the top section of tree into the upper most part of middle section. Plug the light string cord of the top section into the receptacle of the middle section light strings with separate two.
5. Final step is branch shaping. All hinged branches should fall into lowered position during assembly. Any branches that remain upright should be gently lowered by hand (see Figure 3 and 4). Please refer to Shaping Instructions for proper branch shaping technique.


STORAGE

Remove all holiday decorations. Gently press tips back into center branch. Raise all branches to original upright position taking care not to place undue pressure on the attached ends of the branches. When disassembling tree, a twisting motion will help to separate the sections from each other. All tree parts can be replaced in carton and should be stored in a cool, dry place.



BULB REPLACEMENT INSTRUCTIONS

 
1. **Unplug** light string from power source.
2. Pull up on the Bulb Lock (if equipped) unlatching the bulb from the bulb socket. Gently pull the bulb straight out (Figure 1).
3. Before inserting the new bulb into socket, make sure that the two wires on either side of the the bulb base are straight up and flush with the base (diagram at right).
4. Carefully insert new bulb into socket and push down Bulb Lock (if equipped) until it snaps into place (Figure 2).



FUSE REPLACEMENT

INSTRUCTIONS-US ONLY

 1. **Unplug** light string from power source.
2. Fuses are located in light string plug. Slide the fuse access cover away from cord side (in direction of arrow, Figure 1) exposing fuses.
3. Remove fuses from compartment and examine. Replace burnt out fuse with new one.
4. Close fuse compartment by sliding access cover back in towards cord side of plug (Figure 2).



SHAPING INSTRUCTIONS

Shaping the tree branches is the last step of assembly. The care and attention given to this final process will result in a genuinely beautiful and appealing holiday centerpiece.

1. Every tree style is shipped from the factory with the tips of each branch compressed to the center (Figure 1).
2. Each branch tip must be shaped to it's proper position to give the tree a natural look. This is done by gently grasping the left and right wing tips and spreading them out away from the center tip (Figure 2).
3. Each individual tip should then be spread out separately. Tips should then be bent slightly upward to add a more natural looking appearance. Figure 3 shows a typical tree branch after shaping.

Branch tips should be carefully pressed back toward center tip when tree is disassembled for storage in original carton.



SAVE THESE INSTRUCTIONS