 


PORTABLE INFRARED HEATER

with Remote Control

OWNER'S MANUAL

Model No. CZ2011P

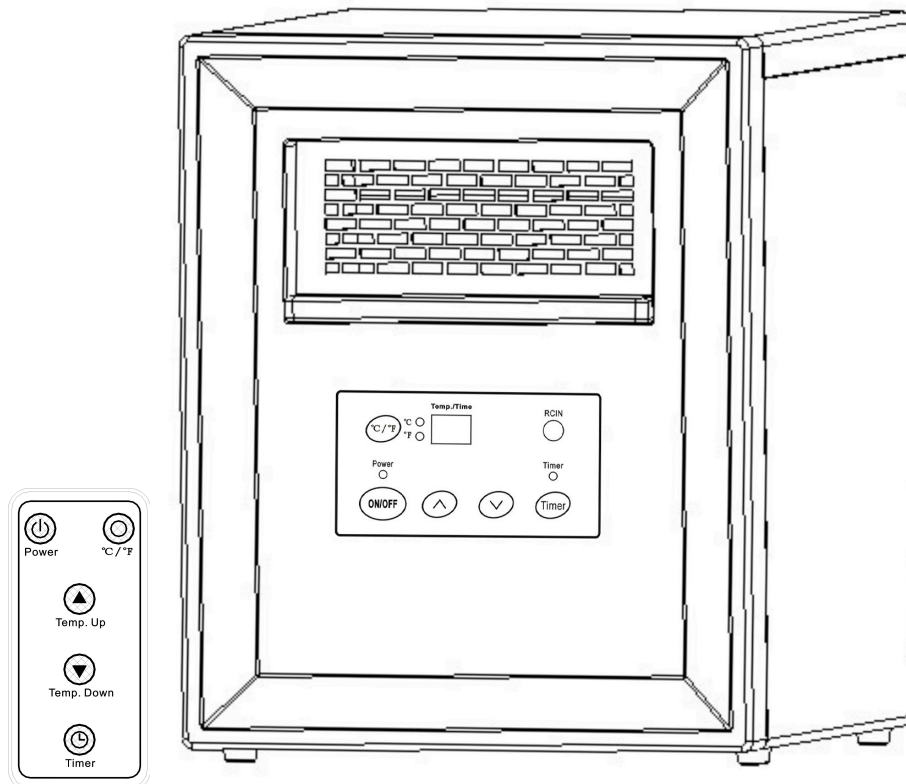

PLEASE SAVE THESE INSTRUCTIONS

WARNING: READ THIS OWNER'S MANUAL CAREFULLY BEFORE USE.

Thank you for choosing a Comfort Zone® Infrared Heater. This owner's manual will provide you with valuable information necessary for the proper care and maintenance of your new product. Please take a few moments to thoroughly read the instructions and familiarize yourself with all the operational aspects of your new heater.

IMPORTANT INSTRUCTIONS

When using this electric unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read ALL instructions before using this unit.
2. CAUTION: Risk of Electric Shock. DO NOT open or try to repair the heater yourself.
3. This heater may get hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces.
4. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 3 ft from the front of the heater and keep them away from the sides, top, and rear. DO NOT place towels or other objects on the heater.
5. Extreme caution is necessary when any heater is used by or near children or the disabled, or when the heater is left operating and unattended.
6. DO NOT operate any heater with a damaged cord or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. NEVER locate heater where it may fall into a bathtub or other water container. To protect against electrical hazards, DO NOT immerse in water or other liquids.
8. DO NOT touch the control panel or plug with a wet hand.
9. DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
10. DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
11. To prevent a possible fire, DO NOT block the air intakes or exhaust in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
12. A heater has hot and arcing or sparking parts inside. DO NOT use in areas where gasoline, paint, explosive and/or flammable liquids are used or stored. Keep unit away from heated surfaces and open flames.
13. Always plug heaters directly into a wall outlet / receptacle Never use with an extension cord or relocatable power tap(outlet/power strip)
14. To avoid fire or shock hazard, plug the unit directly into a 120 V AC electrical outlet.
15. To disconnect heater, turn controls to OFF, then remove plug from outlet. Pull firmly on the plug, DO NOT unplug by pulling on the cord.
16. Always unplug the unit before moving or cleaning, or whenever the heater is not in use.
17. Use only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by unauthorized dealers may cause hazards.

18. Always use on a dry, level surface. Use on floor only.
19. DO NOT use outdoors.
20. WARNING: To reduce the risk of fire or electric shock, DO NOT use this unit with any solid-state speed control device.
21. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. Qualified personnel should perform all servicing only.
22. Connect to properly grounded outlets only.
23. Save these instructions.

SPECIFICATIONS

Voltage Rating	120 V (60Hz)
Power Consumption	1000W
Unit Size	11.0 in. (W) x 13.0 in. (D) x 13.7 in. (H)
Unit Weight	11.9 lbs

 
SAFETY FEATURES

Tip-Over Safety Feature

This heater is equipped with a tip-over safety feature. Once the heater is tipped over, an internal switch will automatically shut the heater off. Once the heater is restored an upright position, the heater will reset. To continue operation, turn on the heater using the supplied remote control or the control panel on the heater.

Overheat Safety Feature

This heater is equipped with a overheat safety feature. When the heater's internal components reach a certain temperature that could cause overheating or possible fire, the heater will automatically shut off.

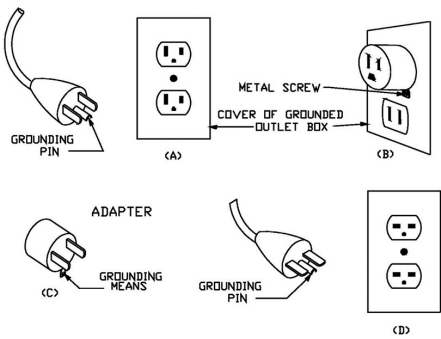



WARNING: This heater has a voltage rating of 120 volts. The cord has a plug as shown in A. An adapter as shown in C is available for connecting three-blade grounding-type plugs to two-slot receptacles. The grounding lug extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box. The adapter should not be used if a three-slot grounded receptacle is available. DO NOT DEFEAT THE SAFETY PURPOSE OF THE GROUNDED PLUG.

WARNING: It is normal for the power cord to feel warm to touch; however, a loose fit between the outlet and the plug may cause overheating of the plug. If this occurs, try inserting the plug into a different outlet. Contact a qualified electrician to inspect the original outlet for damage.

IN THE BOX

- INFRARED HEATER
- REMOTE CONTROL
- REMOTE CONTROL BATTERY
- INSTRUCTION BOOKLET

  
PRODUCT DIAGRAM

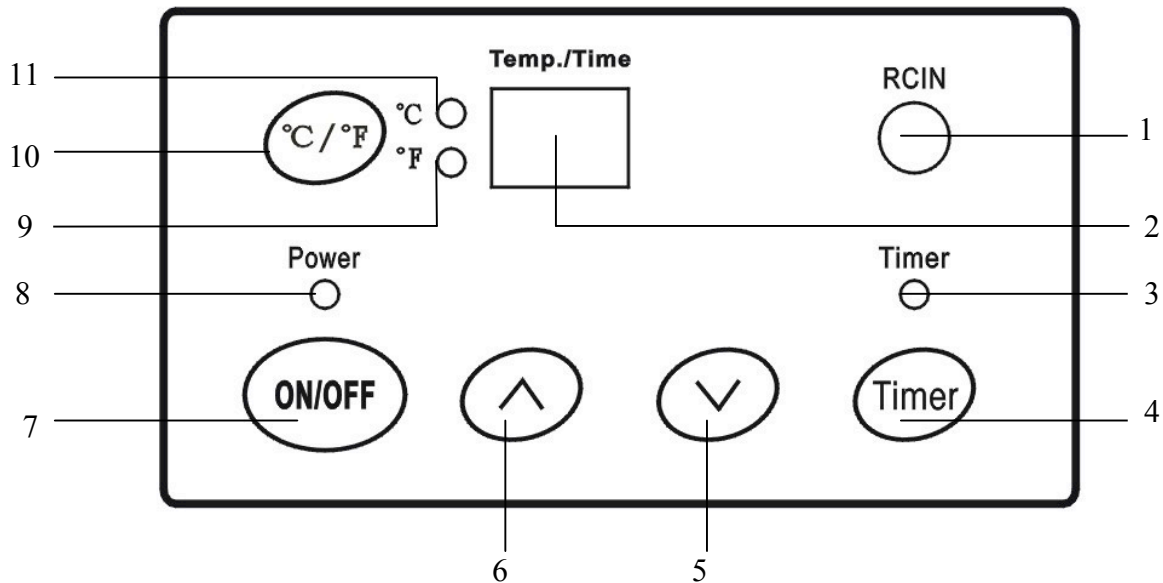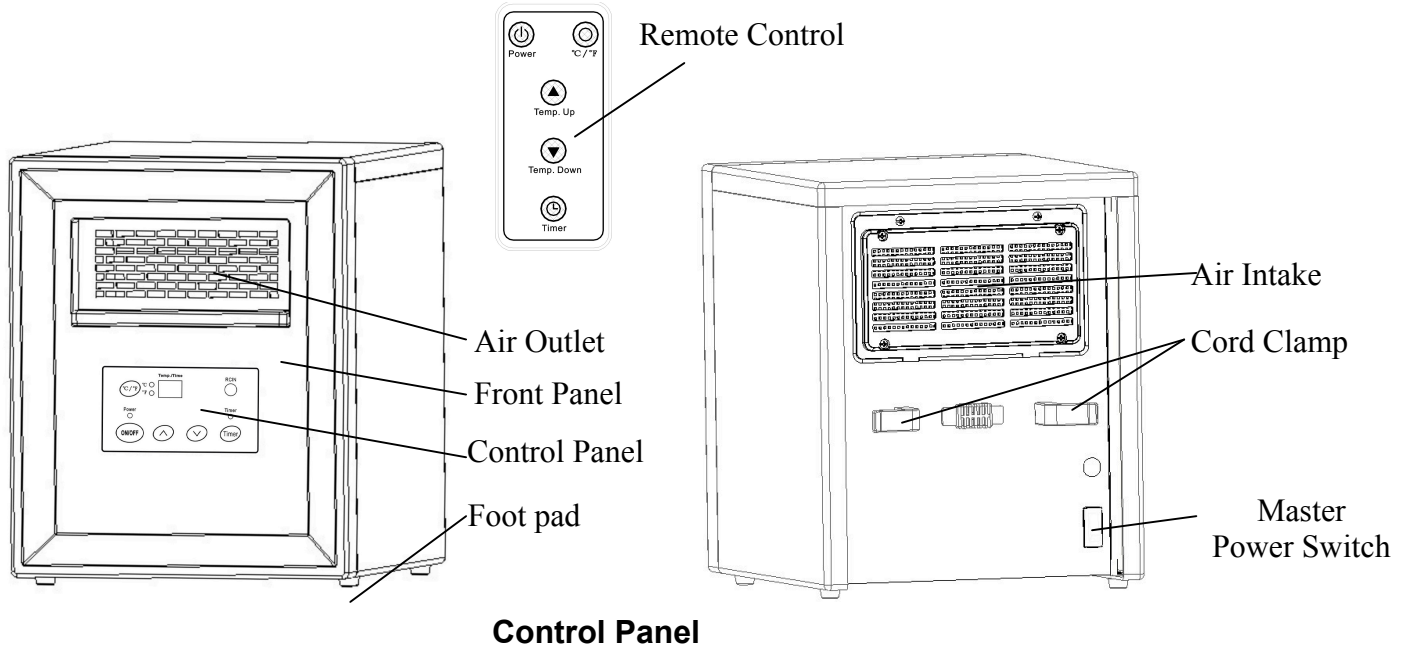

- 1、 Signal-receiving window: for receiving remote control signal.
- 2、 Digital display: indicate set room temperature and set timer value.
- 3、 Timer indication light: indicates when timer is functioning.
- 4、 Timer button: for setting timer function.

- 5、Temp down button: for setting temperature lower.
- 6、Temp up button: for setting temperature higher.
- 7、ON/OFF switch button: for power ON or OFF.
- 8、Power indication Light: indicate when the unit connects to power supply.
- 9、Fahrenheit indicator light.
- 10、°C/°F Button: Button to alternate between Fahrenheit and Celsius readout.
- 11、Celsius indicator light.

 
Remote Control

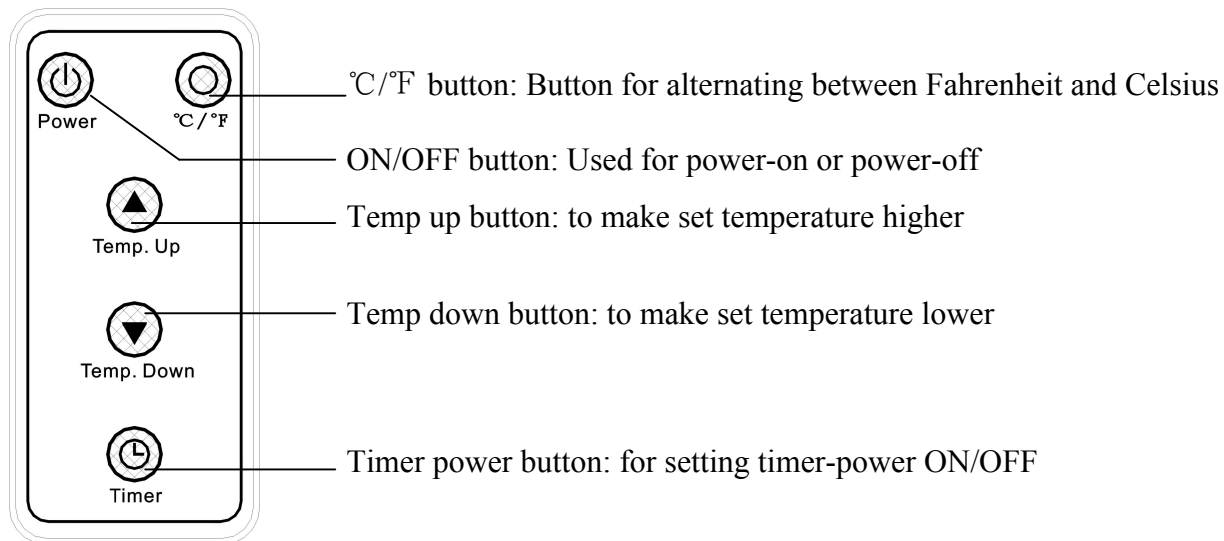

PREPARATION


Place the heater on a firm, level surface and plug into a grounded 120V 60Hz power outlet and turn on the power switch in the rear of the unit. Only operate heater in upright position.

 When using remote control, please pull out the battery saving insulating film as shown.

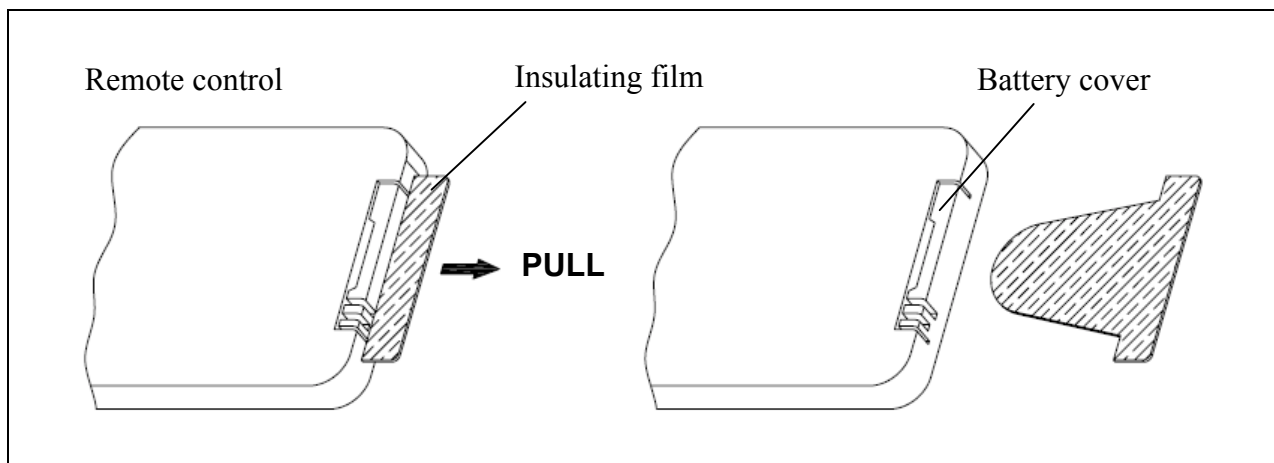


 
OPERATING INSTRUCTIONS

1、 Start

 
 

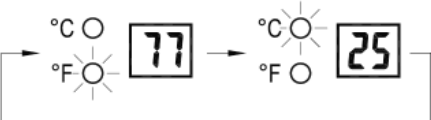 
 <p>ON/OFF Or Power</p>	<p>Turn on or off the heater by pressing the ON/OFF button on the control panel or by pressing the Power button on the supplied remote control.</p> <p>Once power is off, heating elements will stop working first. Fan will continue working for up to 3 minutes to dispense residual heat inside the heater. This is a normal function.</p>
--	---

2、 Setting control panel lock

For safety, users can lock the control panel so children can't operate the heater. Locking can be set in both power-on and power-off modes.

 

 

 <p>And</p>	<p>Press Temp Up and Temp Down buttons together for 3 seconds. Locking is confirmed when a buzzer rings. When locked, control panel and remote control will not function.</p>
 <p>And</p>	<p>To unlock, press Temp Up and Temp Down buttons together for 3 seconds. Unlocking is confirmed when a buzzer rings. Lock indication disappears. Control panel and remote control return to normal function.</p>

3、 Setting room temperature

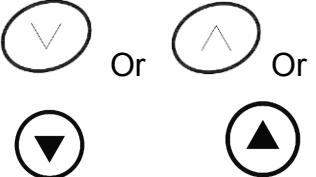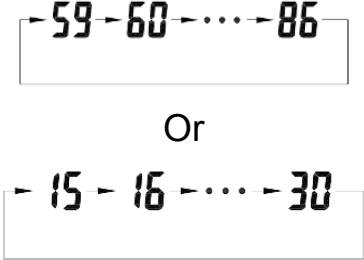 <p>Temp. Down Or Temp. Up</p>	<p>Adjust the thermostat by pressing the arrows on the control panel or remote control.</p>
 <p>Or</p>	<p>Set temperature indication varies from 59°F to 86°F or from 15°C to 30°C. Once you have chosen the desired temperature, the heater will remain on until the room temperature increases to the temperature on the digital display. The heater will cycle on and off to maintain the desired room temperature.</p>
 <p>Or °C/°F</p>	<p>Press °C/°F button to change the digital display indicator to Fahrenheit value or Celsius value.</p>
	<p>When Fahrenheit indicating light is on, digital display indicates Fahrenheit value, when Celsius indicating light is on, digital display indicates Celsius value.</p>

 

 

4、 Setting timer-power-off

Note: timer-power-off function can only be set while heater is in power-on mode.

 Or 	<p>When starting the unit, press the timer button on the control panel or remote control.</p>
	<p>Digital display turns set temperature readout to time value for the timer. Press the timer button repeatedly, the value will vary from 0 hour to 12 hour duration (in 1 hour intervals).</p>
<p>Timer</p> 	<p>The light is on when timer –power-off is set.</p>

5、 Setting timer-power-on


Note: timer-power-on function can only be set while heater is in power-off mode.

 Or 	<p>Under power-off, press the timer button on the control panel.</p>
	<p>Digital will indicate time value for the timer. Press the timer button repeatedly, the value will vary from 0 hour to 12 hour duration (in 1 hour intervals).</p>
<p>Timer</p> 	<p>The light is on when timer –power-on is set.</p>


MAINTENANCE

1. Turn off the power switch in the rear of the unit.
2. Unplug the unit and let it cool completely.
3. To keep the heater clean, the outer shell may be cleaned with a soft, damp cloth. You may use a mild detergent if necessary. After cleaning, dry the unit with a soft cloth. CAUTION: DO NOT let liquid enter the heater.
4. DO NOT use alcohol, gasoline, abrasive powders, furniture polish, or rough brushes to clean the heater. This may cause damage or deterioration to the surface of the heater.
5. DO NOT immerse the heater in water.
6. Wait until the unit is completely dry before use.

 7. Air filter should be cleaned after use for 3 months or if it appears to be blocking airflow. With heater unplugged, remove 2 assembly screws as illustrated below. With filter assembly removed, remove 4 filter screws. Clean all parts of filter assembly. Allow parts to completely dry.
8. Reassemble filter and then attach to heater. **WARNING:** Do not use heater with without filter assembly in place.

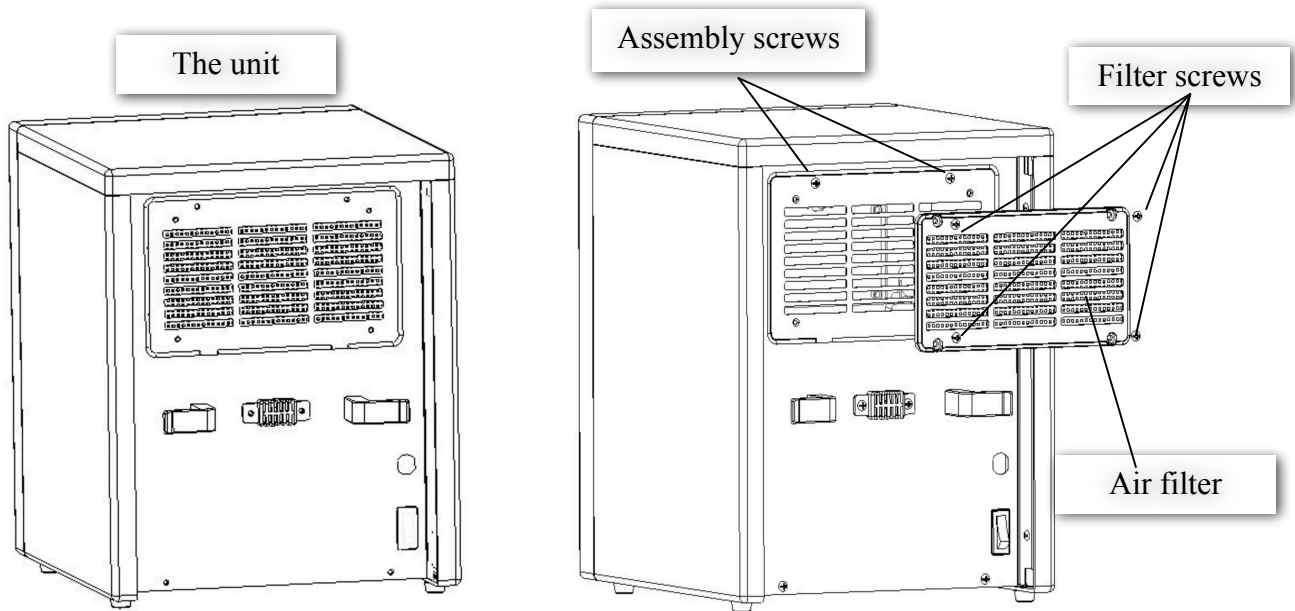

 9. If you won't use the heater for a long time, take battery out of remote control according to the below steps and store for future use.

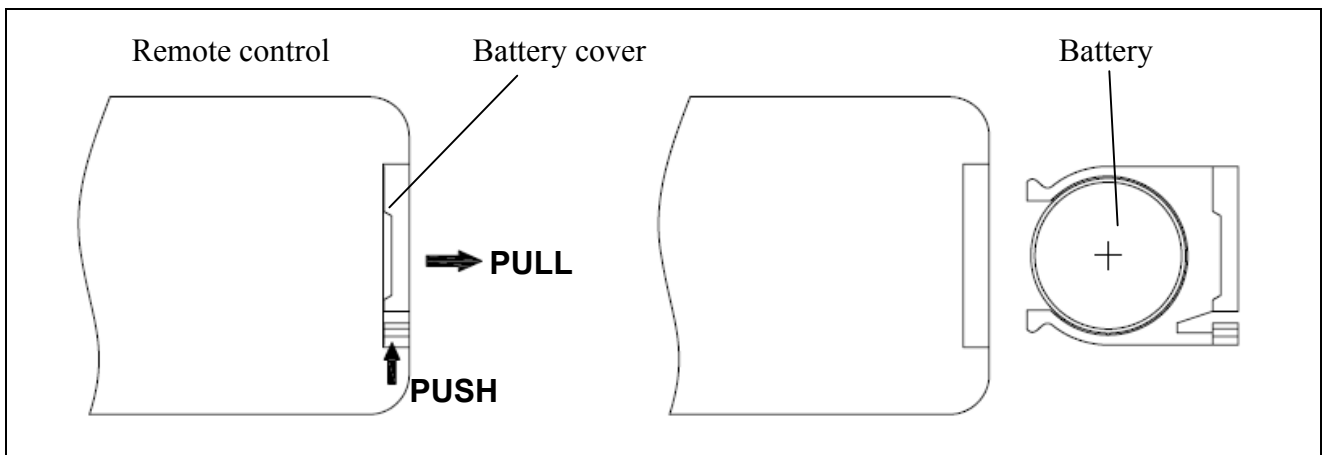

STORAGE

Store the heater in a cool, dry location when not in use. To prevent dust and dirt build-up, use the original packaging to repack the unit.

TROUBLESHOOTING

If the heater will not operate, please check the following before seeking repair of service:

1. Check if the power cord is plugged into an electrical outlet, if not, plug in.
2. Check if electricity to the main fuse is working.
3. Check if the battery in remote control is not dead and if the insulating film is pulled out.

NOTE: The heater may not operate if the thermostat is set lower than the room temperature. To begin operation, raise the thermostat temperature setting.

LIMITED WARRANTY

Products manufactured by Comfort Zone® are warranted to the original consumer to be free of defects in material and workmanship for twelve (12) months from the original date of purchase. The warranty does not cover products modified outside our factory, damage or failure caused by acts of God, abuse, misuse, abnormal usage, faulty installation, failure to follow suggested maintenance procedures enclosed with this product (as defined by Magnuson-Moss Warranty-Federal Trade Commission Improvement Act) This unit is guaranteed to the original retail purchaser against defects in quality or workmanship for a period of one year from the date of original purchase. If this unit fails because of a manufacturing defect within 30 days of purchase, return the unit, with your receipt, to the retailer. After 30 days, but within the warranty period, if the unit was purchased within the continental United States, return it, freight prepaid, to Comfort Zone® for repair or replacement. If the unit was purchased outside the continental United States, return the unit to the place of purchase. This warranty does not cover damage due to accidents, operation on other than 120 volts, 60 hertz, AC. current, or any other abuse. All implied warranties, including the warranties of merchantability and of fitness of purpose, if applicable, are hereby limited in duration to the period of one year from the date of original retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Incidental or consequential damages arising from a breach of either express or implied warranties are hereby disclaimed and excluded. Some states do not allow the exclusion of limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No informal dispute settlement mechanisms are available. This limited warranty is given in lieu of all other warranties.

Manufactured by:

Comfort Zone®

324A Half Acre Rd.

Cranbury, NJ 08512 USA

800-221-6895

www.comfortzoneheaters.net