


EXPLODED VIEW & REPLACEMENT PARTS LIST

For replacement parts or the nearest service center, call toll free 1-877-841-

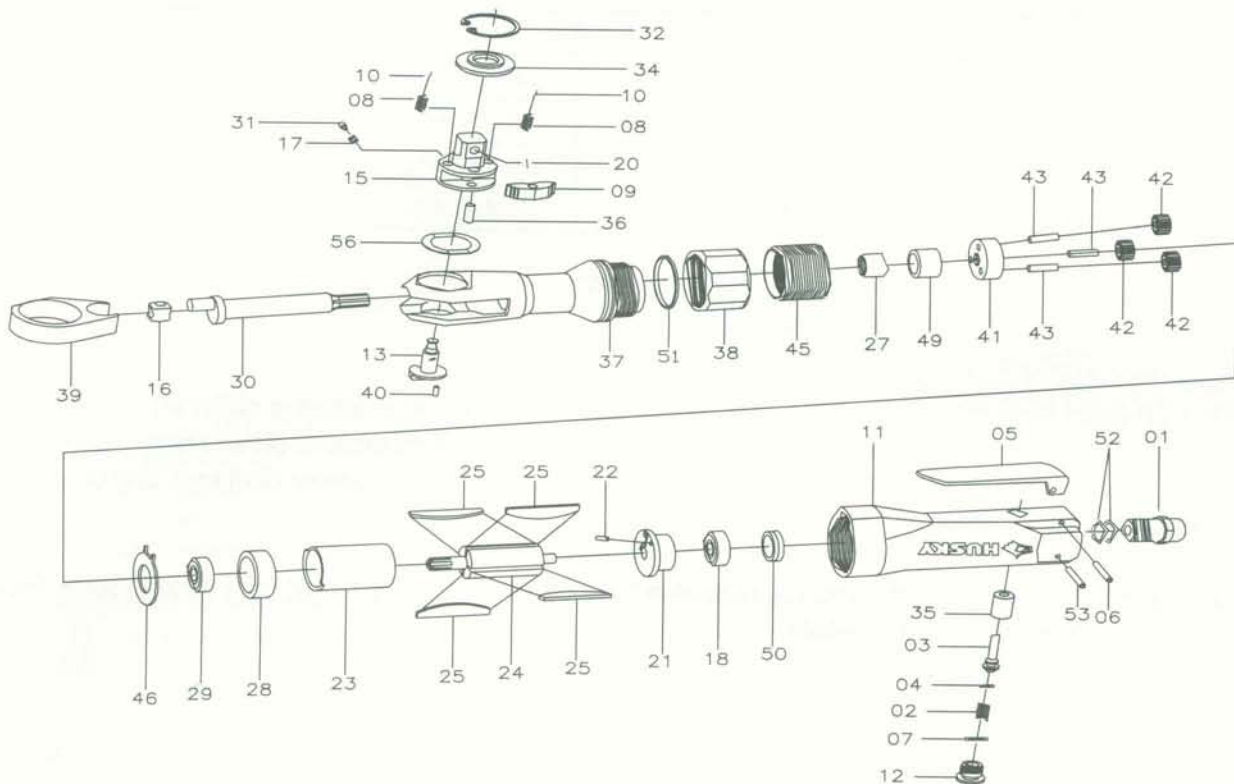

Ref. #	Part No.	Description	Qty	Ref. #	Part No.	Description	Qty
1	HSTC-AI-12-40	Air Intet	1	28	HSTC-AR38-28	Front Plate	1
2	HSTC-AR38-02	Throttle Spring	1	29	HSTC-BB-06082	Ball Bearing	1
3	HSTC-AR38-03	Valve Stem	1	30	HSTC-AR38-30	Crank Shaft	1
4	HSTC-ORP-0032	O-Ring(3x2)	1	31	HSTC-AR38-31	Crank Cap	1
5	HSTC-AR38-05	Trigger	1	32	HSTC-RTW-029	Internal Stop Rin (R29)	1
6	HSTC-SP-25240	Spring Pin(2.5x24)	1	34	HSTC-AR38-34	Trust washer	1
7	HSTC-ORP-0080	O-Ring(P8)	1	35	HSTC-AR38-35	Valve Bushing	1
8	HSTC-AR38-08	Friction Spring	2	36	HSTC-NR-45128	Needle Roller	1
9	HSTC-AR38-09A	Pawl	1	37	HSTC-AR38HU-37	Ratchet Housing	1
10	HSTC-SB-005	Steel Ball	2	38	HSTC-AR38-38	Clamp Nut	1
11	HSTC-AR38HU-11	Housing	1	39	HSTC-AR38-39	Ratchet Yoke	1
12	HSTC-AR38-12	Throttle Plug	1	40	HSTC-SP-25060	Spring Pin(2.5x6)	1
13	HSTC-AR38-13	Reverse Button	1	41	HSTC-AR38-41	Idler Spindle	1
15	HSTC-AR38-15	Ratchet Anvil	1	42	HSTC-AR38-42	Idler Gear	3
16	HSTC-AR38-16	Drive Bushing	1	43	HSTC-NR-40148	Needle Roller	3
17	HSTC-AR38-17	Ratchet Spring	1	45	HSTC-AR38-45	Internal Gear	1
18	HSTC-BB-06262	Ball Bearing	1	46	HSTC-AR38-46	Exhaust Deffuser	1
20	HSTC-SB-006	Steel Ball	2	49	HSTC-AR38-49	Bushing	1
21	HSTC-AR38-2	End Plate	1	50	HSTC-AR38-50	Bearing Cap	1
22	1HSTC-SP-20060	Spring Pin(2x6)	1	51	HSTC-AR38HU-51	Washer	1
23	HSTC-AR38-23	Cylinder	1	52	HSTC-ORP-0120	O-Ring(P12)	2
24	HSTC-AR38-24	Rotor	1	53	HSTC-SP-30260	Spring Pin(3x26)	1
25	HSTC-AR38-25	Rotor Blade	4	56	HSTC-AR38-56	Washer	1
27	HSTC-AR38-27	Needle Bearing HK1212	1				