


# Exploded View and Parts List

## 3/8" Impact Wrench

Model No. HSTC4030

For replacement parts or the nearest service center, call  
toll free 1-877-841-9438

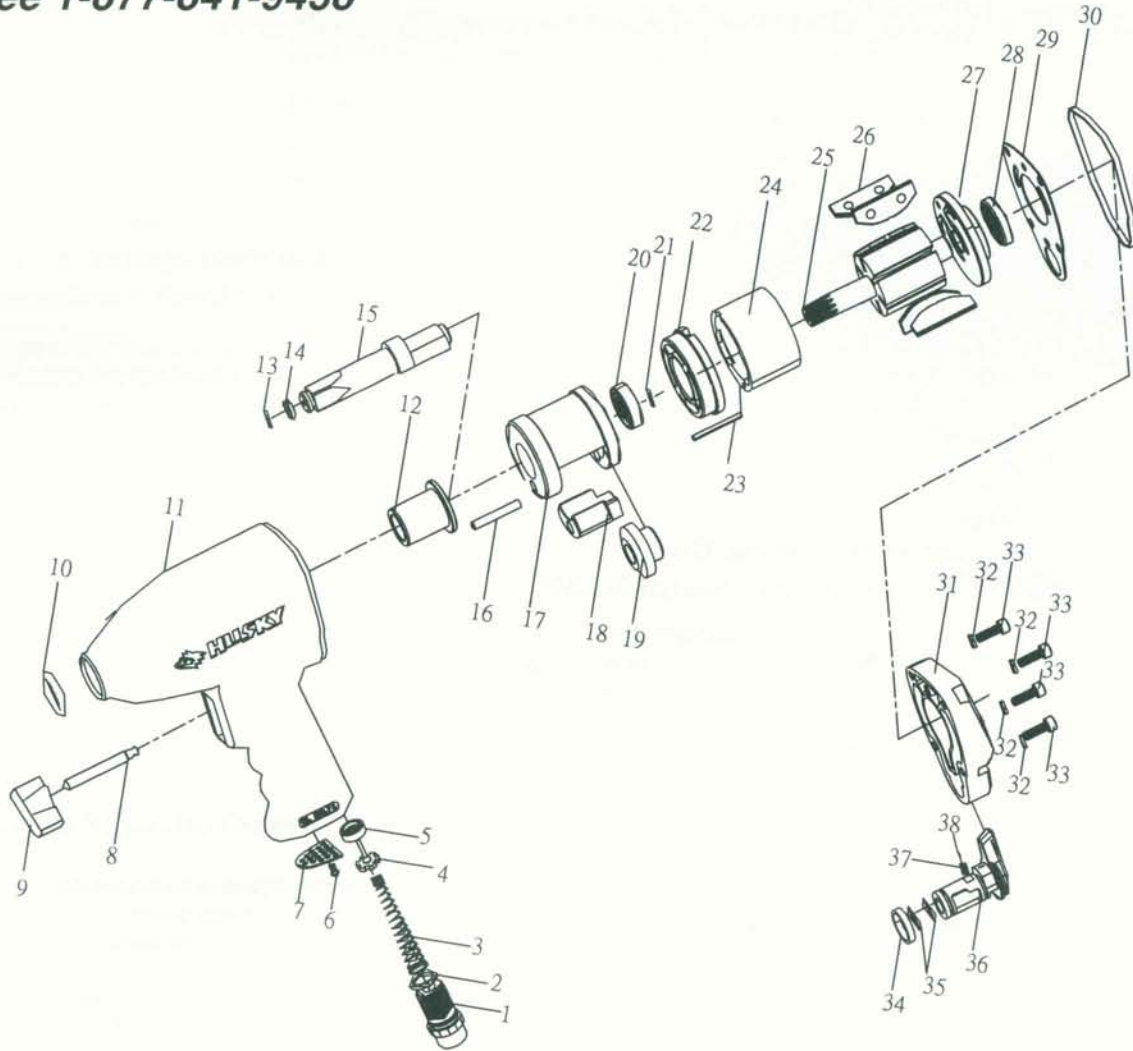

Ref. #	Part No.	Description	Qty	Ref. #	Part No.	Description	Qty
1	HSTC-AI12-01-TWTK	Air Inlet	1	20	HSTC-BB-6008	Ball Bearing6900ZZ	1
2	HSTC-ORP-0150A	O Ring(14x1.78)	1	21	HSTC-AI38HU-21	Washer	1
3	HSTC-AI38HU-03	Spring	1	22	HSTC-AI38HU-22	Front End Plate	1
4	HSTC-AI-12PM-34	Valve Stem	1	23	HSTC-AI38HU-23	Pin	1
5	HSTC-AI-12PM-33	Bushing	1	24	HSTC-AI38HU-24	Cylinder	1
6	HSTC-SS-0308A	Screw M3x6	1	25	HSTC-AI38HU-25	Rotor	1
7	HSTC-AI38HU-07	Exhaust Deflector	1	26	HSTC-AI38HU-26	Rotor Blade	6
8	HSTC-AI38HU-08	Valve Stem	1	27	HSTC-AI38HU-27	Rear End Plate	1
9	HSTC-AI150-03	Trigger	1	28	HSTC-BB-626Z	Ball Bearing626Z	1
10	HSTC-AI38HU-10	Oil Seal	1	29	HSTC-AI38HU-29	Gasket	1
11	HSTC-AI38HU-11	Housing	1	30	HSTC-AI38HU-30	Washer	1
12	HSTC-AI38HU-12	Anvil Bushing	1	31	HSTC-AI38HU-31	Rear Cover	1
13	HSTC-AI38HU-13	O Ring	1	32	HSTC-WW-0005	Washer(M5)	4
14	HSTC-AI38HU-14	Anvil Collar	1	33	HSTC-SS-0520	ScrewM5x1.23Px20	4
15	HSTC-AI38HU-15	Anvil	1	34	HSTC-AI38HU-34	Washer	1
16	HSTC-AI38HU-16	Hammer Pin	1	35	HSTC-ORP-0100	O Ring(ø10xø1.78)	2
17	HSTC-AI38HU-17	Hammer Cage	1	36	HSTC-AI38HU-36	Reverse switch	1
18	HSTC-AI38HU-18	Hammer Dog	1	37	HSTC-AI38HU-38	Spring	1
19	HSTC-AI38HU-19	Drive Cam	1	38	HSTC-SB-0035	Steel Ballø3.5	1