


ELECTRIC FIREPLACE MANTEL

OWNERS MANUAL

Model HYWN-23

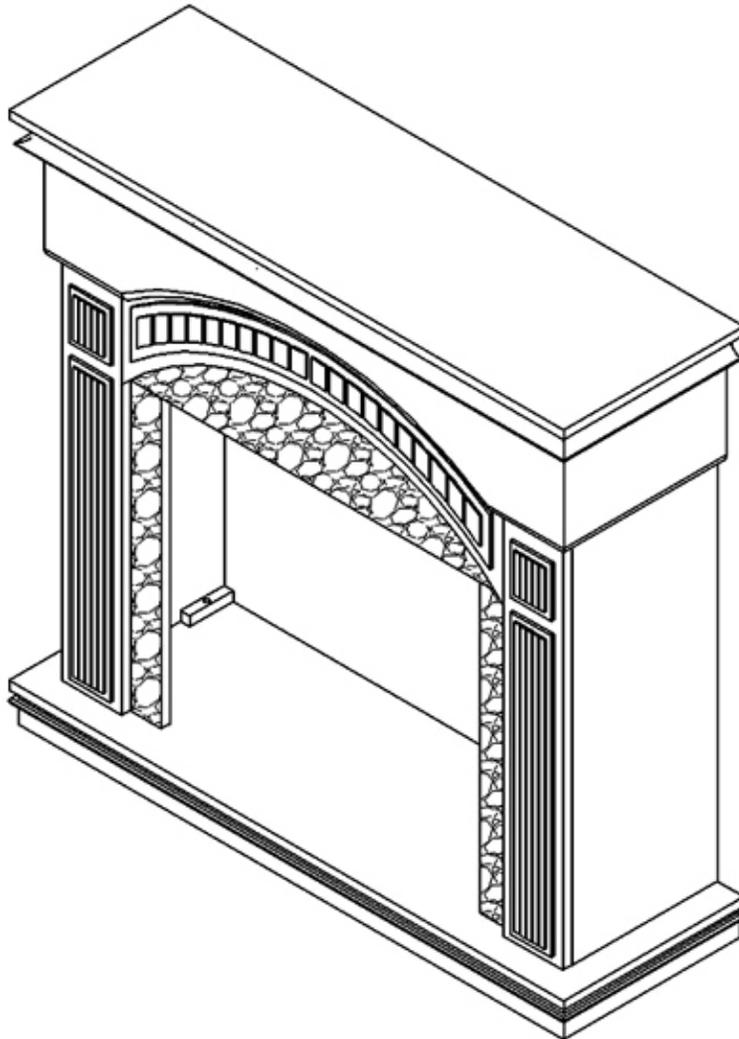

ONLY use this fireplace mantel and insert as described in this manual. Any other use is **not** recommended by the manufacturer, and may cause **fire, electric shock,** or other **personal injury**.



WARNING! Read and understand this entire owner's manual, including **all safety information, before plugging in or using** the insert. Failure to do so could result in **fire, electric shock, serious personal injury, or death.**



WARNING! INDOOR use only! NEVER use this product **outdoors!**

SAVE THESE INSTRUCTIONS!



CAUTION! Keep this owner's manual for future reference. If you sell or give this product away, make sure this manual accompanies this product.

IMPORTANT SAFETY INFORMATION!



WARNING



- **ALWAYS** keep **electric cords, home furnishings, drapes, clothing, papers, or other combustibles** at least **3 feet (0.9m)** away from the front of this insert, and away from the bottom, sides, and rear of this insert.
- **DO NOT** place the insert near a bed because objects such as pillows or blankets can fall off the bed and be ignited by the insert.
- **DO NOT COVER** this insert or **block** the air vents at all. Doing so could cause a **fire**.
- **AVOID fire or electric shock! NEVER** insert or allow any foreign objects to enter the ventilation or exhaust openings of this insert.
- **Prevent Fire!** Keep all **flammable liquids**, like gasoline or paint, away from this insert. This insert produces **arcing sparks** that **could ignite** flammable liquids.
- **DO NOT cover** this insert in any manner. Doing so could block the air flow and cause the unit to **overheat**, or could **ignite** the material covering the insert.
- **NEVER** run the **power cord** under carpet, rugs, runners, or any other covering. Doing so could cause the cord or materials covering the cord to overheat.
- **AVOID FIRE!** Regularly inspect all air vents to make sure they are free from dust, lint, or other blockage. **Unplug the unit** and clean with a **vacuum ONLY**. **DO NOT** rinse or get wet.



WARNING



- **For residential use only! NOT for commercial use! NEVER** use this fireplace for other than its intended purpose.
- Use **extreme caution** if using this insert **near children**, or where children may be present.
- **NEVER** leave this insert unattended. **ALWAYS** unplug this insert when not in use.
- **NEVER** sit, stand, or climb on the mantel or insert. Doing so could cause it to **fall over** or **break**.
- This insert is **hot** when **in use**. **AVOID INJURY! DO NOT TOUCH** hot surfaces, or attempt to move this insert while it is hot.
- **ALWAYS** turn this insert off before unplugging it from the outlet.
- **AVOID INJURY!** Keep the cord from crossing traffic areas to avoid tripping.
- **NEVER modify this fireplace**. Doing so could result in personal injury or property damage. Modification of this fireplace **completely voids all warranties**.
- **Discontinue use** if this fireplace **malfunctions** or is **dropped or damaged in any manner**.



WARNING



- **Risk of electric shock! DO NOT OPEN!** No user-serviceable parts inside!
- **ALWAYS disconnect** this unit from the **power supply before** performing any assembly or cleaning, or before relocating the electric fireplace.
- **ALWAYS** store this insert in a dry location. **NEVER** use the fireplace if it has become wet.
- **NEVER** use this insert in **bathrooms, laundry rooms**, or any other location where the insert could fall into a **bathtub or pool, become damp or come in contact with water**.
- **NEVER** operate this insert if the **power cord or plug** has become **damaged**, or if the **grounding pin** is **damaged or missing**.
- Place the insert near a wall outlet so an extension cord is not needed. If an extension cord is needed, the **gauge** of the cord **must be at least 14AWG**, and the **rating must be at least 1875 Watts**. **NEVER** use a **smaller gauge** cord with a **lower rating**. Doing so may result in **fire or electric shock**.
- **ONLY** use this insert on a **110~120 Volt 15 Amp grounded circuit**. **NEVER overload the circuit**. If this insert trips the circuit breaker, unplug all other appliances on the same circuit before the next use. Avoid plugging other appliances into the same circuit as this insert.
- **NEVER** plug this insert into an outlet that is **old, cracked**, or has any **loose wires or connections**. Plugging this insert into a faulty outlet could result in **electric arcing** within the outlet that could cause the **outlet to overheat or catch fire**.
- **ALWAYS** check your insert cord and plug connections with **each use!**
 - i) **MAKE SURE** the plug fits tight in the outlet! Faulty wall outlet connections or loose plugs can cause the outlet to overheat.
 - ii) **Inserts draw more current** than small appliances. **Overheating** may occur even if it has not occurred with the use of other appliances.
 - iii) During use **check frequently** to see if the **plug outlet or faceplate** is **HOT!**
 - iv) If the outlet or faceplate is **HOT**, **discontinue use immediately** and have a qualified electrician inspect and/or replace the faulty outlets.

- The cord supplied with the insert has a plug with two blades (live and neutral) and one round pin (ground). If a 3-slot receptacle is not available, an adapter **MUST** be used. The adapter **MUST** be **properly grounded** to the outlet box (see figure at right).

