
Hampshire gazebo

Style # L-GZ029PST



Recommended persons for safe assembly: 3.

CONGRATULATIONS – You’ve purchased a fine item from The Home Depot.

 
Our clear, easy to follow; step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece that will go together smoothly and give years of enjoyment.

All you will need is a screwdriver, a hammer, and a ladder not lower than 2m (about 6.6 feet).

If you have any questions just call 866-578-6569. Please refer to the DPCI code about when calling.

Step Identification

For ease of identification all parts are labeled to correspond to the Step number in which the part is used.

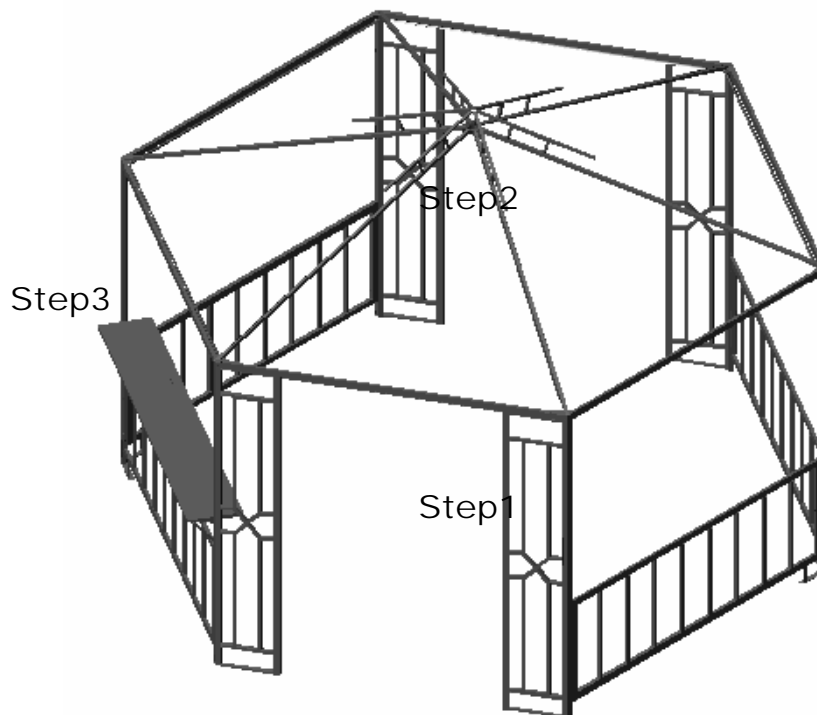


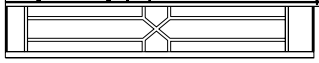 
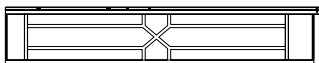 






 
 
 
 

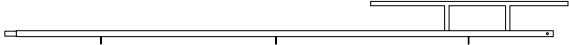 



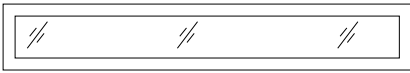 

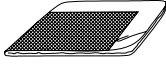 

IMPORTANT:

1. When installing and assembling your gazebo, it's recommended that 2 or more persons are involved.
2. Do not use the unit during an electrical storm, as there is a remote chance of getting struck by lightning.
3. Do not climb on top of the gazebo. Falling off the gazebo can result in serious injury, possibly even death.
4. Do not leave the gazebo assembled when there is a risk of high wind, as damage will occur to the structure.
5. Never barbecue under this gazebo or use lanterns that contain naked flames.
6. This package contains small items and plastic bags that should be kept away from children.
7. Ensure that any connectors & poles are firmly secured in position fully. It is important to do so before use so as to avoid collapsing or damage to the item, which could result in injury.

WARNING:

1. KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS GAZEBO FABRIC.
2. This Gazebo is made of Fabric that meets CPAI-84 specifications for flame resistance. It is not fire proof. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the gazebo fabric may render the flame-resistant properties ineffective.
3. Due the natural properties of metal frame material, if rust develops, clean rust area by sanding slightly, then wipe thoroughly and apply touch-up paint that is contained in the package.

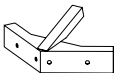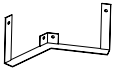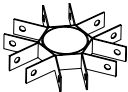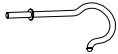






Parts List

NO.	Part	Qty.	Picture
1A	Screen	1	
1A1	Screen 1	2	
1A2	Screen 2	1	
1B	Rail fence	2	
1B1	Rail fence 1	2	
1C	Standing post	1	
1C1	Standing post 1	1	
1D	Beam	4	
1D1	Beam 1	2	
1E	Connector for top bars	6	
1F	Frame fixer	2	
2A	Top decoration	1	
2A1	Hook	1	
2B	Top bar	5	
2B1	Top bar with hook	1	
2C	Larger canopy	1	
2D	Top canopy	1	
2E	Electrical wire	1	
3A	Bar top	1	
3B	Restricting bar	2	
3C	Mosquito net	1	
3C1	Plastic ring	42	




Hardware Identification

For ease of identification all hardware is organized into separate Hardware packs.








Hardware Pack 1

32 pieces	(AA) M5×16 bolt (TBZ00105016HQ)	
32 pieces	(BB) M5 washer (TBZ10405HQ)	
4 pieces	(CC) M6×70 bolt (TBZ00106070HQ)	
8 piece	(DD) M6 washer (TBZ10406HQ)	
4 pieces	(EE) Nut (TBZ20106HQ)	
2 pieces	(JJ) M6 Wrench	
1piece	(KK) M5 Wrench	






Hardware Pack 2

6 pieces	(FF) M6×30 bolt (TBZ00106030HQ)	
12 pieces	(DD) M6 Big flat washer (TBZ10406HQ)	
6 pieces	(EE) Nut (TBZ20106HQ)	

Hardware Pack 3

2 pieces	(AA) M5×16 bolt (TBZ00105016HQ)	
2 pieces	(BB) M5 washer (TBZ10405HQ)	
2 pieces	(FF) M6×30 bolt (TBZ00106030HQ)	
4 pieces	(HH) Plastic Washer (TBZ10406HQ)	
2 pieces	(GG) M6×16bolt (TBZ00106016HQ)	
2 pieces	(DD) M6 Big flat washer (TBZ10406HQ)	
2 pieces	(II) Peg (TBZ10706250xQ)	

STEP #1 Screens

- (X32) AA 
- (X32) BB 
- (X4)CC 
- (X8)DD 
- (X4)EE 

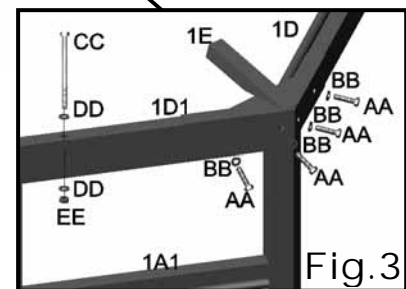 
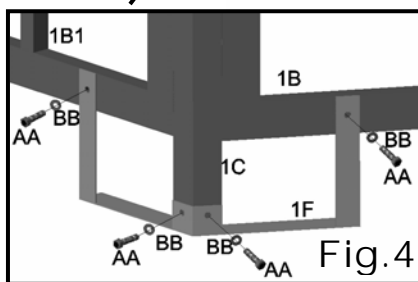 
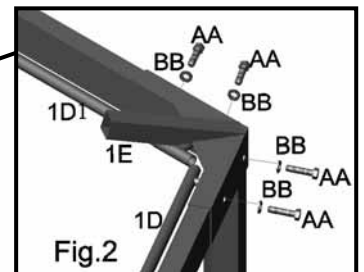 
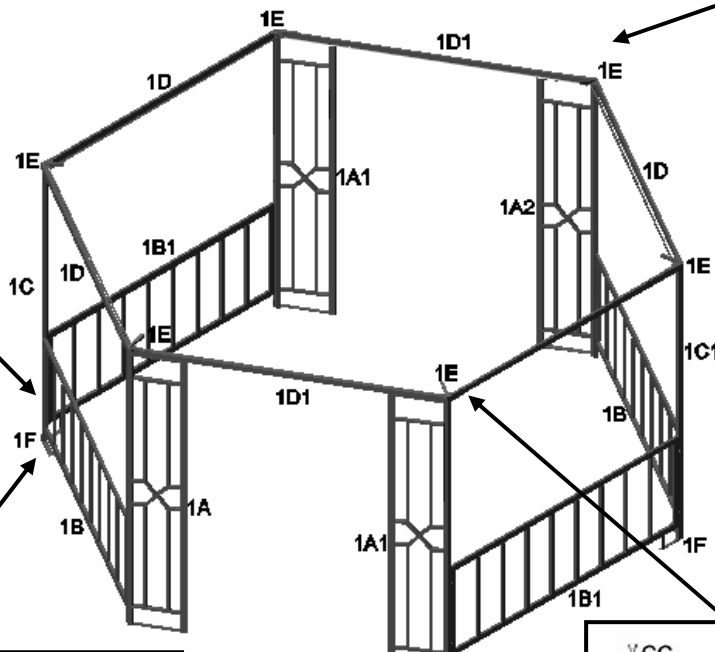 
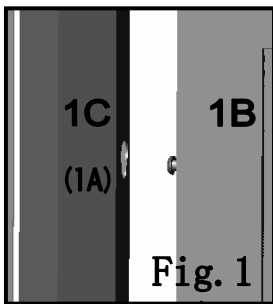 
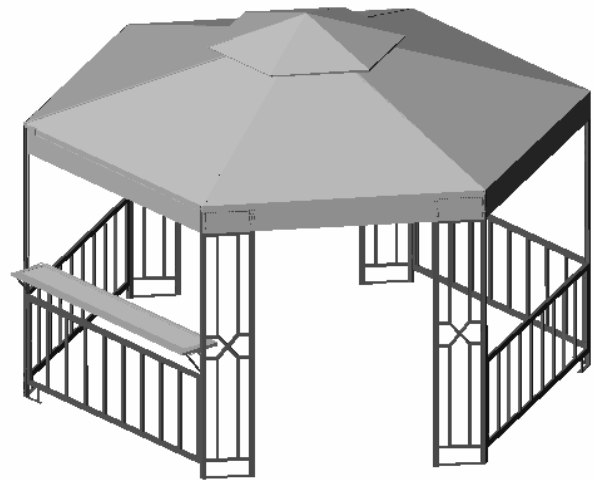 


Fig.1 : Attach the rail fences onto the standing posts and screens, as Fig. 1.

Fig.2 : Align the holes in 1E with those in beams 1D and 1D1, and fix them with bolts AA, washers BB, as Fig. 2.

Fig.3 : Align the holes in 1E with those in beams 1D, 1D1, and screen 1A1, secure them with bolts AA, washers BB, and then use bolts CC, washers DD and nuts EE to fix the beams with screens, as Fig. 3.

Fig.4 : Fix the standing posts 1C (1C1), rail fences 1B (1B1) on the frame fixer 1F and use bolts AA and washers BB to secure them, as Fig. 4.

STEP #2 Top & Canopy

(X6)FF



(X12)DD



(X6)EE

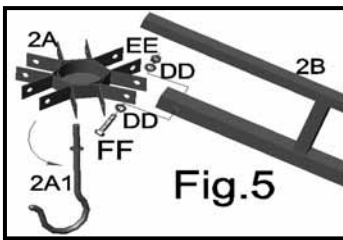 
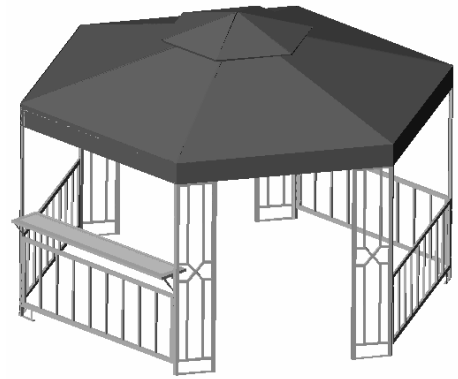 


Fig.5

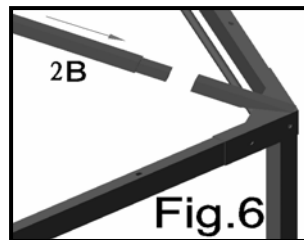 


Fig.6

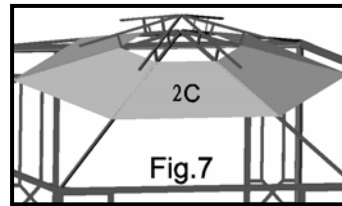 


Fig.7

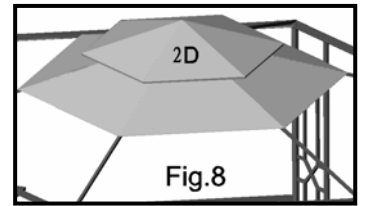 


Fig.8

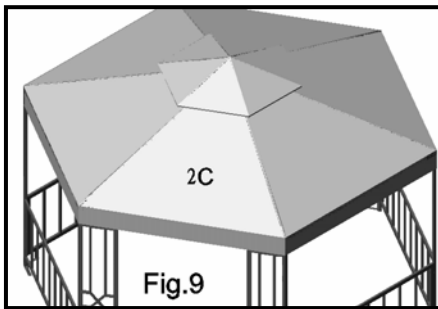 


Fig.9

 
 
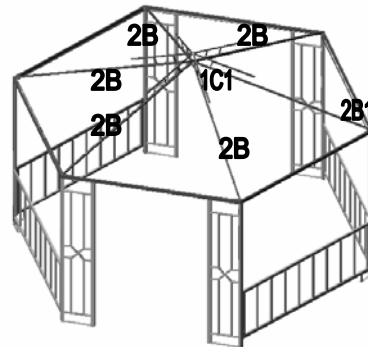 


Fig.5: Screw the hook 2A1 into 2A, and then connect the top bars 2B, 2B1 with 2A and secure them with bolts FF, washers DD, and nuts EE, as Fig. 5.

Fig.6: Insert the other ends of top bars 2B, 2B1 into the connector as shown in Fig. 6.

Fig.7 & Fig.8: Put the larger canopy 2C onto the larger top (do not have it well fixed here), then fix the top canopy 2D completely.

Fig.9: Fix the larger canopy 2C completely this time.

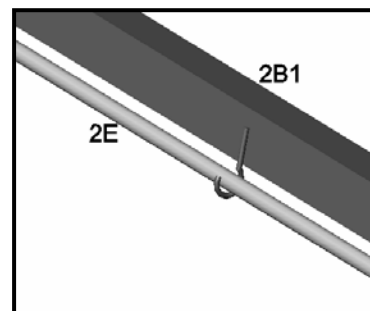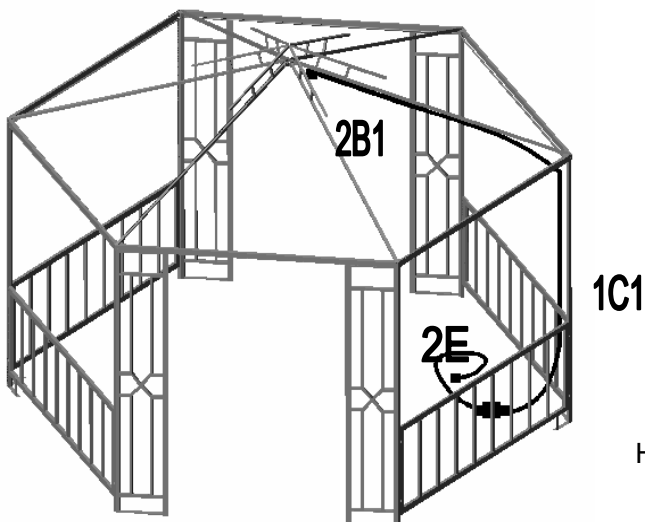

Hang the electrical wire 2E along the hooks on 1C1 and 2B1.

STEP #3

(X2) AA



(X2) BB



(X2) FF



(X4) HH



(X2) GG



(X2) DD



(X12) II

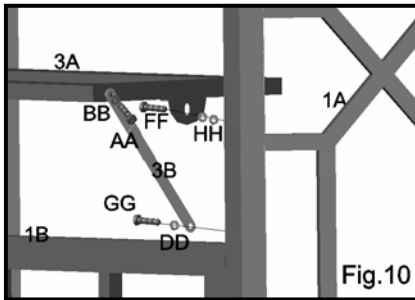 
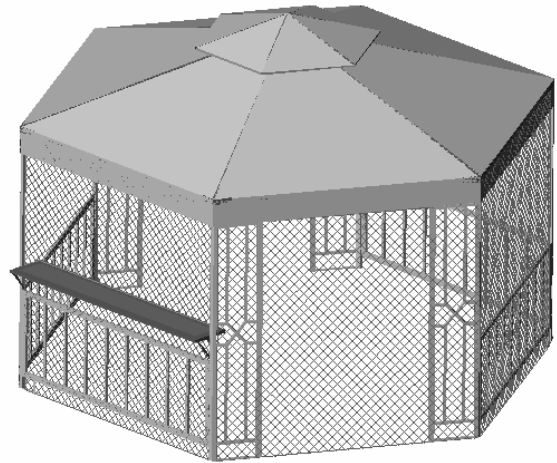 


Fig.10

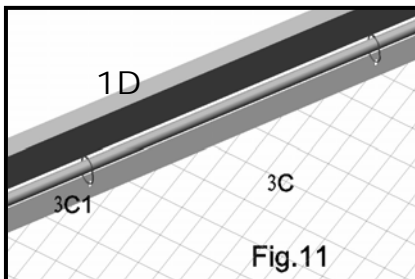 


Fig.11

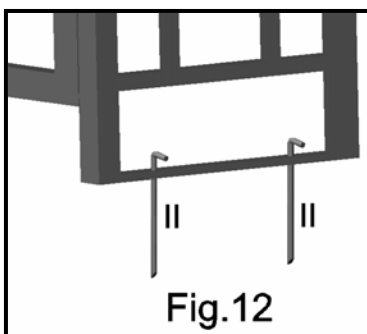 


Fig.12

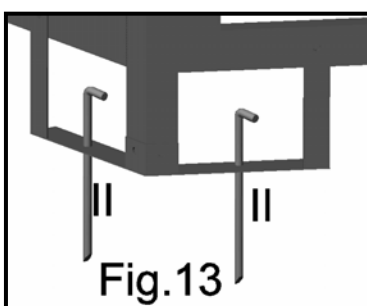 


Fig.13

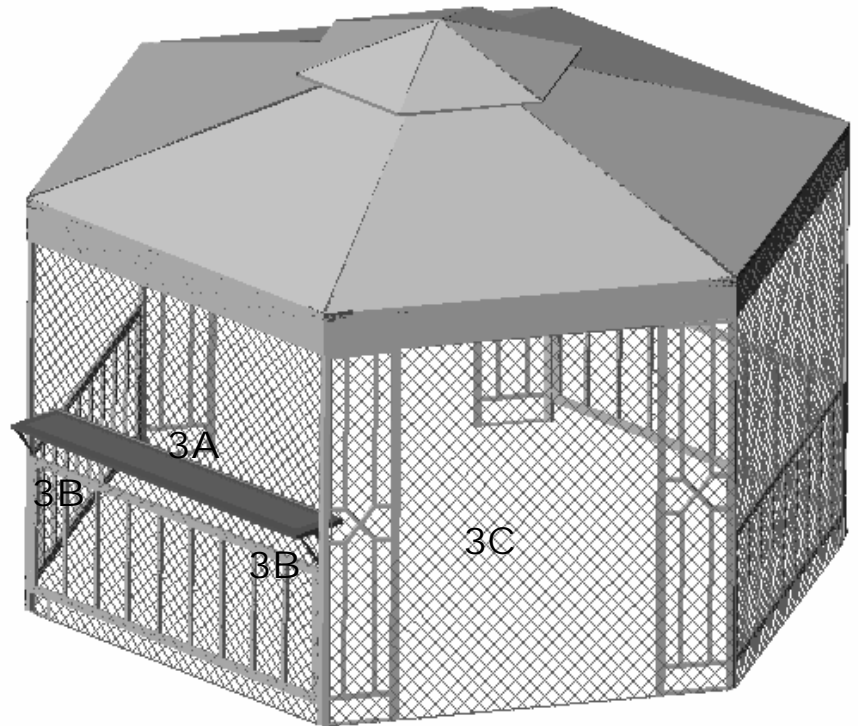 


Fig.10: Fix 3A with 1A and 1C with bolts FF and washers HH, and then use bolts AA and washers BB to fix 3B and 3A separately. Secure 3B with 1A and 1C separately with bolts GG and washers DD, as Fig.10.

Fig.11: Use those plastic rings 3C1 to attach mosquito net 3C on 1D.

Fig.12 & Fig.13: Peg II onto the ground, through the holes in frame fixer 1F and screen, to secure the whole product as shown in Fig.12 and Fig.13.

Limited Warranty:

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes.

The item is warranted to be free from defects in material or workmanship for a period of **6 month**. We don't reimburse for transportation or delivery costs, or compensate the individual or any outside party for assembling or disassembling the product.

Exclusions:

Items used for commercial, contract, or other non-residential purposes, or items damaged due to acts of nature, vandalism, misuse, or improper assembly are not covered. Corrosion or rusting of hardware is not covered. Proof of purchase (dated register receipt) is required for warranty claims. Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.

Maintenance:

Our iron/steel components for garden accessories and furniture are coated with rust inhibiting paint that protects it from rusting. However, due to the nature of iron, surface oxidation (rusting) will occur once these protective coatings are scratched. This is a natural process and is not a defect! To minimize this condition, we recommend care when assembling & handling the product to prevent scratching the paint. Should any scratching or damage occur, we recommend immediate touch-up with rust inhibiting paint. Surface rust can also be easily removed with a very light application of common cooking oil. If surface oxidation (rusting) occurs and if no measure is taken to prevent this, the oxidation may start dripping on to deck or patio and cause damaging stains, which may be difficult to remove. This can be prevented if measure is taken to keep the product from oxidizing.

Important: Please do not return this product to the store. For technical assistance on assembly or replacement parts Please do not return this product to the store, call Sunjoy Industries at 1(866) 578-6569 from 8:30 AM to 5:30 EST Monday to Friday or fax the replacement part form which put into the package to (740)-283-3549 or Email thd07@sunjoygroup.com for assistance.

Distributed by Home Depot U.S.A., Inc.
2455 Paces Ferry Rd.N.W.
Atlanta, Georgia 30339
Made in China
Limited Warranted by Sunjoy Industries
15709 Unit#1, Arrow Highway
Irwindale, CA 91706