


MILLSTONE 7-PIECE DINING SET

MILLSTONE 7-PIECE DINING SET

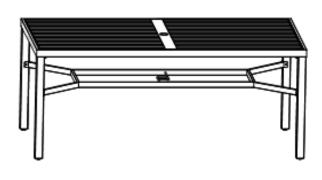



Questions, problems, missing parts? Before returning to the store call Hampton Bay Customer Service 8 a.m. - 6 p.m., EST, Monday-Friday

1-877-527-0313

HOMEDEPOT.COM

Table of Contents

2	Chair Assembly
2	
2	Care and Cleaning
2	•
3	
4	
5	
	2 2 2 3

6 7

Warranty

3 YEARS FRAME AND 1 YEAR FABRIC WARRANTY

WHAT IS COVERED

We warrant the frame to be free of manufacturing defects to the original purchaser for three years and fabric to be free of manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Contact the Customer Service Team at 1-877-527-0313 or visit www.homedepot.com.

Pre-Assembly

PLANNING FOR SUCCESSFUL ASSEMBLY

Read all instructions before assembly.

To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.



NOTE: More than one person may be required to complete the assembly of this product.

 


Pre-Assembly (continued)

HARDWARE INCLUDED

图

NOTE: Hardware not shown to actual size.




Part	Description	Quantity
AA	35 mm Hex bolt	8
BB	27 mm Hex bolt	8
CC	18 mm bolt	16
DD	Metal sheet	4
EE	Small Washer	16
FF	Large Washer	24
GG	Spring Washer	24
НН	Nut	8
II	50 mm Hex bolt	8
JJ	Hex Wrench	5
KK	Allen Key	3

3

Pre-Assembly (continued)

CHAIR PACKAGE CONTENTS

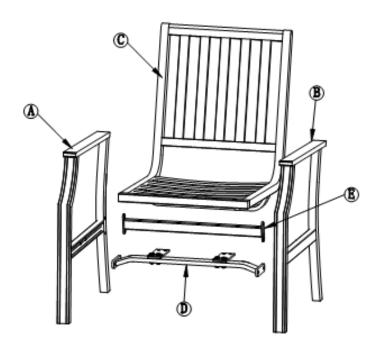


Part	Description	Quantity
A	Right arm	2
В	Left arm	2
C	Chair back	2
D	Top Tube	2
E	Back bar	2



Pre-Assembly (continued)

TABLE PACKAGE CONTENTS

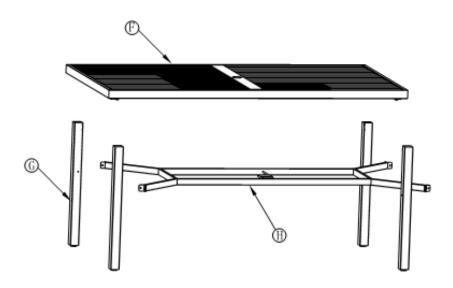

Part	Description	Quantity
F	Table rim	1
G	Table leg	4
Н	Leg connector	1


Chair Assembly

Connecting the chair back to the support tube

- Align two metal sheets (DD) of the support tube (D) over the four holes in the bottom of the chair back (C).
- Attach the bottom of chair back (C) to the support tube
 (D) by inserting four bolts (AA) through the metal sheets (DD), chair back (C), and support tube (D).
- Secure by attaching large washers (FF), spring washers (GG), and nuts (HH) to the ends of the bolts (AA).



NOTE: Do not fully tighten the bolts.

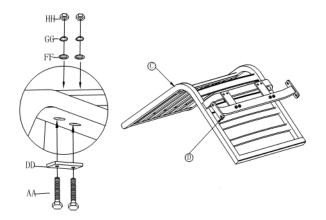

2 Connecting the support tube and back bar to the chair arms

- Place the right arm (A) on a soft surface.
- Attach one end of the support tube (D) to the right arm (A) with bolts (BB), spring washers (GG), and large washers (FF).
- Align the holes of the back bar (E) with the holes in the rear portion of the right arm (A).
- Secure the back bar (E) to the right arm (A) with bolts (CC) and small washers (EE).
- Repeat this step for the left arm (B).
- Tighten all of the bolts. Check and ensure the chair is tightly assembled and stable before you use.

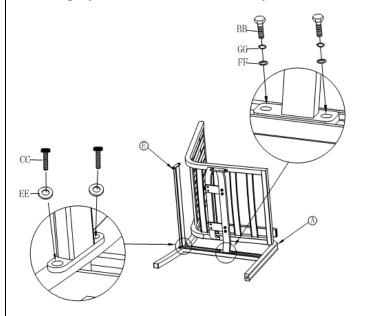





Table Assembly

Connecting the table legs to the table rim

- Turn the table rim (F) upside down.
- Attach each of the table legs (G) to the table rim (F) by inserting hex bolts (II), spring washers (GG) and large washers (FF).




NOTE: Do not fully tighten the bolts.

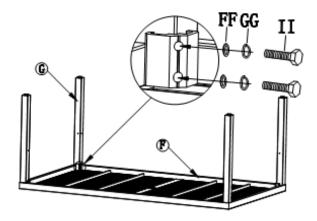

2 Connecting the leg connector to the table legs

- Align the holes of the leg connector (H) with the holes on the inside of each table leg (G).
- Attach the leg connector (H) to the table legs (G) with bolts (CC) and small washers (EE).
- Tighten all of the bolts. Turn the table over so it is right side up and ensure that all connections are secure.

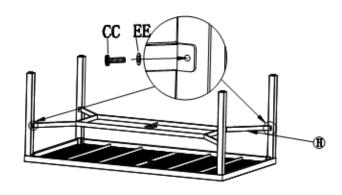

Care and Cleaning

- □ For best results, clean the frames with a damp cloth and dry the frames thoroughly. This will help prevent mildew by removing dirt particles that may accumulate.
- Do not clean with abrasive materials, bleach, or solvents.
- Store the table and chairs in a dry, sheltered place when not in use.
- Keep the table and chairs out of fire, extreme heat, freezing conditions, and inclement weather such as rain, hail, sleet, snow, or wind.



Questions, problems, missing parts? Before returning to the store call Hampton Bay Customer Service 8 a.m. - 6 p.m., EST, Monday-Friday

1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.