# WELLAND 44" ROUND DINING TABLE

IMPORTANT: PLEASE READ COMPLETE INSTRUCTION SHEET PRIOR TO ASSEMBLY! Identify all parts packed in carton against the parts list. Remove all protective materials, place parts on a nonabrasive surface to avoid scratching. If any parts are missing or damaged, DO NOT attempt to assemble. Please contact our customer service center (Monday-Friday 9:00 a.m.-5:00 p.m.CST) at 1-877-527-0313 or visit our website at www.homedepot.com.

# Step 1

Remove the glass and set aside vertically in a safe place until the table has been completely assembled. Turn the table rim (A) upside down. Attach 4 table legs (B) to the table rim (A) by inserting the bolts (E) with metal washers (F) through the pre-drilled holes of the table legs and rim. DO NOT TIGHTEN COMPLETELY!

### Step 2

Attach the leg connector bracket (C) to table legs (B) by inserting bolts (E) with metal washers (F) through the pre-drilled holes of the leg connector bracket and legs. Tighten all bolts completely and cover them with plastic bolt caps (G).

### Step 3

Turn the table in the upright position. Carefully place the glass (D) into the table rim. Keep touch-up paint for future use for both your table and chairs.


Your table is now ready for use.

#### IMPORTANT:

To avoid damage to your table:

- An umbrella base must be used at all times.
- Make sure the plastic umbrella safety ring is installed in the center of the table before you insert the umbrella pole through the table.
- Remove the umbrella from the table when not in use or in the event of wind, rain, hail, sleet, snow or any other inclement weather
- In storing patio furniture, do not stack anything on glass, stone, tile or marble tabletops.
  Before storing, drain all water that may have accumulated in or around patio furniture frames. If not drained properly, water can cause freeze damage.
- Cover furniture with outdoor furniture covers when not in use.
- For safety reasons, do not sit or stand on the table.

Parts List											
Α	TABLE RIM		1	F	METAL WASHER	0	12				
В	TABLE LEG		4	G	PLASTIC BOLT		12				
С	LEG CONNECTOR BRACKET		1	н	ALLEN WRENCH		1				
D	GLASS	$\overline{}$	1	ı	TOUCH-UP PAINT		1				
E	BOLT (M6x20)		12								

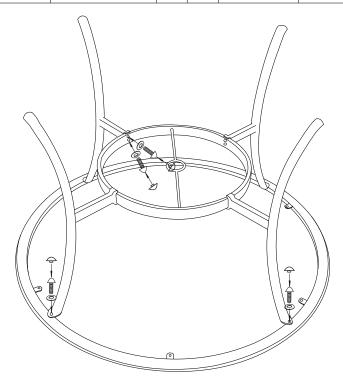

# WELLAND SLING SPRING DINING CHAIR

IMPORTANT: PLEASE READ COMPLETE INSTRUCTION SHEET PRIOR TO ASSEMBLY! Identify all parts packed in carton against the parts list. Remove all protective materials, place parts on a nonabrasive surface to avoid scratching. If any parts are missing or damaged, DO NOT attempt to assemble. Please contact our customer service center (Monday-Friday 9:00 a.m.-5:00 p.m.CST) at 1-877-527-0313 or visit our website at www.homedepot.com.

## Step 1

Place chair frame (D) on a flat, soft surface. Attach left arm/leg (A) to chair frame (D) by using bolts (E), lock washer (H) and metal washer (I) through each hole of the arm/leg and into the chair seat. Repeat this step for right arm/leg (B). (DO NOT TIGHTEN COMPLETELY!)

# Step 2

Attach the top of left arm/leg to chair frame (D) by using bolt (F) through pre-drilled hole of the arm/leg and into the chair back. Repeat this step for right arm/leg (B). (DO NOT TIGHTEN COMPLETELY!)

### Step 3

Attach crossbar (C) to the arm/leg by using bolt (G) through pre-drilled hole of the chair arm/leg and into the crossbar. Please make sure the metal placard faces back of chair.

### Step 4

Tighten all bolts with the Allen wrench. Cover all bolts with plastic bolt caps. Your chair is now ready for use.

Parts List										
А	LEFT ARM/ LEG WHEN SITTING		4	G	BOLT (M6x45)		8			
В	RIGHT ARM/ LEG WHEN SITTING)		4	н	LOCK WASHER		16			
С	CROSSBAR		4	I	METAL WASHER	0	16			
D	CHAIR FRAME		4	J	FLAT PLASTIC BOLT CAP		16			
E	BOLT (M6x20)		16	к	ROUND PLASTIC BOLT CAP		16			
F	BOLT (M6x25)		8	L	ALLEN WRENCH		1			

