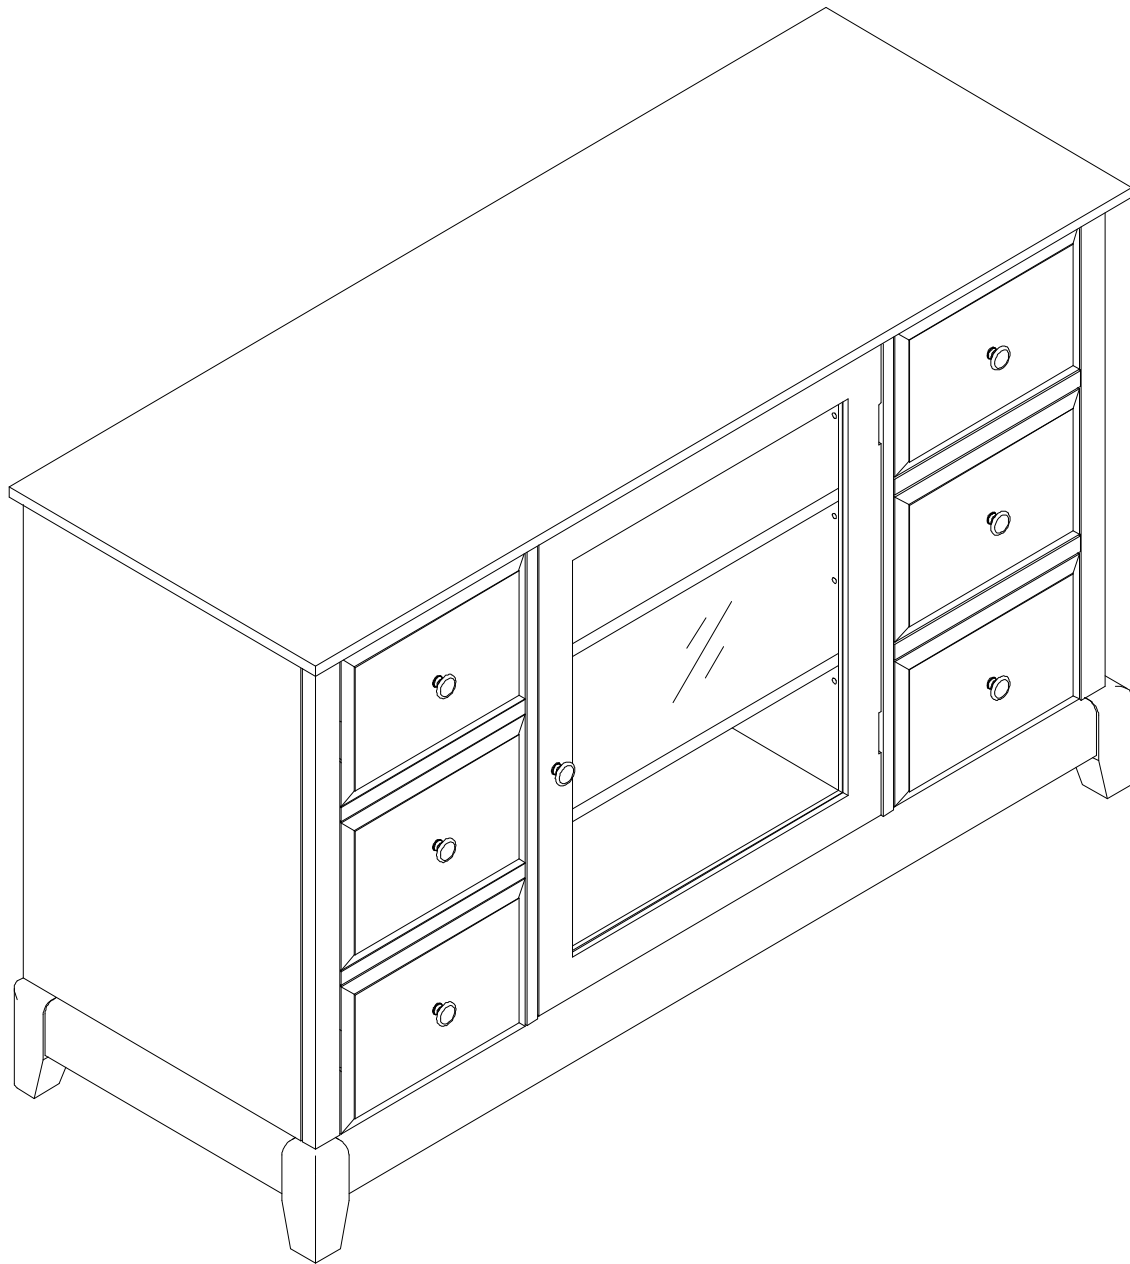 


MS341700TX  
Denver Media Console  
**Assembly Instructions**



**Southern**  
ENTERPRISES

 
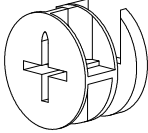 
 
 


 
 
 
 
 

 
 
For assistance with assembly, contact:  
Southern Enterprises Inc.  
Customer Service: 1-800-633-5096  
service@seidal.com  
www.seidal.com

 
 
 
 
 

 
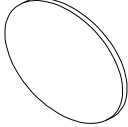 
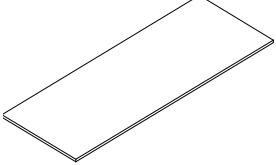 
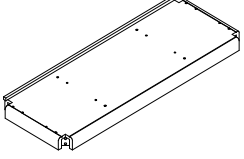 
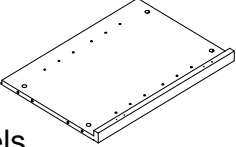 
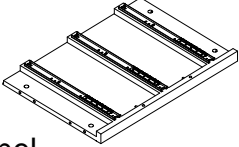 
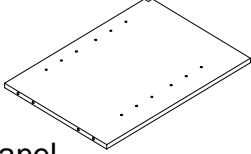 
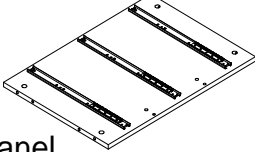 
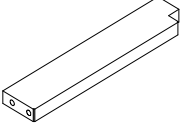 
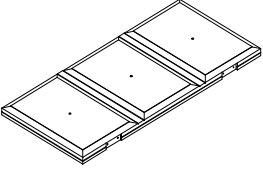 
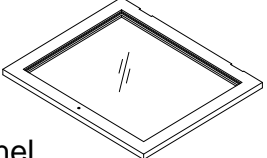 
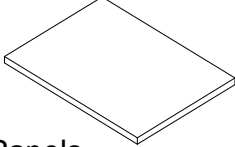 




# Denver Media Console

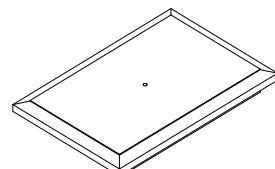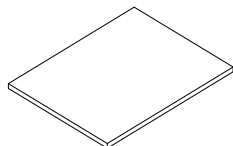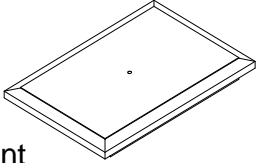   
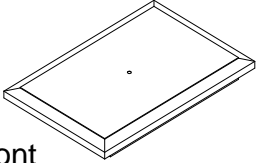 
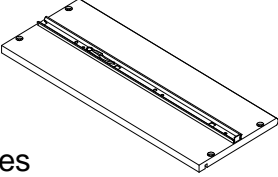 
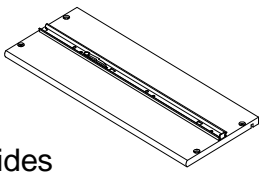 
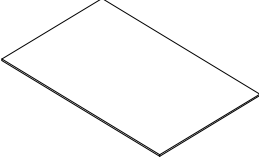 
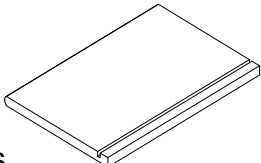 

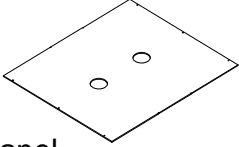 
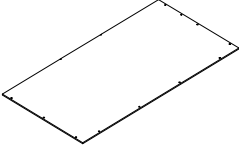 
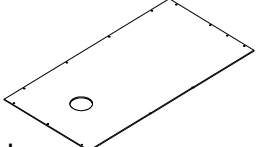 

 
## Parts List

Please review all parts and hardware before disposing of any packaging.  
 Before beginning assembly, separate each type of hardware. Carefully study the diagrams below and check that you have all parts indicated. Call Customer Service if missing hardware. Using the incorrect hardware will cause damage.

<b>A.</b>  Cam Bolts Quantity of 20	<b>B.</b>  Cam Locks Quantity of 20
<b>C.</b>  Wood Dowels 8*30) Quantity of 20	<b>D.</b>  Bolts 1/4") Quantity of 8
<b>E.</b>  Spring Washers 5/16") Quantity of 8	<b>F.</b>  Flat Washers 5/16"/16mm) Quantity of 8
<b>G.</b>  Allen (5mm) Wrench Quantity of 1	<b>H.</b>  Hinges 1/4") Quantity of 4
<b>I.</b>  Screws 3x14mm) Quantity of 18	<b>J.</b>  Screws ( 8x25mm) Quantity of 24
<b>K.</b>  Knobs Quantity of 7	<b>L.</b>  Bolts Quantity of 7
<b>M.</b>  Magnets Quantity of 2	<b>N.</b>  Metal Plates Quantity of 2


<p><b>O.</b></p>  <p>Quantity of 16</p> <p>Shelf Pins</p>	<p><b>P.</b></p>  <p>Quantity of 34</p> <p>Screws (∅ 3x14mm)</p>
<p><b>Q.</b></p>  <p>Quantity of 2</p> <p>Plastic Anchors</p>	<p><b>R.</b></p>  <p>Quantity of 2</p> <p>Screws (∅ 3.5x19mm)</p>
<p><b>S.</b></p>  <p>Quantity of 2</p> <p>Screws (∅ 3.5x25mm)</p>	<p><b>T.</b></p>  <p>Quantity of 2</p> <p>Plastic Straps</p>
<p><b>U.</b></p>  <p>Quantity of 4</p> <p>Brackets</p>	<p><b>V.</b></p>  <p>Quantity of 8</p> <p>Covers</p>
<p><b>1.</b></p>  <p>Quantity of 1</p> <p>Top Panel</p>	<p><b>2.</b></p>  <p>Quantity of 1</p> <p>Bottom Panel</p>
<p><b>3.</b></p>  <p>Quantity of 4</p> <p>Left Side Panels</p>	<p><b>4.</b></p>  <p>Quantity of 1</p> <p>Right Side Panel</p>
<p><b>5.</b></p>  <p>Quantity of 1</p> <p>Left Divider Panel</p>	<p><b>6.</b></p>  <p>Quantity of 1</p> <p>Right Divider Panel</p>
<p><b>7.</b></p>  <p>Quantity of 2</p> <p>Cross Bars</p>	<p><b>8.</b></p>  <p>Quantity of 1</p> <p>Door Panel</p>
<p><b>9.</b></p>  <p>Quantity of 1</p> <p>Glass Door Panel</p>	<p><b>10.</b></p>  <p>Quantity of 2</p> <p>Side Adjustable Panels</p>




<p><b>11.</b> Quantity of 2</p> <p>Middle Adjustable Panels</p>	<p><b>12-1.</b> Quantity of 1</p> <p>Top Drawer Front</p>
<p><b>12-2.</b> Quantity of 1</p>  <p>Middle Drawer Front</p>	<p><b>12-3.</b> Quantity of 1</p>  <p>Bottom Drawer Front</p>
<p><b>13.</b> Quantity of 3</p>  <p>Left Drawer Sides</p>	<p><b>14.</b> Quantity of 3</p>  <p>Right Drawer Sides</p>
<p><b>15.</b> Quantity of 3</p>  <p>Drawer Bottoms</p>	<p><b>16.</b> Quantity of 3</p>  <p>Drawer Backs</p>
<p><b>17.</b> Quantity of 2</p>  <p>Adjustable Legs</p>	<p><b>18.</b> Quantity of 1</p>  <p>Middle Back Panel</p>
<p><b>19.</b> Quantity of 1</p>  <p>Right Back Panel</p>	<p><b>20.</b> Quantity of 1</p>  <p>Left Back Panel</p>
<p><b>21.</b> Quantity of 4</p>  <p>Legs</p>	
<p><b>Care and Cleaning Instructions:</b>  Before using, wipe with a clean, dry cloth. Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects.</p>	<p>For replacement parts or questions, please call customer service at 1-800-633-5096.</p>
<p><b>Assembly Tool Required:</b>  <b>No.2 Phillips Screwdriver (Not Included)</b></p>	

# Denver Media Console
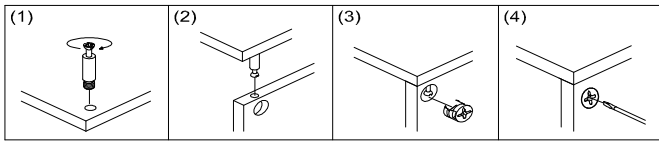 
## Assembly Instructions



"Please do not over tighten cambolts. Please stop when you feel tight"

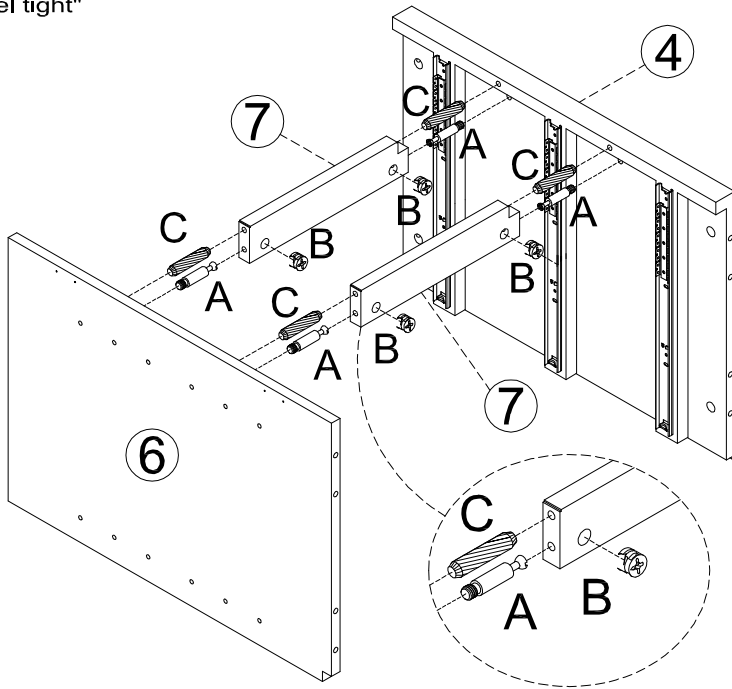 


**Figure 1**

Insert Cam Locks **(B)** into holes on Cross Bars **(7)**.

Attach Cross Bars **(7)** to Right Side Panel **(4)** and Divider Panel **(6)** using Cam Bolts **(A)** and Wood Dowels **(C)**.

Tighten by rotating Cam Locks **(B)** clockwise with Phillips screwdriver.

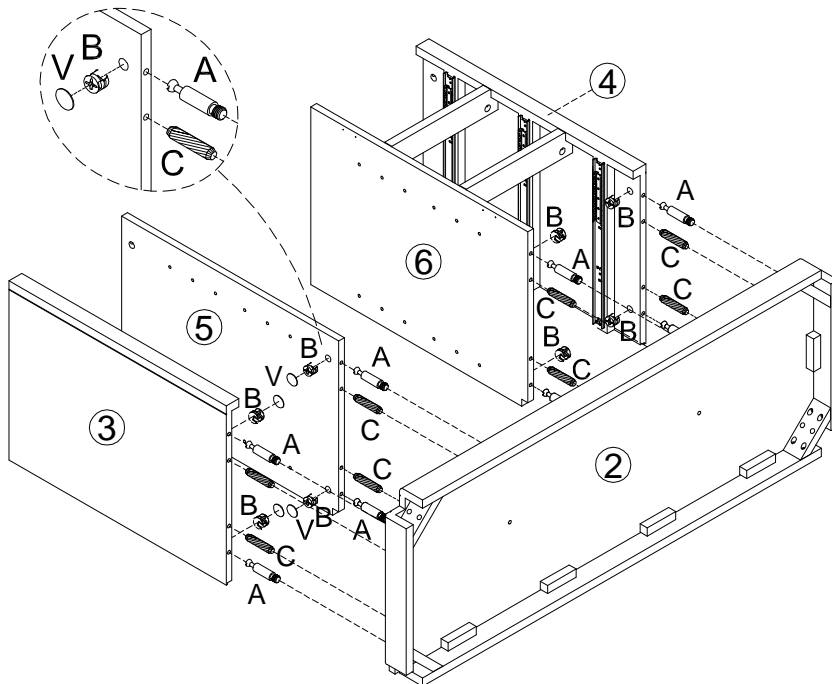 


**Figure 2**

Insert Cam Locks **(B)** into holes on Side Panels **(3/4)** and Divider Panels **(5/6)**.

Attach Bottom Panel **(2)** to Side Panels **(3/4)** and Divider Panels **(5/6)** using Cam Bolts **(A)** and Wood Dowels **(C)**.

Tighten by rotating cam locks **(B)** clockwise with Phillips screwdriver.

Cover cam lock holes with Covers **(V)**.

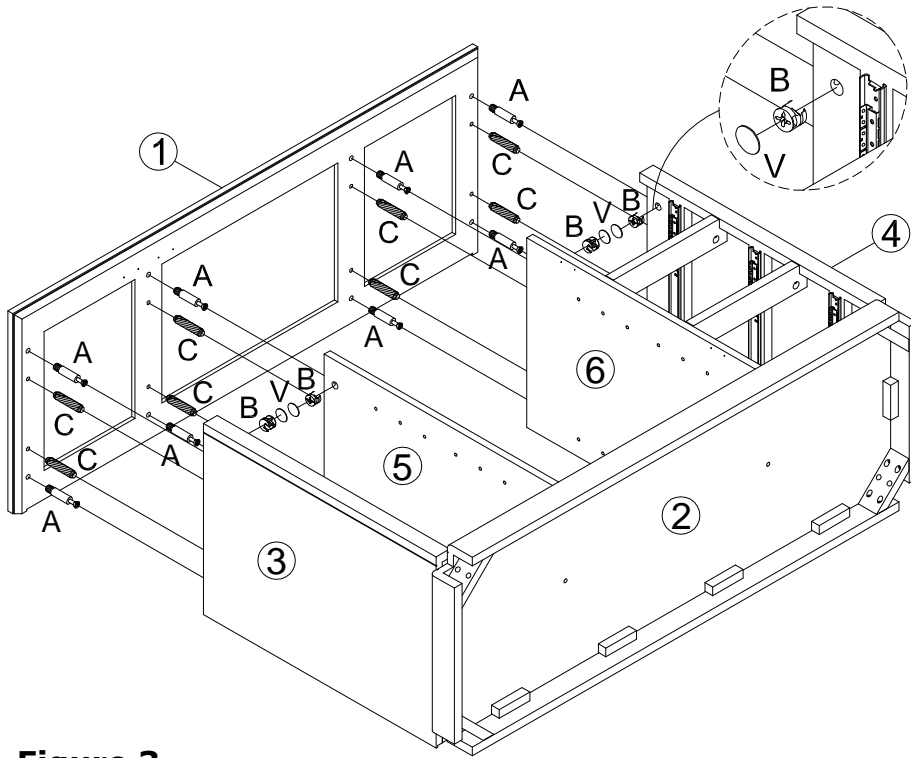 


**Figure 3**

Insert Cam Locks (**B**) into holes on top side of Side Panels (**3/4**) and Divider Panels (**5/6**).

Attach Top Panel (**1**) to Side Panels (**3/4**) and Divider Panel (**5/6**) using Wood Dowels (**C**) and Cam Bolts (**A**).

Tighten by rotating Cam Locks (**B**) clockwise with Phillips screwdriver.

Cover cam lock holes with Covers (**V**).

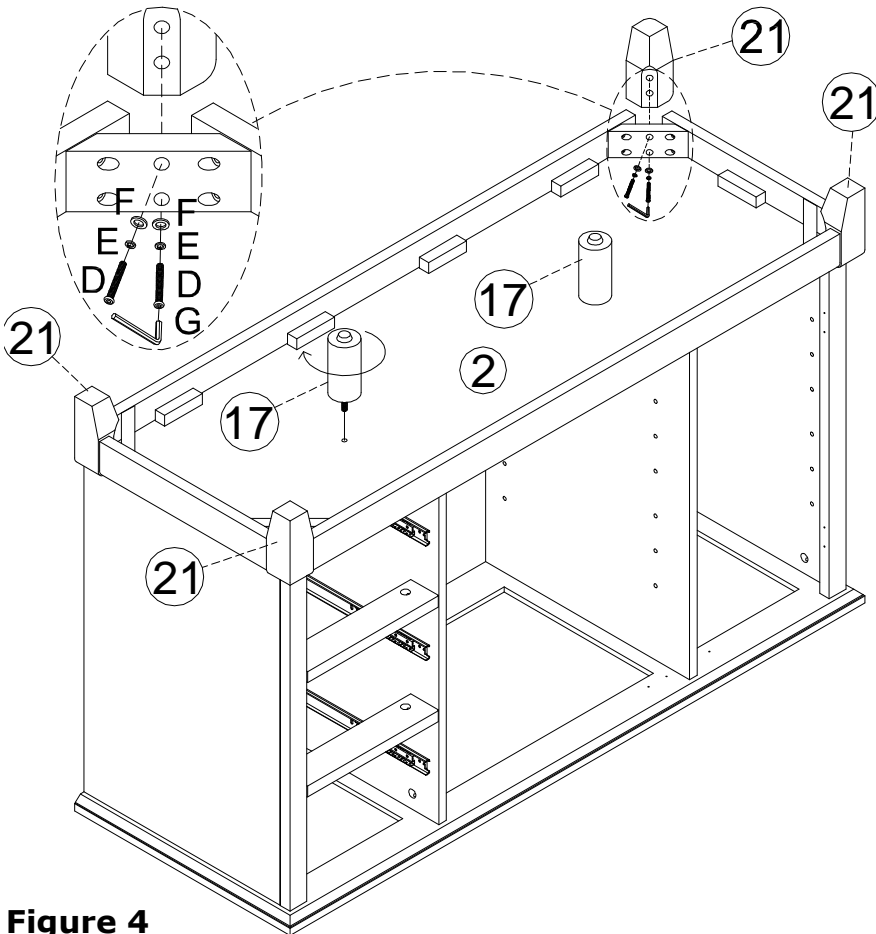 


**Figure 4**

Attach Legs (**21**) to assembled unit with Bolts (**D**), Flat Washers (**F**), and Spring Washers (**E**).

Tighten all bolts with Allen Wrench (**G**).


Screw Adjustable Foot (**17**) into bottom of unit and tighten by hand.

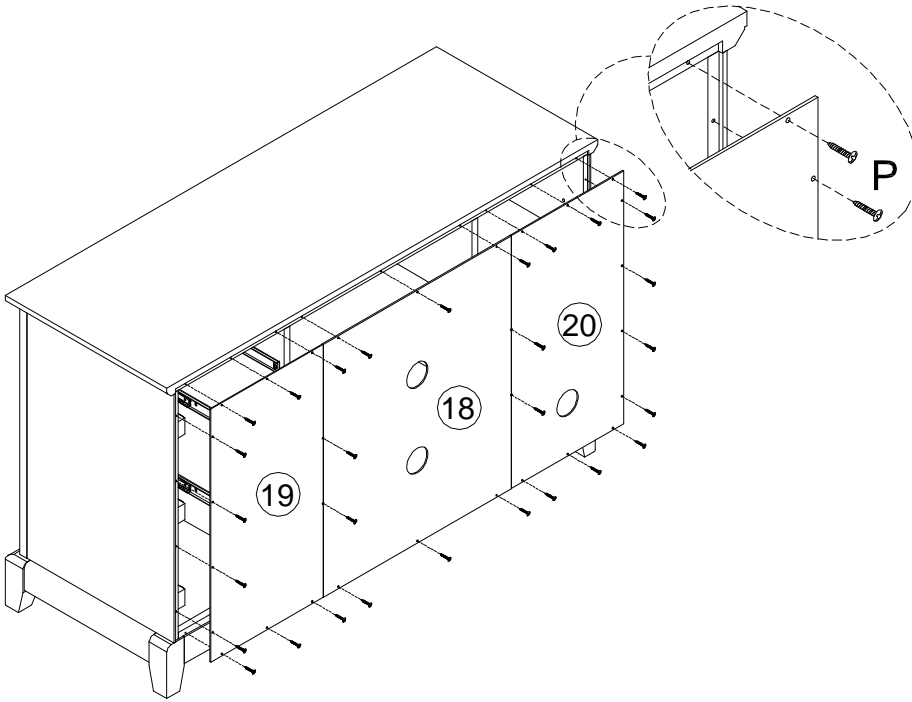 

**Figure 5**

Attach Back Panels (**19/18/20**) to back of assembled unit in same sequence as shown with Screws (**P**).


Tighten screws with Phillips screwdriver.

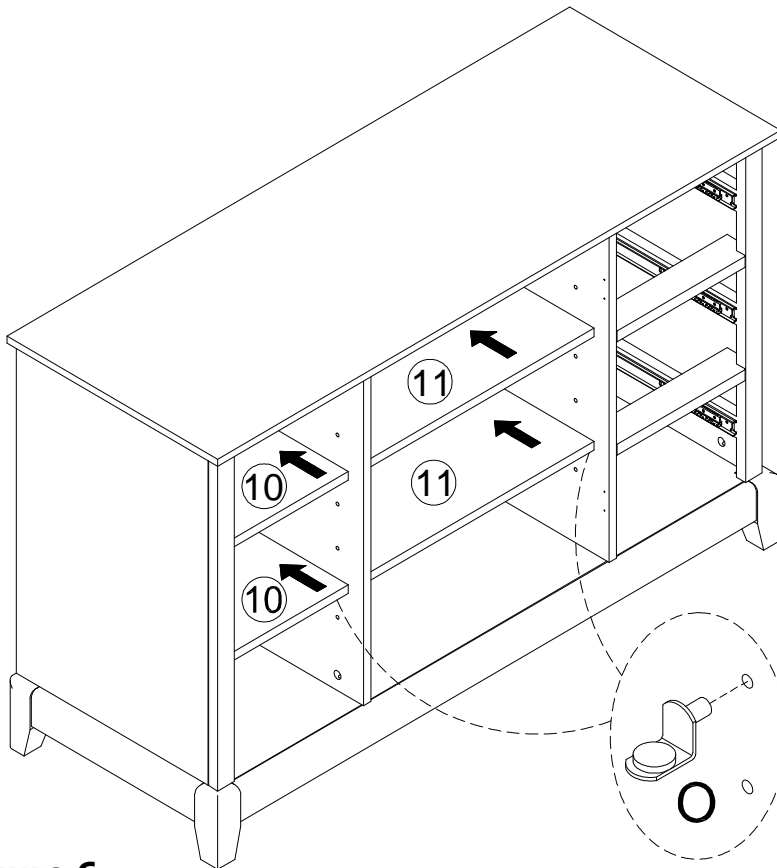 

**Figure 6**

Insert Shelf Pins (**O**) into corresponding holes on unit.

Place Adjustable Shelves (**10/11**) onto Shelf Pins (**O**).

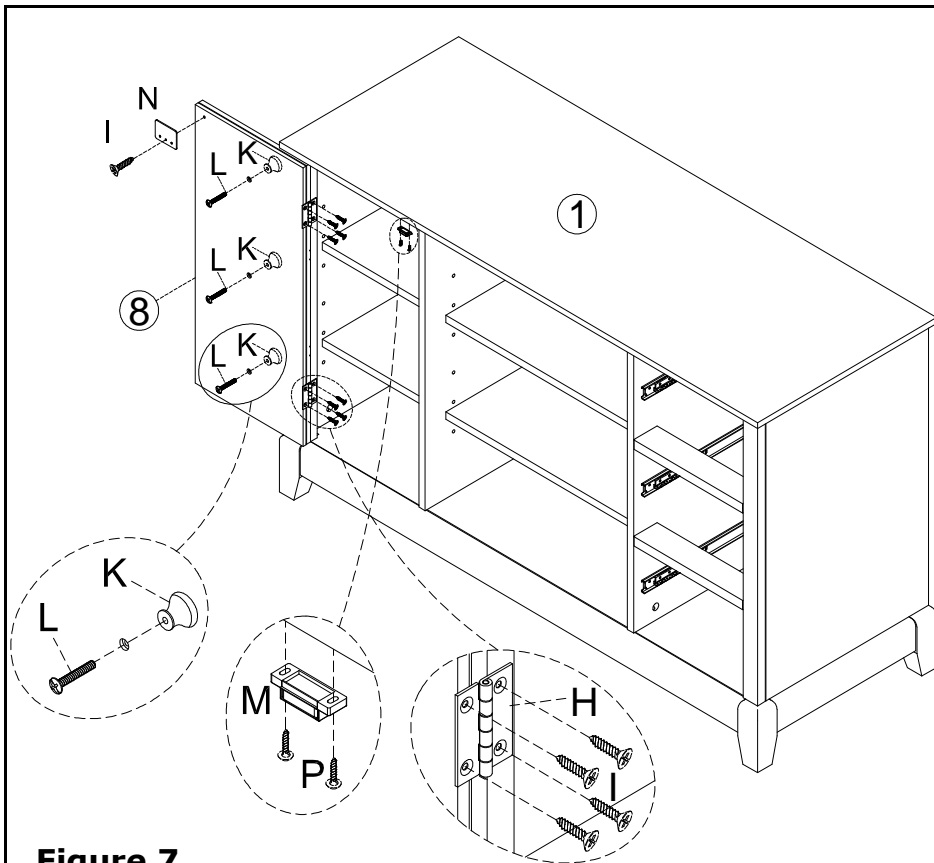 

**Figure 7**

Connect Magnet **(M)** on underside of Top Panel **(1)** using Screws **(P)**.


Attach Hinges **(H)** to Door Panel **(8)** with Screws **(I)**.

Attach door to unit using attached Hinges **(H)** and Screws **(I)**.

Attach Metal Plate **(N)** to door with Screw **(I)**.

Attach Knob **(K)** onto Door Panel **(8)** with Bolt **(L)**.

Tighten bolt and screws with Phillips screwdriver.

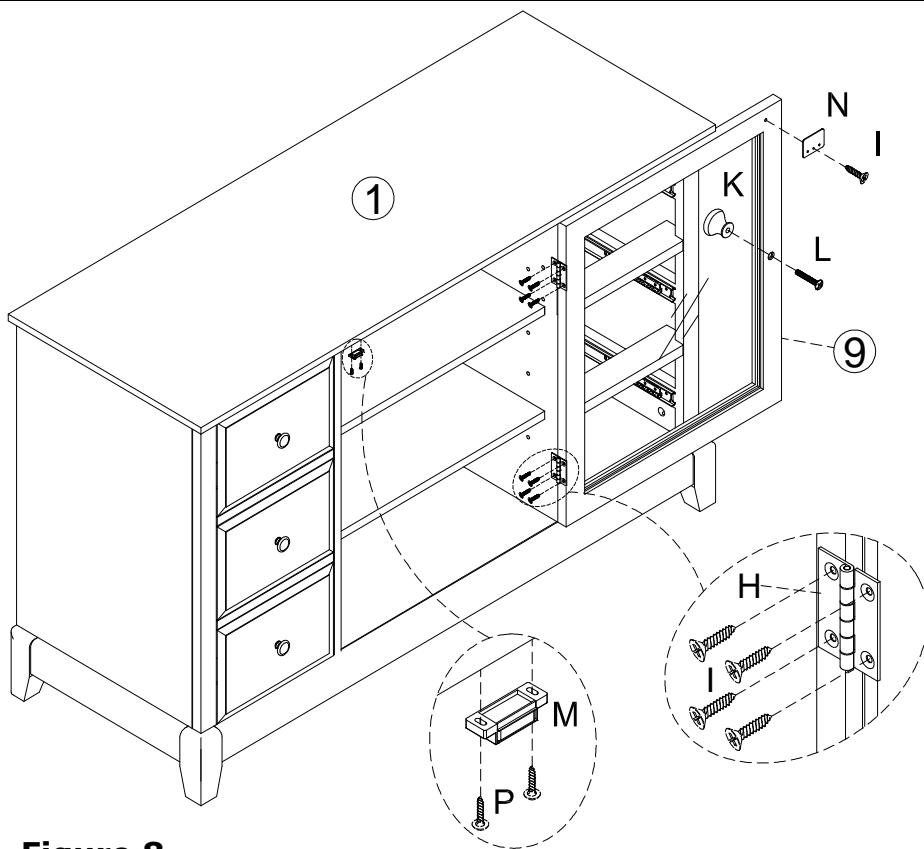 

**Figure 8**

Using Screws **(P)** connect Magnet **(M)** to underside of Top Panel **(1)**.


Use Hinges **(H)** and Screws **(I)** to attach Glass Door Panel **(9)** to unit.

Attach Metal Plate **(N)** onto inside of door panel with Screw **(I)**.

Attach Knob **(K)** to Door Panel **(9)** with Bolt **(L)**.

Tighten bolts and screws with Phillips screwdriver.



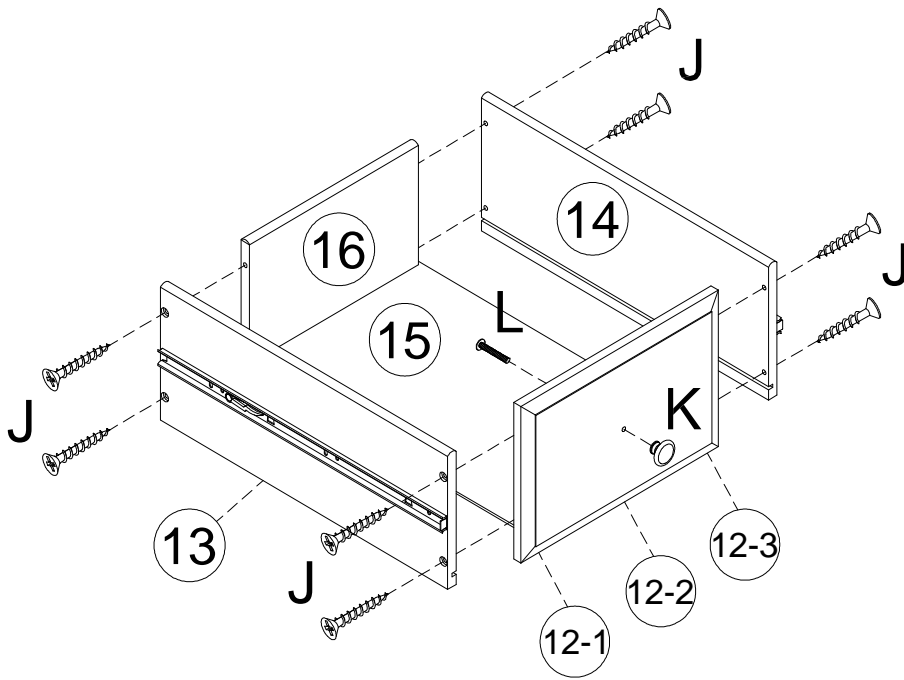 

**Figure 9**

Use Long Screws (**J**) to connect Drawer Left/Right Side Panels (**13/14**) to Drawer Back Panel (**16**).


Slide Drawer Bottom Panel (**15**) into corresponding grooves on drawer side and back panels.

Attach Drawer Front Panel (**12-1**) to assembled drawer using Long Screws (**J**).

Attach Knob (**K**) onto drawer front with Bolt (**L**).


Tighten screws and bolts with Phillips screwdriver.

**Repeat steps** to assemble two other drawers using Drawer Front Panels (**12-2**) and (**12-3**).

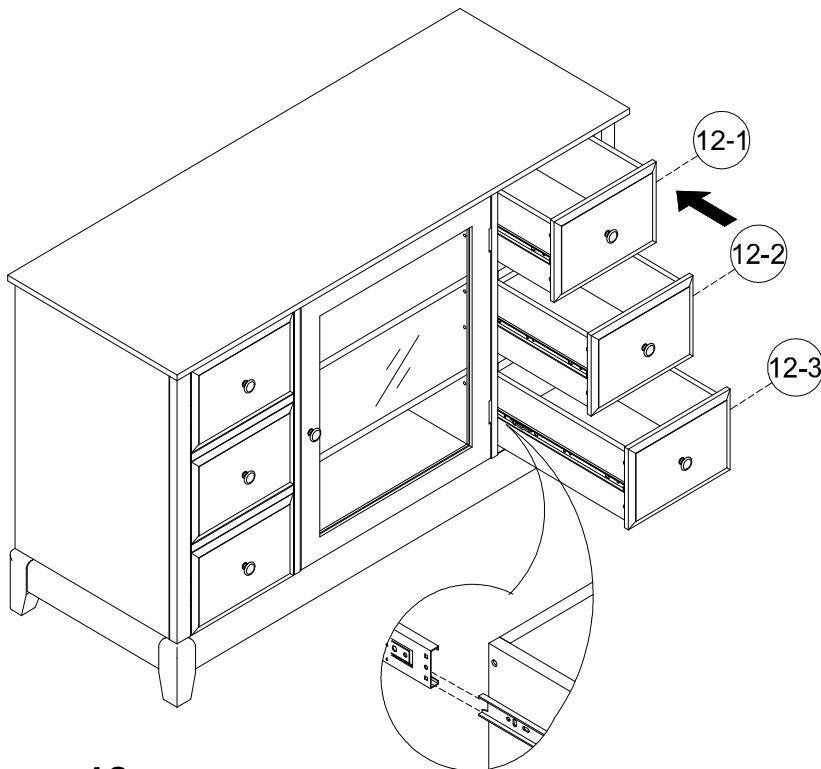 


**Figure 10**

Insert Drawers into glides on assembled unit.

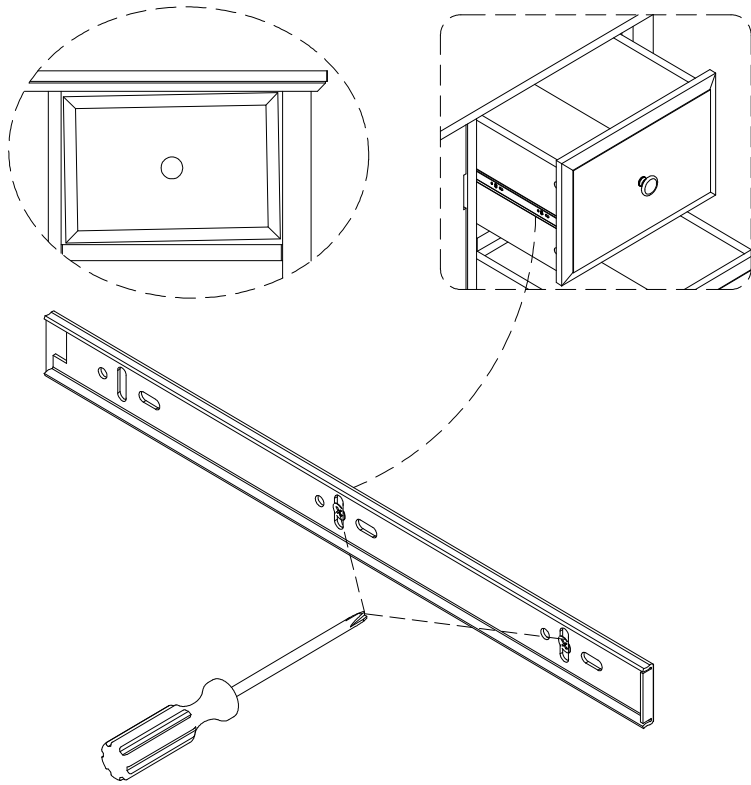 

**Figure 11**

If drawer hits adjoining parts or if drawer gap is not consistent, you can loosen screws on side and adjust drawer.

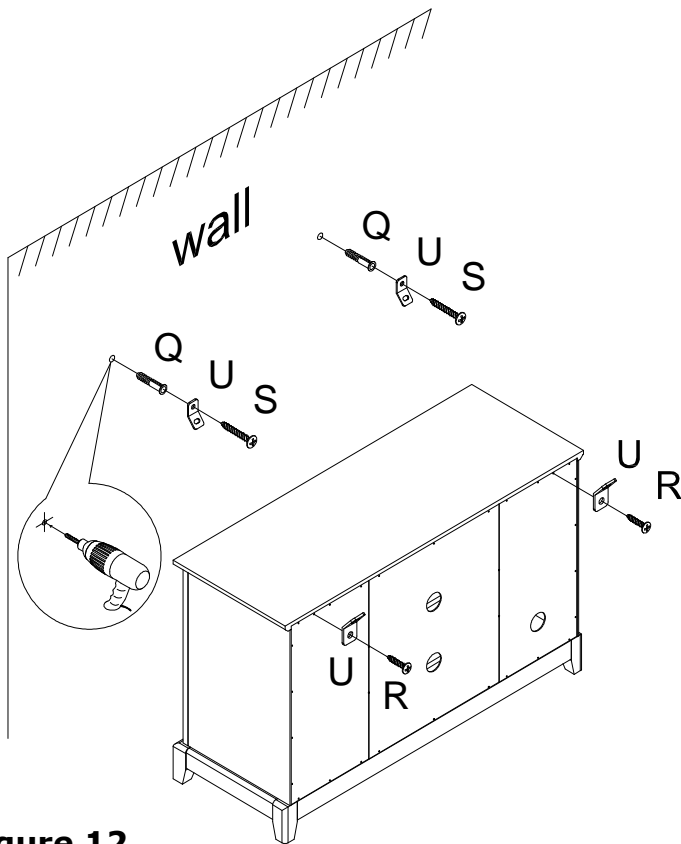 

**Figure 12**

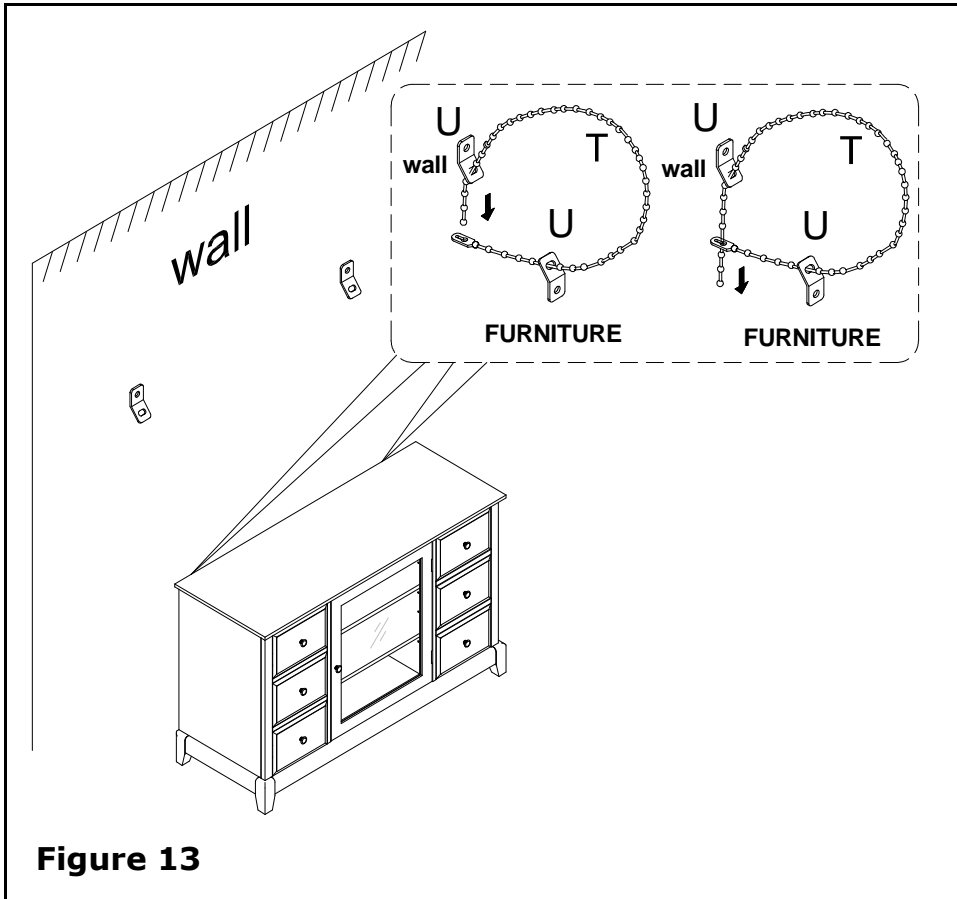 
Attach Brackets (**U**) to Back Panel using Screws (**R**).

Tighten Screws (**R**) using a Philips screwdriver.

Mark two desired locations on wall. Drill two 3/16" holes on wall. Insert Plastic Anchors (**Q**) into holes on wall (use a hammer to help).

Attach Brackets (**U**) to wall using Screws (**S**).


Tighten Screws (**S**) using a Philips screwdriver.



Move unit close to wall and tie all Brackets (U) with Plastic Straps (T) as shown.

Anti-tipping hardware must be used for this product to avoid tipping and injury.

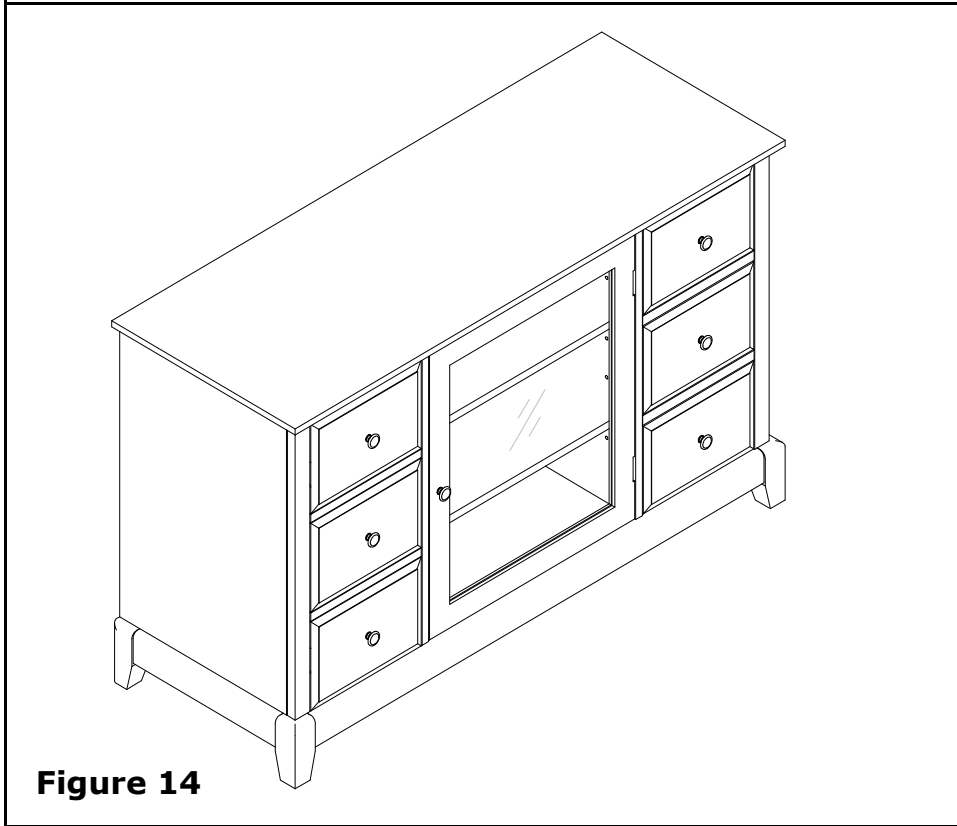 **Figure 13**



Now your Denver Media Console is ready to use!

**Figure 14**

# Parts Replacement Form

## Customer Information

Name \_\_\_\_\_

Address \_\_\_\_\_

City/State/Zip Code \_\_\_\_\_

Phone Number \_\_\_\_\_

Please indicate where you purchased this item: Store/Website/Catalog

\_\_\_\_\_

Please indicate color/size/style number:

\_\_\_\_\_

Style No	Parts Letter	Parts Description	Quantity Needed
_____	_____	_____	_____
_____	_____	_____	_____

Please immediately examine this product carefully. Any request for missing parts or damage replacement must be received within 90 days of your receipt of the product. Replacement, if available, will be honored within this time frame. Parts will not be available for items arriving fully assembled. We do not recommend modifying product(s) and we are not responsible for any damages due to product modification(s). If damages or missing parts are not reported within 90 days of your receipt, we are under no obligation to provide parts or replacement merchandise.

For product issues, please contact Southern Enterprises at 800-633-5096 (toll-free) / 972-869-0111 (Dallas), Mon-Fri 9am – 4pm CST, or email us at [service@seidal.com](mailto:service@seidal.com). Please ask for customer service representative for issues involving damages or replacement parts. Please ask for technical assistance representative for any issues with product and assembly/construction.

Please contact the retailer that you purchased from for returns.



**Southern**  
ENTERPRISES

Customer Service: 1-800-633-5096  
[service@seidal.com](mailto:service@seidal.com)

Southern Enterprises, Inc.  
600 Freeport Parkway, Suite 200  
Coppell, Texas 75019



## **CAUTION**

The top shelf is intended for a flat screen television with a maximum overall width of 50" and supports up to 85 lb.

Each center shelf should not be loaded with more than 20 lb.

Each side shelf should not be loaded with more than 8 lb.

**DO NOT EXCEED RECOMMENDED LOAD.** Use with products heavier than the maximum sizes and weights indicated may result in instability causing possible injury.

This unit contains a permanent warning sticker located on back panel.

Model: MS341700TX

Denver Media Console  
Southern Enterprises, Inc

600 Freeport Parkway, Suite 200

Coppell, Texas, 75019