


Hello Kitty Hand Mixer

Item # APP-71209

Owner's Manual

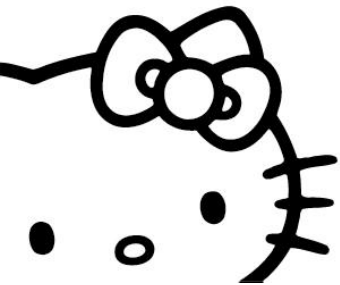

HELLO KITTY®

Important Safety Precautions

When using any electrical appliance, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR HAND MIXER.
2. Do not twist the power cord or wrap it around the appliance, as this may cause the insulation to weaken or come apart.
3. To avoid any risk of electrical shock, do not immerse the cord or plug into water or other liquids.
4. Close supervision is necessary when using this appliance near children, or the infirm.
5. Avoid contact with moving parts. Keep hands, hair, clothing, spatulas, and other utensils away during operation to reduce the risk of injury to persons and/or damage to the device.
6. Do not operate this appliance if the cord or plug is damaged or if it malfunctions. If there is any damage of any sort, send the unit to the nearest authorized service center for examination, repair or adjustment. (ONLY technicians should open up the unit.)
7. Do not let the power cord hang over the edge of a table or counter. Do not let it touch any hot surfaces.
8. Do not leave this appliance unattended once powered on.
9. Do not use this appliance for other than its intended use.
10. Do not use this device in the immediate vicinity of bathtubs, washbowls, swimming pools, or other bodies of water where the likelihood of immersion exists.
11. Only connect this appliance to a power source with the same voltage, frequency and rating as listed on the device.
12. When not in use, or when cleaning or assembling your device, make sure to disconnect the power cable. When unplugging, do not yank on the cable, but instead pull the plug.
13. The use of accessory attachments not recommended or sold by the appliance manufacturer may cause injuries.
14. This appliance is for household use only. Do not use outdoors or for commercial purposes.

SAVE THESE INSTRUCTIONS. FOR HOUSEHOLD USE ONLY.

Other Important Safety Notes

1. After an extended period of continuous use, allow a few minutes of rest before the next use.
2. The mixer is factory lubricated and requires no further lubrication.
3. Other than cleaning, no additional maintenance or servicing of the appliance is required. Repairs when necessary must be performed by an authorized service technician.
4. If the power supply cord is damaged, it must be returned for replacement to a qualified technician in order to avoid a hazard.
5. Switch off the appliance before fitting or removing the beaters.

Polarized Plug

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **Do not modify the plug in any way.**

Introduction

Thank you for purchasing the APP-71209 Hello Kitty Hand Mixer. You can use this device for mixing, blending, beating and whipping. Please read this manual carefully FIRST in order to get the most out of your device.

Package Contents

1. Hello Kitty Hand Mixer
2. Two Chrome Beaters
3. Two Chrome Dough Hooks
4. Owner's Manual with Warranty Information


Specifications

Model no.: APP-71209

Power: 150W

Voltage Supply: AC120V, 60Hz

A Quick Look at Your Device

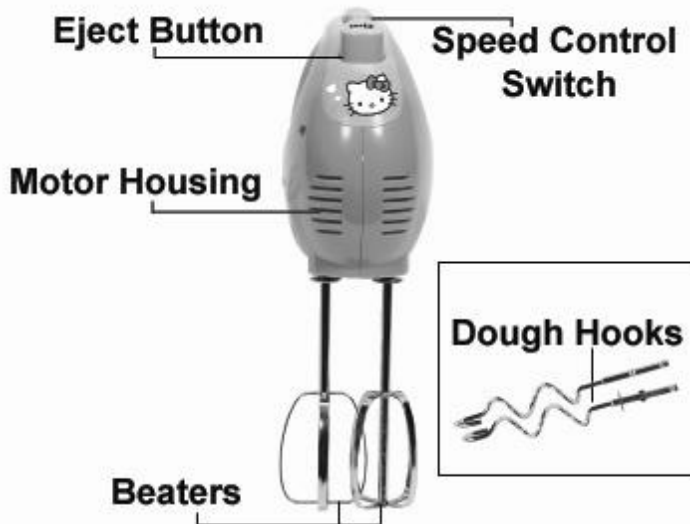

Using Your Hand Mixer

In order to get the best results when using your hand mixer, please follow the steps below:

1. Before using your mixer, clean the beaters and dough hooks in warm, soapy water. Rinse and dry thoroughly before using the hand mixer.

CAUTION: DO NOT IMMERSE THE MOTOR HOUSING IN ANY LIQUID. CLEAN THE MOTOR HOUSING WITH A DAMP CLOTH.

2. Before assembly, ensure that the unit is not plugged into a power socket. Insert the beaters or dough hooks into the openings in the bottom of the motor housing. Press and rotate the beaters or dough hooks slightly to make sure that they are locked in place. You will feel a click once the beaters or dough hooks are engaged.

3. Put ingredients into a bowl.

4. Plug in your mixer and select the desired speed.

5. Lower the beaters or dough hooks into the ingredients.

Note: It is recommended that you keep the switch at one speed for a few seconds before changing to another speed.

CAUTION: DO NOT LET THE APPLIANCE CONTINUOUSLY RUN FOR MORE THAN 3 MINUTES. AFTER 3 MINUTES OF USE, LET THE MOTOR COOL DOWN FOR 10 MINUTES THEN USE IT AGAIN.

6. If you need to scrape down the sides of the bowl during mixing, slide the Speed Control Switch to the "OFF" position before using a hand held scraper.

7. When mixing is complete, switch off and unplug the unit. Once it is unplugged you can manually pull out the beaters or dough hooks.

CAUTION: NEVER ATTEMPT TO PULL OUT THE BEATERS or DOUGH HOOKS WITHOUT POWERING OFF AND UNPLUGGING THE UNIT.

Speed Selection Guide

You can adjust the speed control switch in order to decrease or increase the speed at which the beaters rotate when preparing your meal. See below for more information on each speed and its function.

Speed 1: For Stirring

Use when stirring liquid ingredients or when mixing dry and liquid ingredients together alternately in a recipe. Use when preparing any pre-prepared or packaged instant puddings.

Speed 2: For Mixing

Use when a recipe calls for combining ingredients together. Use for quick breads or muffins or making sauces that require a brisk action, just enough to blend.

Speed 3: For Blending

Use when preparing cake mixes or for directions calling for medium speeds. Use to cream butter and sugar together.

Speed 4: For Beating

Use when preparing a frosting from a recipe or a package. Use when whipping cream for desserts and making smooth batters.

Speed 5: For Whipping

Use to mash potatoes in order to develop a light and fluffy texture. Use when whipping egg whites.

Cleaning and Maintenance

Other than the cleaning methods mentioned in this manual, no other servicing or maintenance of your device should be required. Repairs, if necessary, must be performed by an authorized service center.

Caution: Do not immerse the body of the mixer, its cord or its plug in water or any other liquid.

Before cleaning, when you are finished using your appliance, unplug the power cord from the wall outlet. In order to prevent food residue buildup, clean your hand mixer after each use.

Clean the body of the hand mixer with a damp cloth. To remove stubborn spots, wipe surfaces with a cloth moistened in soapy water of a mild non-abrasive cleaner, and then dry thoroughly. Do not use solvents or harsh abrasives as these will damage the body of the mixer. Additionally, if they penetrate the body of the appliance it may cause a hazard.

To clean the beaters and dough hooks, first remove them from the body of the hand mixer. This can be done by pressing the eject button located on the top of the hand mixer. Beaters and dough hooks can be washed in hot soapy water, then rinsed using tap water and dried.

When it is not in use, store the body of the hand mixer in a clean, dry location such as a cabinet or a shelf. Store the beaters and dough hooks in a drawer.

Technical Support

For technical support issues please visit our website at www.sakar.com. You can find manuals, software and FAQ's at the website. Can't find what you are looking for? Fill out an online ticket and one of our technical support team members will answer questions or call 1-877-397-8200 in the U.S. or 0-800-917-4831 in the UK to access our technical support information on the phone.

Sakar Warranty Card

Sakar Warranty

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly **UNDER NORMAL USAGE**, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

What To Do When Service Is Required

When returning your defective product (postage pre-paid) for service, your package should include:

1. Copy of original bill of sale
2. A detailed written description of the problem.
3. Your return address and telephone number (Daytime)

MAIL TO ADDRESS BELOW:

In the U.S.

Sakar International
Attention: Service Department
195 Carter Drive
Edison, NJ 08817

In the U.K.

Sakar UK
2D Siskin Parkway East
CV3 4PE, UK

You may also visit www.sakar.com for further assistance if necessary or call our technical support department toll free at 1-877-397-8200 in the US, or 0-800-917-4831 in the UK.

This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference , and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates. Uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions. May cause harmful interference to radio or -television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/ TV technician for help.

A00-070713

©1976, 2012 SANRIO CO., LTD.

© 2012 Sakar International, Inc. All rights reserved.

All other trademarks are the property of their respective companies