

Assembly & User Instructions

Memphis 42000 Btu Heat Focusing Patio Heater

These instructions are for your safety. Please read them thoroughly before use and retain them for future reference



DANGER:

If you smell gas:

1. Shut off gas to the appliance.
2. Extinguish any open flame.
3. If odor continues, keep away from the appliance and immediately call your gas supplier or fire department.



WARNING:

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

An LP-cylinder not connected for use shall not be stored in the vicinity of the other appliance.



WARNING:

For Outdoor Use Only.




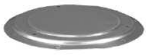















WARNING:










Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage.

Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.

Parts Supplied

Ref	Description	Illustration	Qty	Ref	Description	Illustration	Qty
1	Base		1	9	Parasol side Panels		6
2	Upper Cylinder Chamber Supports		3	10	Parasol top panel		1
3	Lower Cylinder Chamber Supports		3	11	Hose and Regulator		1
4	Cylinder chamber Wall		1	12	Wheels		1
5	Cylinder Chamber Door		1	13	Legs		5
6	Cylinder Chamber Cover		1	14	Base plate		1
7	Support Pole		1	15	Reflector Handle		1
8	Lantern		1	16	Handle Receiver		1
				17	Reflector Bracket		1

Fixings Supplied

Ref	Description	illustration	Qty	Ref	Description	illustration	Qty
A	M8 x 10 Bolt		3	E	M8 Nut		2
B	M8 Large Washer Stainless Steel		3	F	M6x10 Bolt		6
C	M6x14 Bolt		29	G	M6x10 Dome Head		22
D	M6 Nut		22	H	M8 Washer		2
				I	M6x8 Bolt		9

Before You Start

- When you are ready to start, make sure that you have the right tools at hand, plenty of space and a clean dry area for assembly.

Assembly

- Please lay out all nuts and bolts and check lengths before assembly. It is recommended that the carton is cut open and spread out on the floor and used as a protective surface during assembly. Refer to the assembly diagrams as necessary.
- Important - while every precaution has been made in the manufacture of this product, care must be taken during assembly in case sharp edges are present.

Assembly step 1



Base



Wheels



Leg



M8 Nut (E)




M6X14
Bolts (C)



M8
Washer

-
1. Turn the base upside down and push all wheels into the holes provided.
Note: Wheels will only fit in one bigger set of holes.
 2. Fix wheels in place by using 2 of the M8 Nuts (E) and M8 washer(H).
 3. Fix Legs using 3 of the M6 Bolts (C) per leg.
 4. Turn the base back over to prepare for the next step.

Base Over View

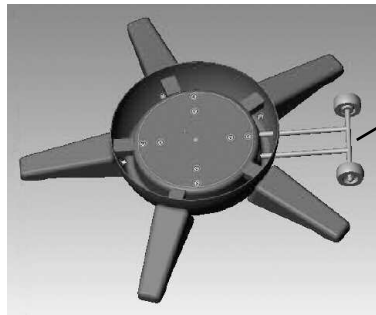

Wheels

Assembly step 2




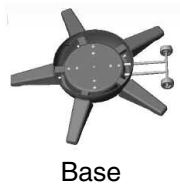
M6 x 8
Bolt (I)



M6 x 14
Bolt (C)



Base
Plate





Lower cylinder
chamber
supports



Upper cylinder
chamber
supports

- 1 Fix base plate to base using 2 M6x14 (C) Bolts.
- 2 Fix lower cylinder chamber supports to the corresponding letters on the base of heater using 6 of the M6x14(C) Bolts. Finger tighten only at this stage.
- 3 Slide upper cylinder chamber supports over the lower chamber supports and tighten into place using 6 M6x8 (I) Bolts.

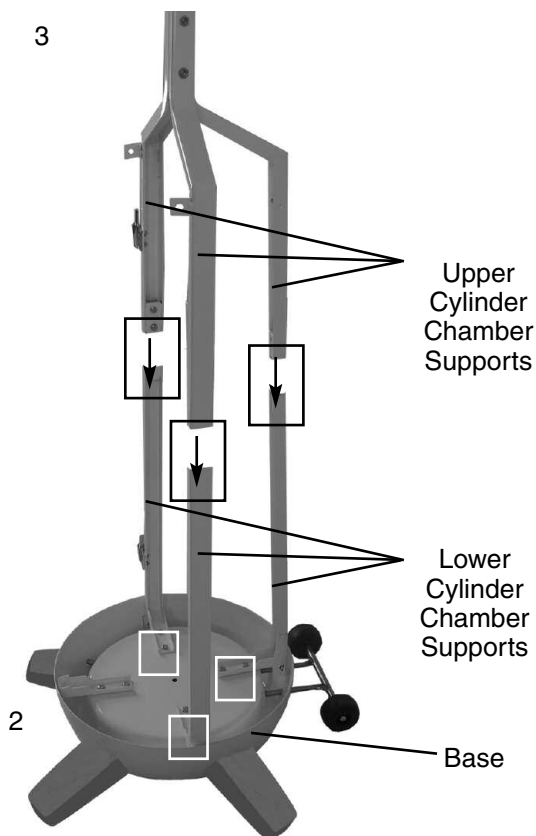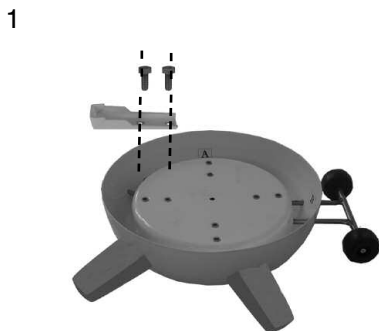

Assembly step 3



Cylinder Chamber Wall



M6 x 10 Dome Head Bolt (G)




M6 Nut (D)



M6x10 Bolt (F)

Fix cylinder chamber wall to cylinder chamber supports using 4 of the M6 x 10 Dome Head Bolt (G) and M6 Nut (D) and 2 of the M6x10 Bolt (F) as shown. Finger tighten only at this stage.

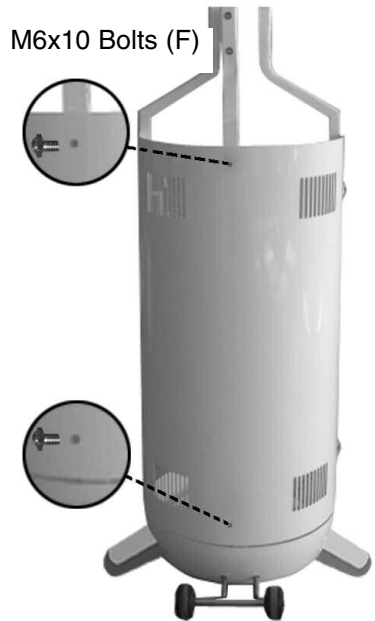

Assembly step 4




M6 x 14
Bolt (C)



Support Pole

Fix support pole to cylinder chamber supports as shown using 6 of the M6 x 14 (C) Bolts. Finger tighten to locate and then tighten securely.

Tighten all bolts that are fitted at stages 2 and 3.

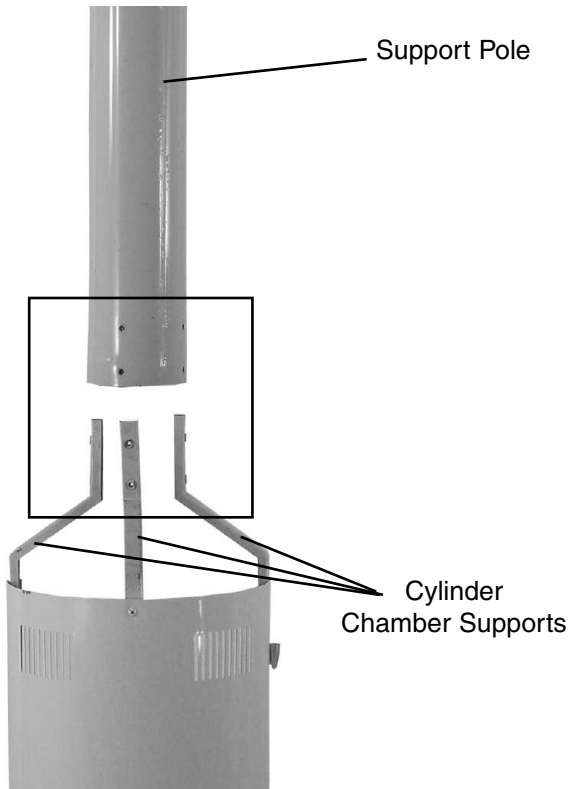

Assembly step 5



M6 x 8
Bolt (l)





Cylinder
Chamber Cover



Cylinder
Chamber Door

-
- A. Secure cylinder chamber cover to support legs as shown using 3 of the M6 x 8 (l) Bolt.
 - B. Fit door in position as shown in diagram.

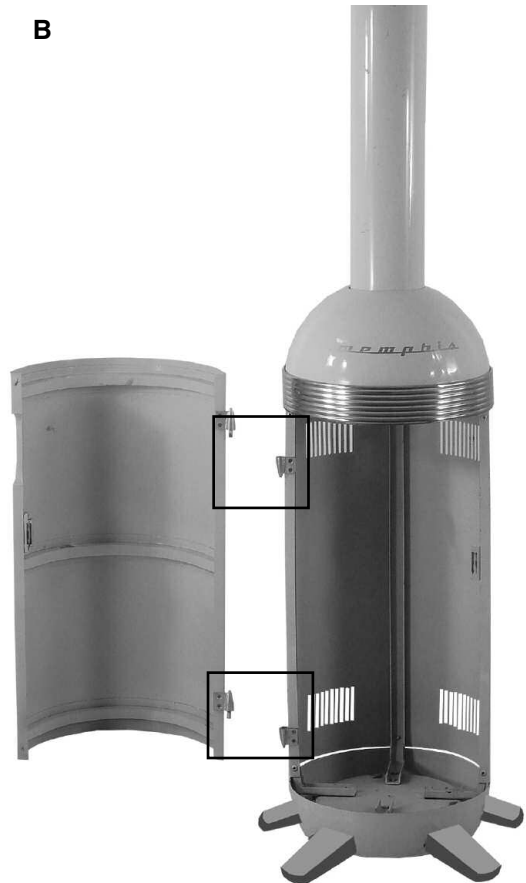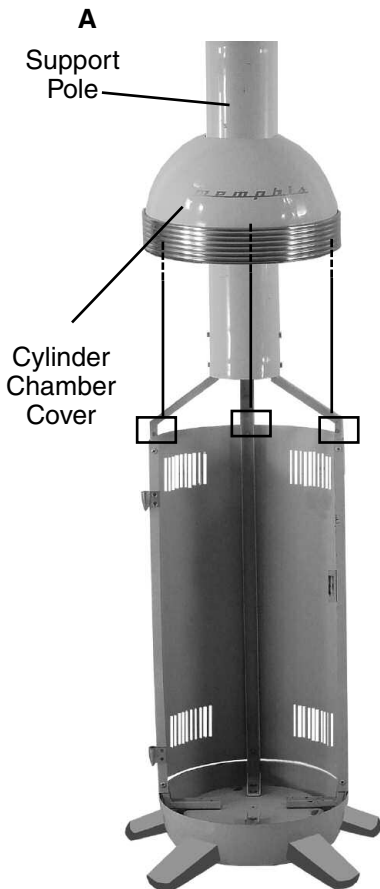


Assembly step 6




Lantern Hose & Regulator

Feed the gas hose through the support pole

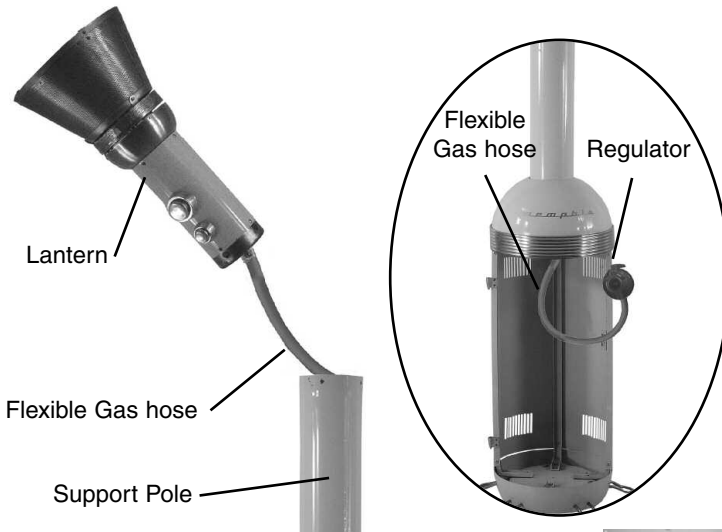

Connect the regulator to the LP gas cylinder by screwing onto the cylinder valve. Turn clockwise to tighten securely. The cylinder should be located in the cylinder chamber as shown.

NB: The cylinder must be orientated in this way to provide vapor withdrawal.

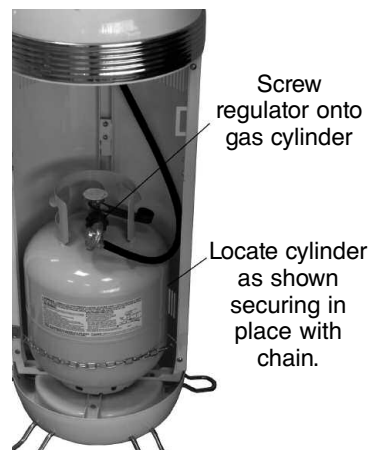

Assembly step 7



M6 x 8
Bolt(F)

To check patio heaters for leaks




To be performed in a well ventilated area. Lie heater down on the floor as shown below. Confirm all control knobs are in the off position. Open the gas control valve on the bottle or regulator.

Check for leaks by brushing a solution of 1/2 water and 1/2 soap over the gas system joints as shown in the hose connection and regulator connection.

NEVER USE AN OPEN FLAME to test for leaks at any time.

If bubbles form over any of the joints, there is a leak. Turn off gas supply and retighten all joints.

Repeat test. If bubbles form again, do not use the patio heater. Please contact your local gas dealer for assistance or email the factory info@uig.biz or phone (+353 1 287 3797). Leak test annually and whenever the gas bottle is removed or replaced.

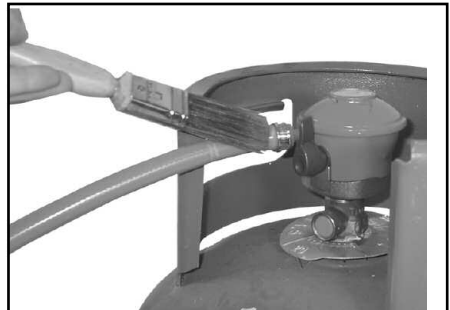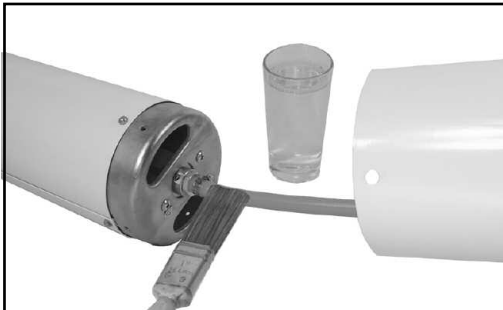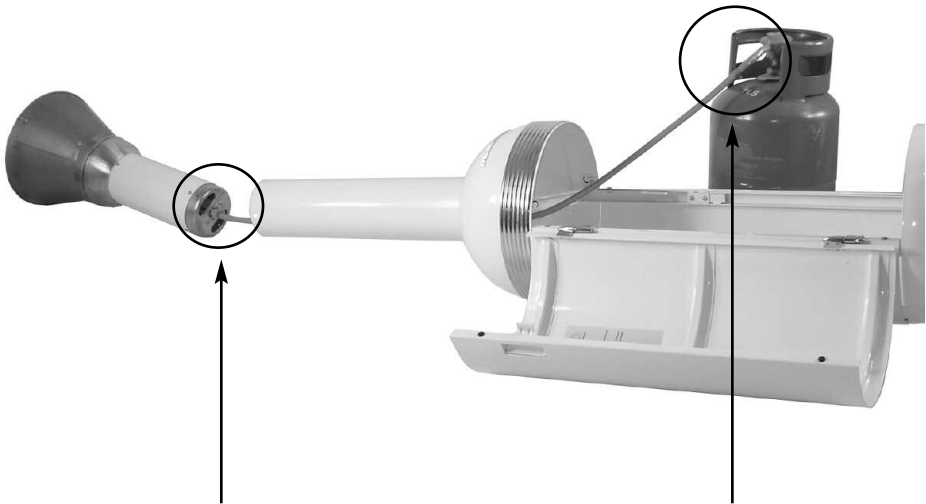

When leak test complete secure lantern to top of support pole with 4 of the M6x8 bolts (F).


Assembly step 8



Reflector handle

Fitting reflector handle

1

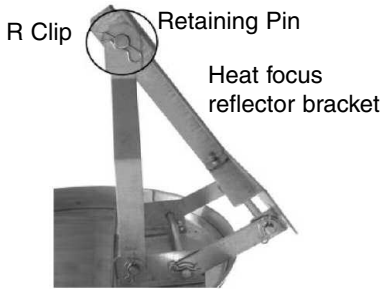

Remove R clip and retaining pin

2



Fit reflector handle

3




Secure with retaining pin and R clip.

Assembly step 9



Loosely screw parasol side panels together overlapping as shown, with 18 bolts and nuts (D,G), fix the top panel to the top of assembled side panels. Tighten all nuts. Fix assembled parasol onto top of Heat Focusing Reflector Bracket with bolts (A) and Washer (B).

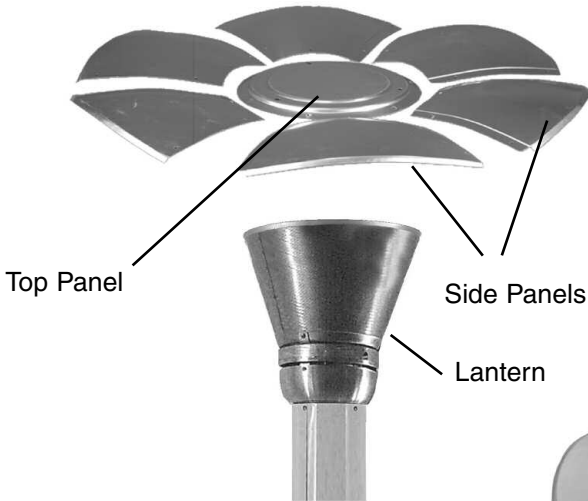

Use the reflector handle to adjust the degree of reflector tilt.



For all appliances:

- The heater, when installed, must be electrically grounded in accordance with local codes or, in the absence of local codes, with the National Electrical Code, ANSI/NFPA 70, or the Canadian Electrical Code, CSA C22.1.
- Certain materials or items, when stored under the heater, will be subjected to radiant heat and could be seriously damaged.
- Inspect the visible portion of the hose before each use of the appliance. When portions of the hose are located within the confines of the heater post, instructions to inspect the entire hose are located within the confines of the heater post, instructions shall also include the proper procedure for leak checking the connections upon re-assembly.
- Children and adults should be alerted to the hazards of high surface temperatures and should stay away to avoid burns or clothing ignition.
- Young children should be carefully supervised when they are in the area of the heater.
- Clothing or other flammable materials should not be hung from the heater, or placed on or near the heater.
- Any guard or other protective device removed for servicing the heater must be replaced prior to operating the heater.
- Installation and repair should be done by a qualified service person. The heater should be inspected before use and at least annually by a qualified service person. More frequent cleaning may be required as necessary. It is imperative that control compartment, burners and circulating air passageways of the heater be kept clean.
- Keep the appliance area clear and free from combustible materials, gasoline and other flammable vapors and liquids.
- Do not obstruct the flow of combustion and ventilation air.
- Keeping the ventilation opening(s) of the cylinder enclosure free and clear from debris.
- Clean the appliance, including special surfaces, with recommended cleaning agents, if necessary.

An appliance may be installed with shelter no more inclusive than:

- a. With walls on all sides, but with no overhead cover.
- b. Within a partial enclosure which includes an overhead cover and no more than two side walls. These side walls may be parallel, as in a breezeway, or right angles to each other.
- c. Within a partial enclosure which includes an overhead cover and three side walls, as long as 30 percent or more of the horizontal periphery of the enclosure is permanently open.

The LP-gas supply cylinder to be used must be:

- a. Constructed and marked in accordance with the specifications for LP-gas cylinders of the U.S. Department of Transportation (DOT); or the Standard for cylinders, Spheres and Tubes for Transportation of Dangerous Goods and Commission, CAN/CSA-B339, as applicable;
- b. Provided with a listed overfilling prevention device; and
- c. Provided with a cylinder connection device compatible with the connection for the appliance.
- d. 20LP (9kg) cylinder. LPG capacity 4.7 gallons (17.8 litres) Cylinder Dimensions: Height 17.75 inches (451mm) and width 12.25 inches (311mm)
- e. The LP - gas cylinder used must include a collar to protect the cylinder valve.

A cylinder must be stored outdoors in a well-ventilated area out of reach of children. A disconnected cylinder must have dust caps tightly installed and must not be stored in a building, garage or any enclosed area. The pressure regulator and hose must be used and any replacement pressure regulator or hose must be those as specified by the manufacturer.

Do not store spare LP-gas cylinder under or near this appliance.

Never fill the cylinder beyond 80 percent full; and for appliances designed to use a CGA No. 791 Connection: 'Place the dust cap on the cylinder valve outlet whenever the cylinder is not in use. Only install the type of dust cap on the cylinder valve that is provided with the cylinder valve. Other types of caps or plugs may result in leakage of propane.

Leak Testing

- To be performed in a well ventilated area.
- Confirm all control knobs are in the off position.
- Open the gas control valve on the bottle or regulator.
- Check the leaks by brushing a solution of 1/2 water and 1/2 soap over the gas system joints, including all valve connections, hose connections and regulator connections.
- **NEVER USE AN OPEN FLAME** to test for leaks at any time.
- If bubbles form over any of the joints, there is a leak.
- Turn off gas supply and retighten all joints.
- Repeat test. If bubbles form again, do not use the patio heater. Please contact your local gas dealer for assistance or the helpline stated in this manual.
- Leak test annually and whenever the gas bottle is removed or replaced.

Gas and Regulator

- The gas hose must be connected in accordance with these instructions. When installed correctly all parts of the hose should be contained within the Patio Heater pole and gas cylinder chamber. No part of hose should be outside of the Patio heater body where it could be a trip hazard or could be accidentally damaged.
- This appliance is for propane use only.
- See instructions supplied with regulator for correct use and attachment.
- Gas bottles should never be stored on their side.
- Never store gas bottles indoors.
- **This appliance is supplied with a propane regulator which must only be used for propane gas. NEVER use an adjustable regulator with this appliance.**
- Please consult your gas dealer for the most suitable gas bottles for your regulator.

Siting Instructions

- This appliance is for **OUTDOOR USE ONLY** and should be placed in a well ventilated area.
- A well ventilated area must have a minimum of 30% of its surface area open. (Surface area is defined as the total surface of the walls surface.)
- The sides of the appliance should **NEVER** be closer than 24 inches (0.6m) from any combustible surface.
- Keep this appliance away from any flammable materials!
- Important - Make sure the gas bottle is placed level within the base.
- Should you need to change the gas bottle, confirm the gas supply is turned off at the regulator or bottle / cylinder valve, and there are no sources of ignition (cigarettes, open flame, sparks, etc.) near before proceeding.
- For additional safety if required, fix heater securely through the holes in base to a sound surface (fixings not supplied).
- Inspect the gas hose to ensure it is free from any twisting or tension. The hose should hang freely with no bends, folds, or kinks that could obstruct free flow of gas. Always inspect the hose for cuts, cracks, or excessive wear before use. If the hose is damaged, it must be replaced with hose suitable for use with LPG and meet the national standards for the country of use.





Connecting to the cylinder

- Confirm all control knobs are in the off position.
- Connect the regulator to the gas bottle according to your regulator and bottle dealers instructions.

Use Instructions

Before proceeding make sure you understand the warnings section of this manual.


Lighting instructions:

- Turn on gas supply at cylinder. 
- Push dial in and turn to position  . 
- While dial is held pressed in at position , press spark button repeatedly to ignite the burner.
- Hold dial in for at least 10 seconds to ensure heater stays lit.
- If burner does not light after holding dial in for 20 seconds wait 5 minutes and try again.
Do not continuously hold the dial in as you may cause a build up of gas.
- In windy conditions shield from wind to ensure easy lighting and hold dial in for at least 20 seconds to ensure heater stays lit.
- Turn control dial to high or low flame position as required.
- Correct operation of the burner is indicated by a predominantly blue quiet flame.




If the piezo sparker fails you can light your patio heater using a match.

To light Patio Heater with match:

1. Place lit match through the gap below the burner mesh and wind guard.
2. Turn the control dial to the  position. After burner ignites keep control dial held in for 10 seconds to ensure burner stays lit and then release.
3. If the burner does not light after holding the control dial in for 20 seconds with the lit match in position, remove the match, turn the control dial to the off position, wait 5 minutes and then repeat.



To Turn Off:

 
 
- Push dial in and turn to position .
- Turn the gas off and disconnect at the cylinder when not in use.

Flame Characteristic

The flame pattern at the burner mesh should be visually checked whenever the heater is operated. Normally the burner flame is blue with yellow flame at the top.

The Burner mesh will become red hot.

If flames extend beyond the surface of the burner mesh, or the phenomena of flame lift or light back, or black spot is accumulating on the burner mesh or reflector, the heater should be turned off immediately. The heater should not be operated again until the unit is serviced or repaired.



Care and Maintenance

- Regularly clean your patio heater between uses and especially after extended periods of storage.
- Ensure the heater control is turned fully to the off position. the gas supply is shut off at the regulator or bottle / cylinder valve, and the heater and its components are sufficiently cool before cleaning.
- Never douse the heater with water when its surfaces are hot.
- We recommend that servicing of this appliance should be performed either after every 100 hours of use or annually, whichever is achieved soonest.

Fixings

All screws and bolts, etc, should be checked and tightened on a regular basis.

Storage

- Do not leave the patio heater exposed to outside weather conditions or stored in damp moist conditions.
- To save space during long-term storage, the reflector can be removed. Take care to ensure the shape of the reflector is not damaged or deformed, as this will affect performance.

- When using the heater after extended periods of storage, re-attach the reflector. The heater should never be operated without the reflector in place.
- If the heater is to be stored indoors, the gas bottle must be disconnected and left outside. In a dry, well-ventilated area, away from any sources of heat or ignition.
- Do not let children tamper with the bottle.

Service

If your heater needs maintenance or is not working properly, please contact your local authorized agent for service. It is a necessity to contact an authorized source for replacement of parts and/or servicing. This work must be carried out by a qualified gas technician. Spare parts may be obtained by contacting our spare parts department by email: info@uig.biz

WARNINGS

- This product is for OUTDOOR USE ONLY
- NEVER use indoors, in an enclosed area or below ground level.
- This appliance is intended for use with LPG bottled gas only.
- This appliance has been supplied with a PROPANE REGULATOR (only use with Propane gas).
- NEVER use an adjustable regulator with this appliance.
- This appliance features a flame failure and tilt device. In the event of a wind blowing the flame out or the unit being tipped over, the gas supply will be cut off from the cylinder. In this event, the knobs should be set to off and you should wait 5 minutes before re-lighting.
- Failure to read and follow these instructions could result in serious injury or damage to property.
- This product will become hot when in use – take care when touching.
- Keep children and pets at a safe distance from the unit when in use.
- DO NOT move this product when in use.
- Any modification of this appliance may be dangerous.
- DO NOT use heater where the reflector is within 24 inches (0.6m) of any flammable structure or surface.
- NEVER operate the heater with the top half covered (burner head, reflector, etc.)
- DO NOT leave this product unattended when in use.
- Always keep the cylinder level and vertical when positioning inside the base.
- ONLY use this appliance on a flat LEVEL non flammable surface or ground. Positioning, ensure the unit is a minimum of 24 inches (0.6m) from flammable items or structure from all sides and above.
- Always leak test the unit before use, annually, or after storage, when parts are replaced/serviced or if the gas cylinder is removed or replaced.
- When storing the appliance or gas cylinder, ensure they are away from flammable materials or liquids.
- Regularly check that the regulator seal and hose is fitted and that it is in good condition. Replace parts if necessary.
- Always follow the care and maintenance instructions – regularly maintain your appliance.
- Always replace worn parts – do not use the appliance if a leak, wear, or damage is found.
- DO NOT store or cover the appliance until fully cooled.
- DO NOT obstruct the ventilation holes of the cylinder housing.
- Always shut off the valve at the gas cylinder or the regulator before moving the appliance.
- In the event of high winds particular attention must be taken. Store the unit away or ensure it is at a safe distance from other items in the event that the unit is blown over.
- Only use with gazebo's specifically designed to be used with patio heaters.
- Ensure the heater is at a safe distance from glass and PVC doors and windows to stop damage from any heat build up.
- Read the warnings and instructions use before operation.

Warning: Do not leave the patio heater heat focusing reflector in the tilt position during rain or windy conditions or when the patio heater is not in use or unattended.

Always position the heat focus reflector in the full down position when not in use or during Wind/Rain conditions.



DURING RAIN/HIGH WIND CONDITIONS OR WHEN UNATTENDED

CAUTION

- It is normal for the heater to smoke during the first few minutes of use.
- Regularly clean your patio heater after every use.
- If you smell gas – turn off the appliance and extinguish all flames. If the odour continues, immediately contact your gas supplier.
- In the event of an uncontrollable fire, immediately disconnect the gas cylinder moving it away from fire and contact the fire services. **DO NOT PUT YOURSELF AT RISK!**
- Ensure aerosols are not used near this unit when in use.
- Ensure all packaging and plastic bags are disposed of safely.

Technical Data


Overall Height:	90" approx.
Overall Weight:	84lbs
Overall Width:	34" approx.
Heater Heat Input(ΣQ_n):	42000 Btu/h
Heater Gas Consumption:	2.0 Lbs per hour
Heater Injector Size:	0.07"
Setting Pressure:	11" per W.C
Regulator Outlet Pressure:	11" per W.C
Standard	ANSI Z83.26-(2007), CSA 2.37-(2007) Gas Fired Outdoor infrared Patio heaters
Gas Supply Pressure	Max.250 PSI, MIN.5 PSI

Specifications are subject to change without prior notice.

Universal Innovations,
Kilcoole Ind. Est.,
Kilcoole,
Co. Wicklow,
Ireland.

Shall be used only in a well ventilated space and shall not be used in a building, garage or any other enclosed area. Maybe installed in shelter no more inclusive than:

- With walls on all sides but with no overhead cover.
- Within a partial enclosure which includes an overhead cover and no more than two side walls. These side walls may be parallel, as in a breezeway, or at right angles to each other.
- Within a partial enclosure which includes an overhead cover and three side walls, as long as 30% or more of the horizontal periphery of the enclosure is permanently open.

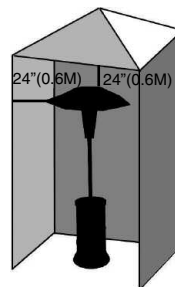

Warranty

Keep these instructions for future reference. The patio heater has been manufactured under the highest standards of quality and workmanship. We warrant to the original consumer purchaser that all aspects of this product will be free of defects in material and workmanship for 1 year from the date of purchase. A replacement for any defective part will be supplied free of charge for installation by the consumer. Defects or damage caused by the use of other genuine parts are not covered by this warranty. This warranty shall be effective from the date of purchase as shown in the purchaser's receipt.

This warranty is valid for the original customer only and excludes product damage due to shipment or failure which results from alteration, product abuse or product misuse whether performed by a contractor, service company, or consumer. We will not be responsible for labor charges and/or damage incurred in installation, repair or replacement, nor for incidental or consequential damage.

Contact: info@uig.biz **Tel:** +353 1 2873797