




Item #000-000

Model #13H-001-5DGF

USE AND CARE GUIDE

MADISON 5PC SHUTTER BACK DINING SET

45" StoneHenge Round Dining Table

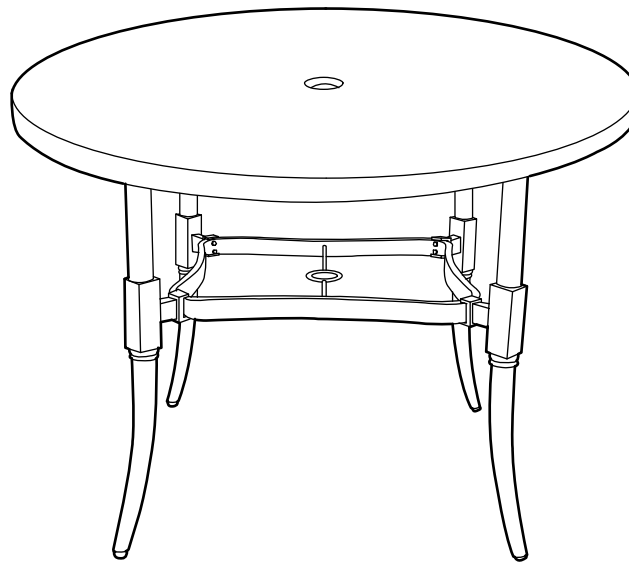

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8.00 a.m. - 6.00 p.m., EST, Monday - Friday

1-877-527-0313

HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this dining set. We Strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents

Table of Contents.....	2	Pre-installation.....	3
Safety Information.....	2	Planning Installation	3
About Symbols	2	Tools required	3
Warranty	2	Hardware Included.....	3
5 Year Frame Limited Warranty, 1 Year Table Top Limited		Package Contents	4
Warranty / 1 Year Fabric Limited Warranty	2	Assembly	5
What Is Covered.....	2	Operation	7
What Is Not Covered.....	2		

Safety Information



DANGER: Please keep children out of the assembly area during assembly.



WARNING: Do not sit or stand on the table.



CAUTION: Use the table on flat ground only.



IMPORTANT: Please check the tightness of bolts at least every 180 days.



NOTE: You can level the table with glides at the bottom of each leg.

Warranty

5 YEAR FRAME LIMITED WARRANTY / 1 YEAR TABLE TOP LIMITED WARRANTY / 1 YEAR FABRIC LIMITED WARRANTY

WHAT IS COVER

We warrant the frame to be free of manufacturing defects to the original purchaser for five years and fabric cushions for one year. Finish is warranted against peeling, cracking, and blistering for a period of one year. Top is warranted for one year against bowing, cracking or warping under normal use and maintenance.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, acts of nature, fire, freezing, and abusive use. Discoloration or fading of the finish or fabric or top is not covered. Glass tabletop breakage and corrosion or rusting of hardware are not covered. In addition, purchased parts are not covered under this warranty. Proof of purchase (dated register receipt) is required for warranty claims. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production. Warranty is to the original purchaser and is non-transferable. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have rights, which vary from state to state.

Contact the Customer Service Team at 1-877-527-0313 or email www.HomeDepot.com.

Pre-installation

PLANNING INSTALLATION

It will take 2 people about 10 minutes to complete the installation process.

TOOLS REQUIRED

 


Hex wrench (Included)


HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.



AA

 

BB



CC






DD

Part	Description	Quantity
AA	Bolt (M6x20)	8
BB	Bolt (M6x25)	8
CC	Washer	16
DD	Bolt cap	20

Pre-installation (continued)

PACKAGE CONTENTS

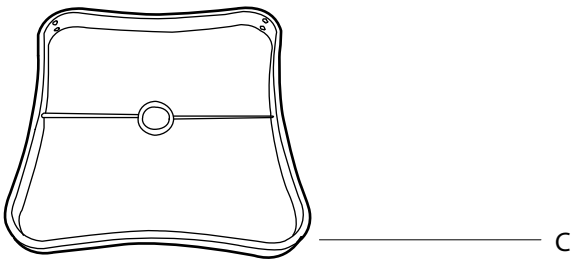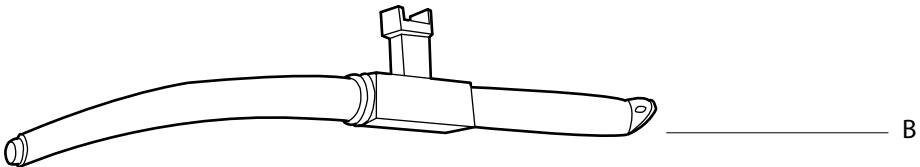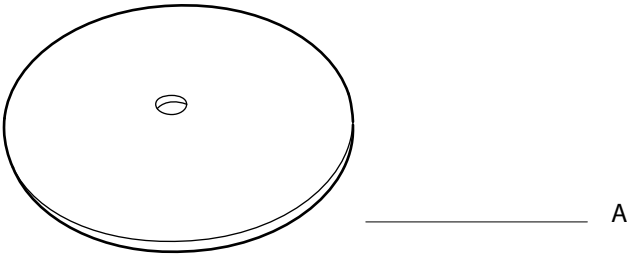

Part	Description	Quantity
A	Table top	1
B	Table leg	4
C	Leg connector bracket	1




Assembly

1 Assembling the table base

- Attach the leg connector bracket (C) to each table leg (B) with bolts (BB) and washers (CC) to form the table base.




IMPORTANT: Hand tighten the bolts (BB) only. Do not over tighten.

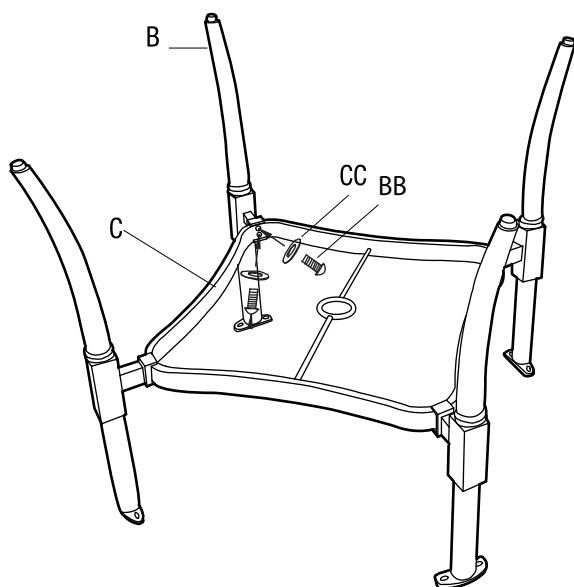

2 Attaching the table top

- Place the table top (A) upside down on a flat, smooth surface.
- Attach the table top (A) to the table base with bolts (AA) and washers (CC) using the hex wrench.
- Completely tighten all the bolts using the hex wrench.

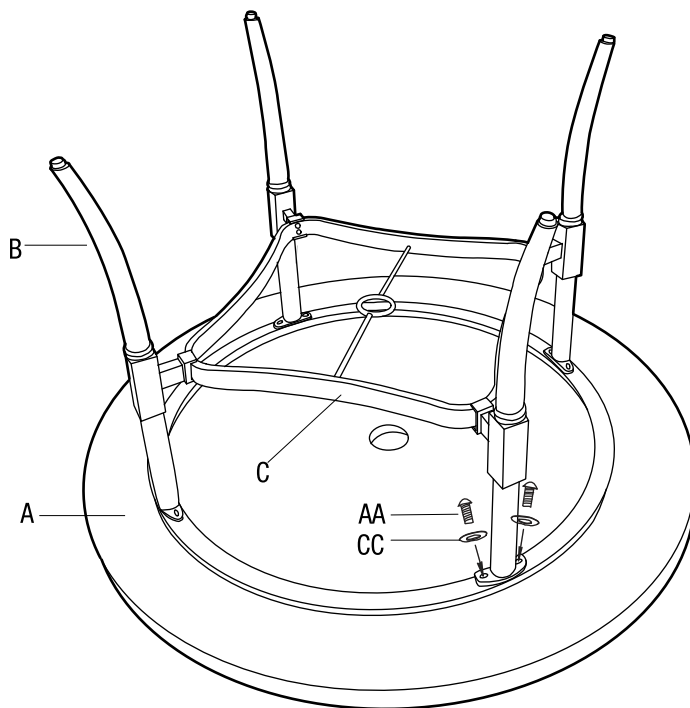


Assembly (continued)

3 Attaching the bolt caps

- Cover all the bolts with the bolt caps (DD).




IMPORTANT: Ensure all bolts are completely tightened before covering with bolt caps.

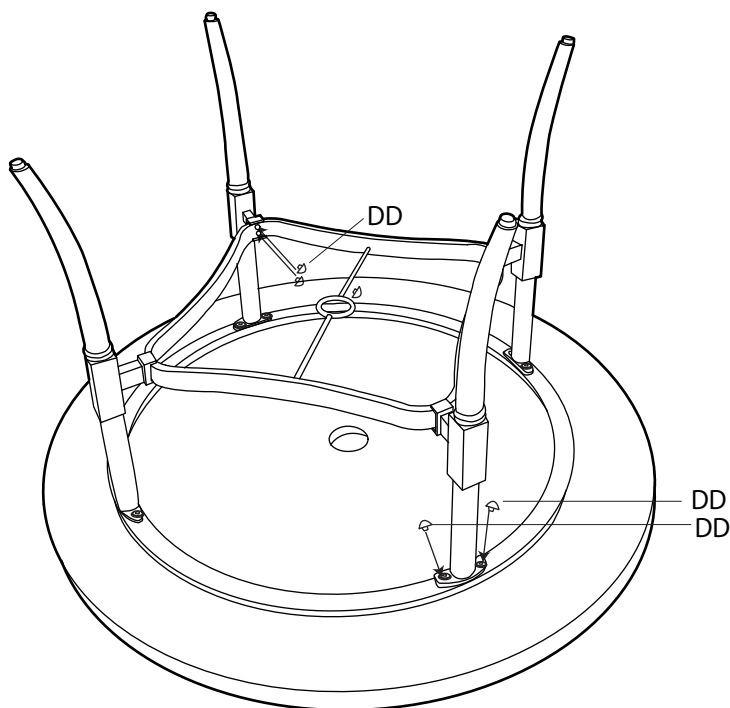

4 Leveling the table

- Turn over the table.
- Adjust the glides at the bottom of each leg to level the table.

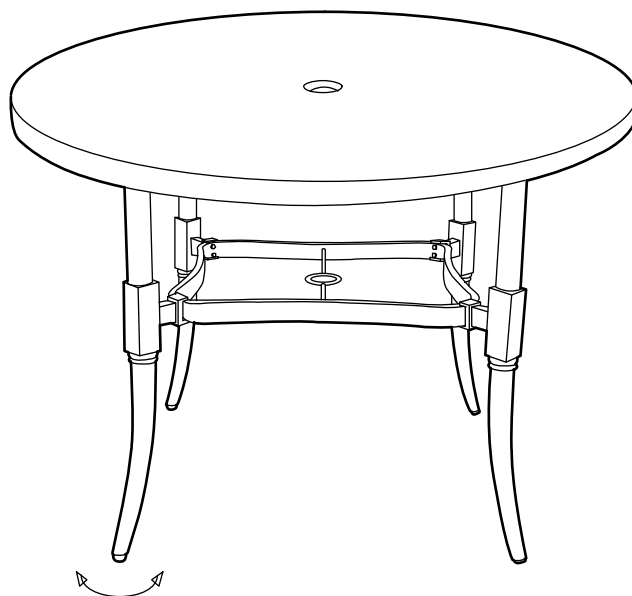

Operation

1 Using the table

- ☐ The table is for outdoor use together with 4 dining chairs .
- ☐ Place seat pads in dining chairs before use.

2 Checking the Stability

- ☐ Always put the table on flat ground.
- ☐ Ensure glides are not missing before each use.
- ☐ When necessary, level the table with the glides at the bottom of each table leg.

3 Load



WARNING: Do not sit or stand on the table.



WARNING: Do not put heavy objects on the table.



Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8.00 a.m. – 6.00 p.m., EST, Monday-Friday

1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.