



**ELECTRIC FIREPLACE HEATER**  
**ASSEMBLY AND OPERATION MANUAL**



**Riverstone Industries Corporation**  
**[www.RSIWW.com](http://www.RSIWW.com)**  
**Customer Service: 877-373-3078**

## **Important Safety Instructions**

### **PLEASE RETAIN THIS USER'S GUIDE FOR FUTURE REFERENCE**

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using this fireplace. Failure to follow these important safety instructions may cause fire, electric shock or damage. Following proper safety and operating instructions is the responsibility of the owner.
2. This fireplace heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. The grill directly in front of the heater outlet becomes hot during heater operation. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 10 feet from the front of the unit.
3. CAUTION: Extreme caution is necessary when any heater is used by or near children or invalids. Do not leave the heater operating and unattended.
4. Always unplug fireplace when not in use.
5. Do not operate any fireplace heater with a damaged cord or plug, or if the heater has malfunctioned, or if the fireplace has been dropped or damaged in any manner. Take fireplace to authorized service facility for examination, electrical or mechanical adjustment or repair.
6. Under no circumstance should this electric fireplace be modified. Parts having to be removed for servicing must be replaced by a certified repair center prior to operating this electric fireplace again.
7. Do not use outdoors or anywhere that it can get wet.
8. This fireplace is not intended for use in bathrooms, laundry areas and similar indoor locations. Never use this appliance near a bathtub or in the vicinity of water.
9. Do not place or operate the fireplace insert directly on carpet or a similar surface, which may restrict air circulation beneath the unit. The fireplace insert must be installed in the mantle before use.
10. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.
11. To disconnect fireplace, turn all controls to off, then remove plug from outlet.
12. When this appliance is installed, it must be electrically grounded in accordance with local codes with the current CSA C22.1 Canadian local codes for USA installation. Follow local codes and National Electrical Code, ANSI/NFPA NO. 70 and Canadian Code, CZ 22.2 No. 0.
13. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
14. To prevent a possible fire, do not block air intake or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
15. CAUTION: This appliance gets hot and it contains internal parts that could arc or spark. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored or where the unit will be exposed to flammable vapors. This fireplace should not be used as a drying rack for clothing. Do not hang Christmas stocking or decoration on the fireplace heater or mantle. Do not use near propane tanks.
16. Do not modify this fireplace. Use it only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.
17. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be No.16 AWG minimum size and rated not less than 1875 watts, and 3-wire cord with grounding type plug and cord connector.

18. Do not burn wood or other materials in this fireplace.
19. Do not strike fireplace glass.
20. Always use a certified electrician should new circuits or outlets be required.
21. Always use properly grounded, fused and polarized outlets.
22. Always use ground fault protection where required by electrical code.
23. Always disconnect power before performing any cleaning, maintenance or relocation of the fireplace.
24. When transporting or storing the fireplace and cord, keep in a dry place, free from excessive vibration and store so as to avoid damage.

**NOTE:** Procedures and techniques that are considered important enough to emphasize.

**CAUTION:** Procedures and techniques, which, if not carefully followed, will result in damage to the equipment or personal property or may cause personal injury.

**WARNING:** Procedures and techniques, which, if not carefully followed, will expose the user to the risk of serious injury, illness or death.

**WARNING:**

This is a 1500-watt heater and parts become hot when in use. Be sure to maintain a personal distance and keep any combustible material at least ten feet away from the heater. The area directly around and under the heater must be clear and free of any obstructions.

**DO NOT ALLOW CHILDREN TO OPERATE. KEEP CHILDREN AND PETS AWAY FROM HEATER AND CONTROLS.**


**CHOOSING LOCATION FOR YOUR FIREPLACE:**

Your new freestanding electric fireplace may be installed anywhere in your home. However, when choosing a location ensure that the general safety instructions are followed. For best results, install out of direct sunlight.

**NOTE:** A complete electric fireplace heater should consist of two parts, the wooden mantle and the fireplace heater. It is not recommended to use the fireplace heater without the wooden mantle. Unpack the fireplace heater and mantle. Remove all packing materials.



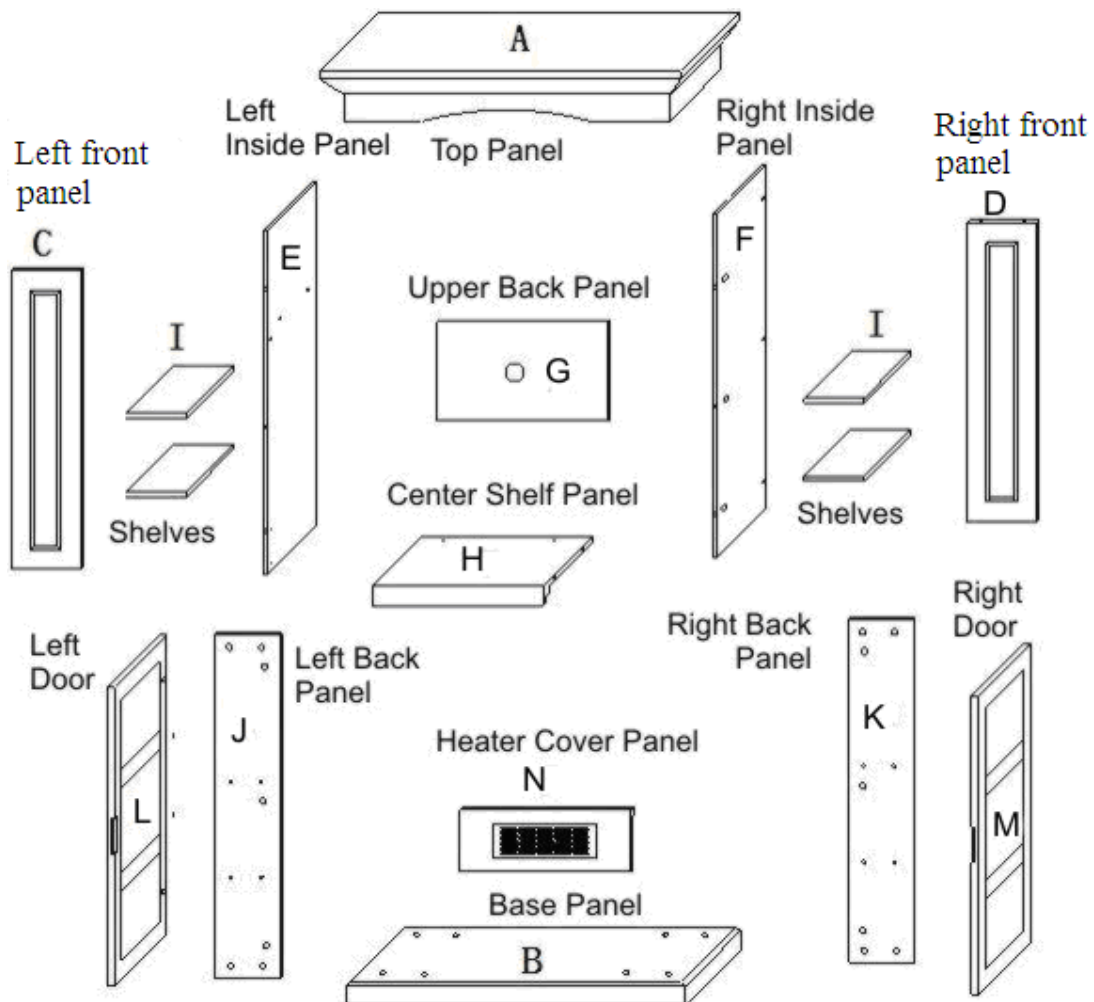


## PARTS LIST:

A) Top Panel	1pc
B) Base Panel	1pc
C) Left front panel	1pc
D) Right front panel	1pc
E) Left Inside Panel	1pc
F) Right Inside panel	1pc
G) Upper Back Panel	1pc
H) Center Shelf Panel	1pc
I) Shelves	4pcs
J) Left back side panel	1pc
K) Right back side panel	1pc
L) Left door	1pc
M) Right door	1pc
N) Heater cover panel	1pc




MANTLE FRONT VIEW

**HARDWARE LIST:**

1	Hinge		4 pcs
2	Cam Lock Screw		48 pcs
3	Cam Lock Nut		48 pcs
4	Small Mounting Screws		8 pcs
5	Large Mounting Screws		16 pcs


### **ASSEMBLY:**

Step 1: Insert 48pcs Cam Lock Screws (2) into panels A, B, C, D, E, F, H, J, & K. See Fig.1.

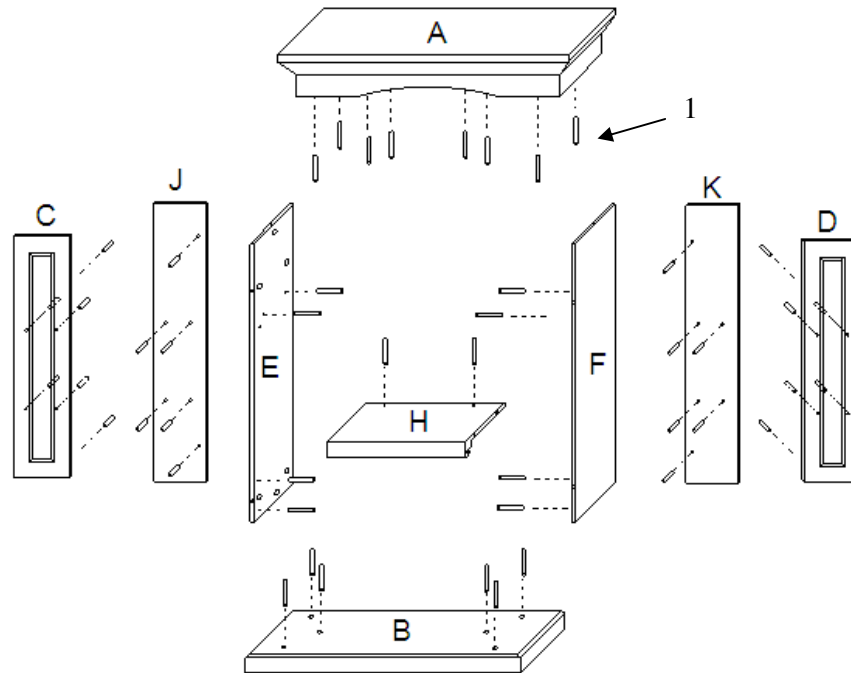


**Fig. 1**

Step 2: Use 4 Cam Lock Nuts (3) to attach Left & Right Front Panels (C & D) and Left & Right Inside Panels (E & F). Be sure the “+” on the cam lock faces out to enable tightening with Phillips head screwdriver. See Fig.2

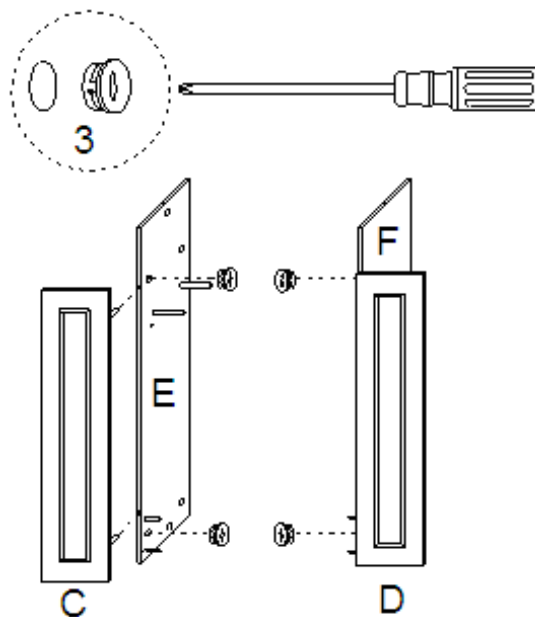

**Fig. 2**

Step 3: Use 8 Cam Lock Nuts (3) to attach Left & Right Front Panels (C,D) to Shelves (I). See Fig.3.

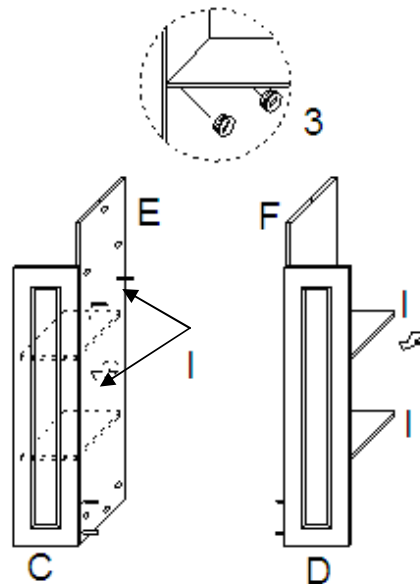


**Fig. 3**

Step 4: Use 4 Cam Lock Nuts (3) to attach Left & Right Back Panels (J, K) and Left & Right Inside Panels (E, F).

Use 8 Cam Lock Nuts to attach Left & Right Back Panels to Shelves (I).


See Fig.4.

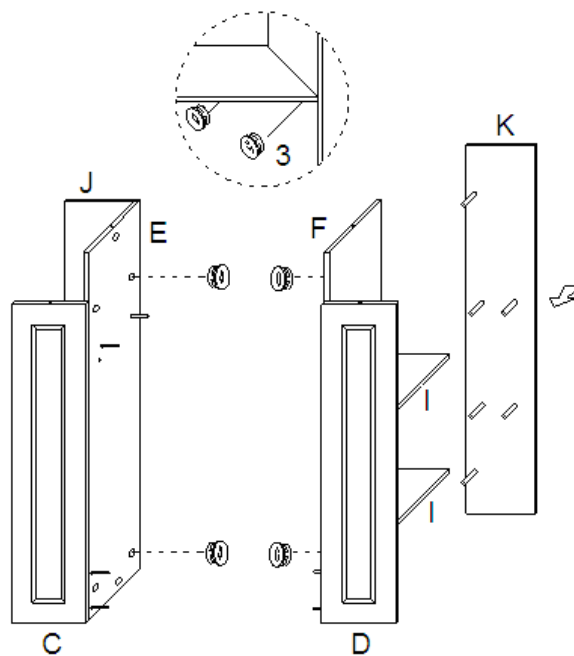


**Fig. 4**

Step 5: Use 4 Cam Lock Nuts (3) to attach the Heater Cover Panel (N) and Center Shelf Panel (H) to the Left Inside Panel (E). See Fig.5.

Use 4 Cam Lock Nuts (3) to attach the Heater Cover Panel (N) and Center Shelf Panel (H) to the Right Inside Panel (F). See Fig.6

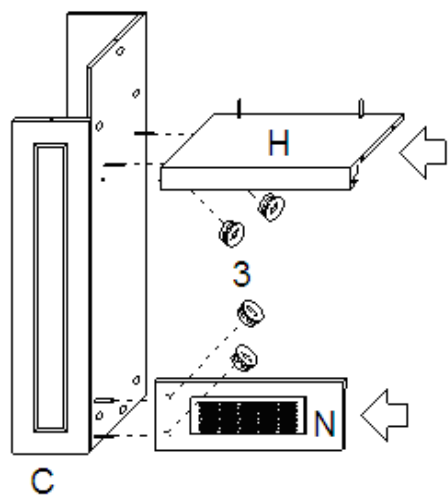


**Fig. 5**

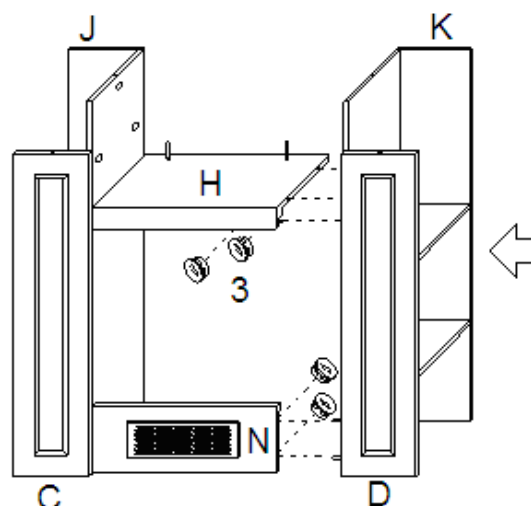

**Fig. 6**


Step 6: Use 6 Cam Lock Nuts to attach Left and Right Front Panels (C,D), Left & Right Back Panels (J,K) and Left & Right Back Inside Panels (E,F) to the Base Panel (B). See Fig. 7.

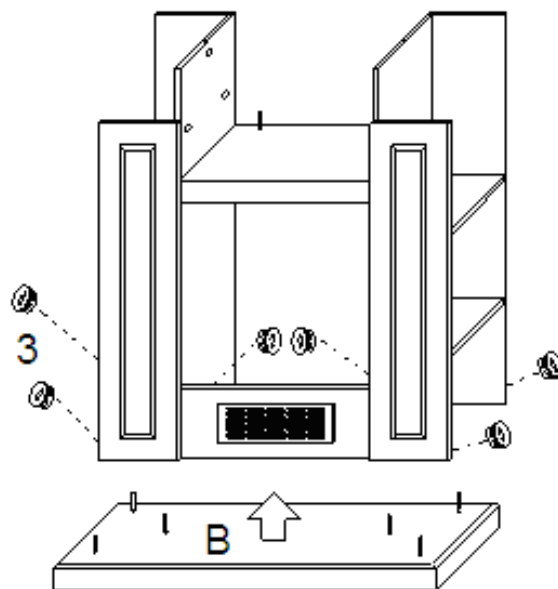

**Fig. 7**




Step 7: Use 2 Cam Lock Nuts (3) to attach Upper Back Panel (G) and Center Shelf Panel (H). See Fig.8 (note illustrative figure shows the partially assembled mantle as viewed from the back).

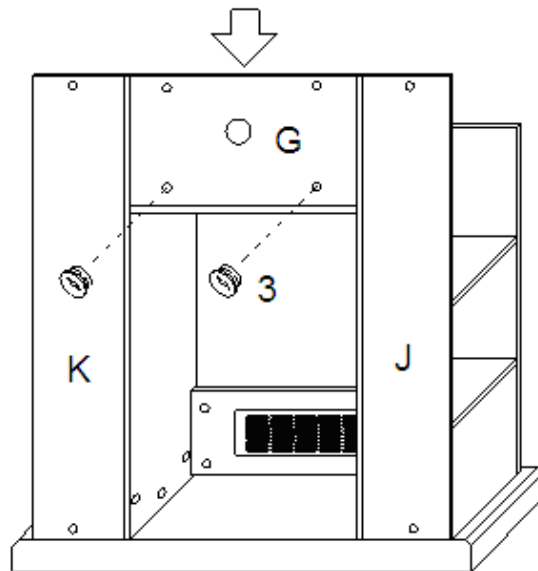


**Fig. 8**

Step 8: Attach 4 Hinges (1) to the Left & Right Doors (L & M) using 8 Large Mounting Screws (5). See Fig.9.  
Attach the Hinges (1) to the Left & Right Back Panels (J & K) using 8 Large Mounting Screws (5).  
See Fig.10.

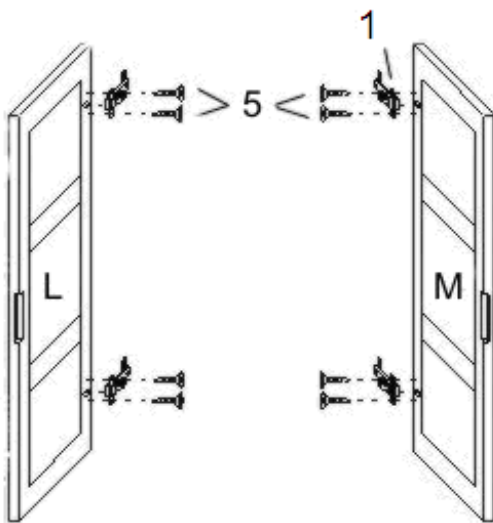


**Fig. 9**

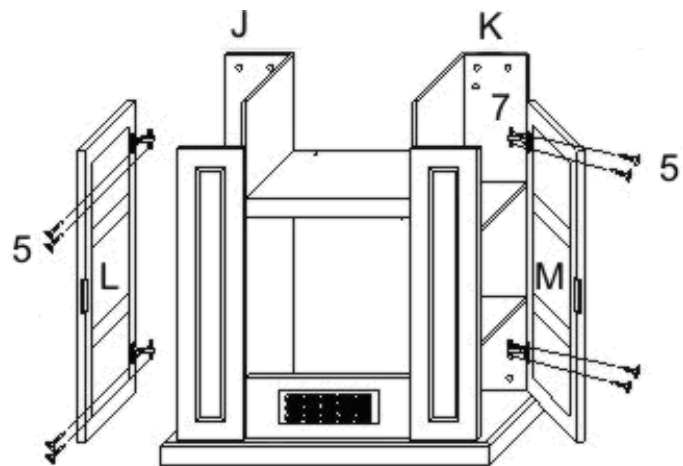


**Fig. 10**

Step 9: Assemble the Top Panel (A) to the partially assembled mantel using 8 Cam Lock Nuts (3). See Fig.11&12

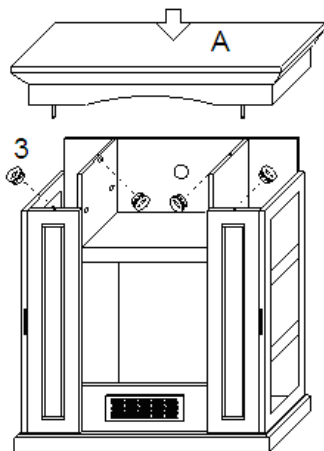

**Fig. 11**

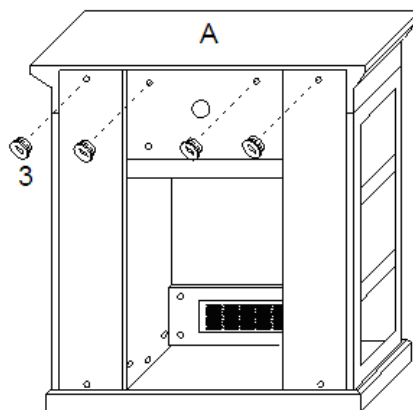


**Fig. 12**

Step 10: Place the Heater Insert into the back of the assembled mantel. Secure into place using 8 Small Mounting Screws (4). See Fig.13&14.




**Fig. 13**

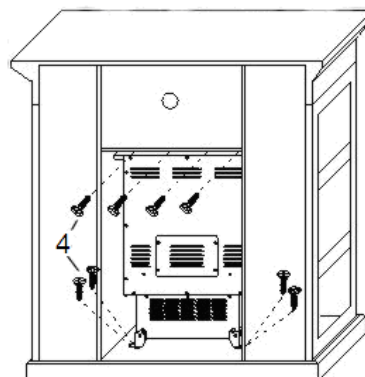


**Fig. 14**

Step 11: ASSEMBLY COMPLETE

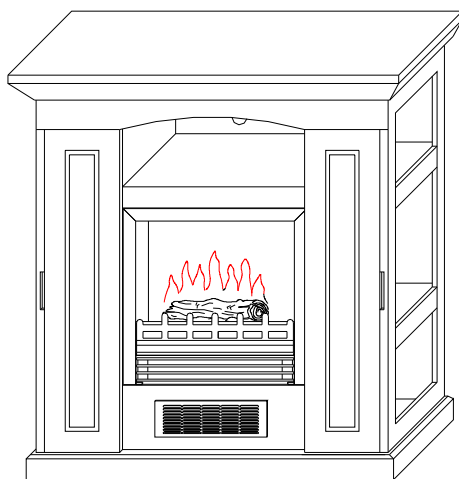

## **OPERATING INSTRUCTIONS:**

1. The round dial on the far left is the thermostat that automatically turns the heaters on and off to maintain a constant temperature. Turn the thermostat dial to the right to increase the desired temperature and the left to lower it.
2. The switch on the left turns the heater on at 1500 watts.
3. The middle switch turns the heater on at 750 watts.
4. The right switch is the main power switch "O/I".
5. The round dial on the right adjusts the intensity of the simulated flame effect. Turn this dial until desired flame effect is reached.

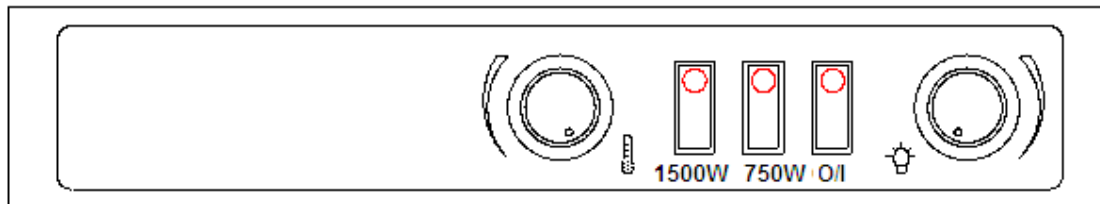

**WARNING:** Disconnect power before attempting any maintenance or cleaning to reduce the risk of fire or electric shock.

## **CLEANING:**

Before cleaning any parts of the fireplace make sure to first turn off the controls and then unplug the unit from power source.

**CAUTION:** Wait until the unit has completely cooled before attempting any cleaning.

Cleaning glass door: Remove dust with clean dry cloth. Remove fingerprints and other marks from glass door by using a clean damp cloth. Do not use abrasive cleaners or spray liquids on glass door surfaces. Metal and metal painted parts should be cleaned with clean damp cloth only. Do not use abrasive cleaners or spray liquids on this surface.

## **REPLACING THE BULB:**

There is one 40-watt light bulb located under the log-set bed. Remove the 4 screws on the cover located on the back of fireplace and then remove the rear cover of the unit.

**CAUTION:** The bulb in your unit can become extremely hot. Allow at least 15 minutes between turning off the unit and removing the light bulb to avoid hot bulb coming in contact with the skin.

To remove bulb: Hold socket and pull the old bulb out.

To replace bulb: Hold socket and push in the new bulb.

