

## User manual

### English

# **SAFTY PRECAUTIONS**

Read all of the instructions before using this appliance. When using this appliance, always exercise basic safety precautions, including the following:

1. Use this appliance only for its intended purpose as described in this use and care guide.
2. this freezer must be properly installed in accordance with the installation instructions before it is used. See grounding instructions in the installation section.
3. Never unplug your freezer by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
4. Repair or replace immediately, all electric service cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length, the plug or the connector end.
5. Unplug your freezer before cleaning or before making any repairs. Note: if for any reason this product requires service, we strongly recommend that a certified technician performs the service.
6. Do not use any electrical device or any sharp instrument in defrosting your freezer.
7. If your old freezer is not being used, we recommend that you remove the doors, This will reduce the possibility of danger to children.
8. After your freezer is in operation, do not touch the cold surfaces in the freezer compartment, particularly when hands are damp or wet. Skin may adhere to these extremely cold surfaces.
9. Do not refreeze foods, which have been thawed completely. You may safely refreeze frozen foods that have thawed if they still contain ice crystals or if they are still cold-below 40°F ” .

Pls note “...Thawed ground meats, poultry, or fish that have any off-odor or off-color should not be refrozen and should not be eaten. Thawed ice cream should be discarded. If the odor or color of any food is poor or questionable, discard it, the food may be dangerous to eat.”

“...Even partial thawing and re-freezing reduce the eating quality of foods, particularly fruits, vegetables, and prepared foods. The eating quality of red meats is affected less than that of many other foods. The eating quality of red meats is affected less than that of many other foods. Use refrozen foods as soon as possible, to save as much of its eating quality as you can.

10. This refrigerator should not be recessed or built-in an enclosed cabinet. It is

- designed for freestanding installation only.
11. Do not operate your refrigerator in the presence of explosive fumes.

**English**

## **SAVE THESE INSTRUCTIONS**

**For Future Reference Please**

### **DANGER**

 
Risk of child entrapment, Before you throw away your old refrigerator or freezer, take off the doors, Leave the shelves in place so that children may not easily climb inside.

English

## **TABLE OF CONTENTS**

	page
<b>Safety precautions.....</b>	<b>1</b>
<b>Parts and features.....</b>	<b>4</b>
<b>Installing your freezer.....</b>	<b>4</b>
Unpacking your freezer.....	4
Adjusting your freezer.....	4
Proper air circulation.....	5
Electrical requirements.....	5
Install Limitations.....	5
<b>Freezer Feature And Use.....</b>	<b>5</b>
Operating your freezer.....	5
General Features.....	6
Food storage baskets.....	6
Defrosting and draining.....	7
Food storage information.....	7
Normal operating sounds.....	8
<b>Proper freezer care and cleaning.....</b>	<b>8</b>
Cleaning and maintenance.....	8
Power interruptions.....	8
Vacation and moving care.....	8
<b>Troubleshooting.....</b>	<b>9</b>

## **PARTS AND FEATURES**

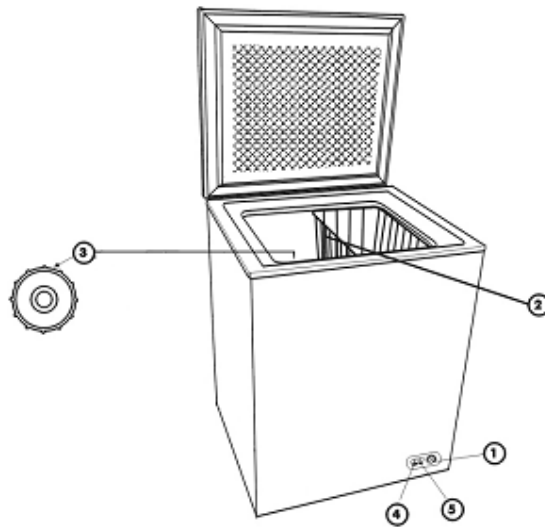

- |                                  |                                  |
|----------------------------------|----------------------------------|
| 1.temperature control adjustment | 4.power on indicator(red)        |
| 2.vinyl coated wire basket       | 5.compressor on indicator(green) |
| 3.inside drain dial              |                                  |

## **INSTALLING YOUR FREEZER**

### **Unpacking your freezer**

- Remove all packaging material. This includes the foam base and all adhesive tape holding the freezer accessories inside and outside.
- Inspect and remove any remains of packing, tape or printed materials before powering on the freezer.

### **Adjusting your freezer**

- your freezer is designed for freestanding installation only. It should not be recessed or built-in.
- place the freezer on a floor strong enough to support it fully loaded.
- When moving the freezer, never tilt it more than a 45-Degree angle. This could

- damage the compressor and the sealed system.
- If the freezer is tilted let it stand in an upright position for at least 24 hours prior to plugging. This is to allow the refrigerant to settle.

## **English**

### **Proper Air circulation**

- To assure your freezer works at the maximum efficiency it was designed for, you should install it in a location where there is proper air circulation, plumbing and electrical connections.
- The following are recommended clearances around the refrigerator:
  - Sides.....4”(102mm)
  - Top.....4”(102mm)
  - Back.....4”(102mm)

### **Electrical requirement**

- Make sure there is a suitable power outlet(115V,60HZ outlet) with proper grounding to power the freezer.
- Avoid the use of an extension cord because of potential safety hazards under certain conditions. If it is necessary to use an extension cord, we strongly recommend that a certified technician performs the service. And note the marked rating of the extension cord must be equal to or greater than the electrical rating of the appliance.

### **Install limitations**

- Do not install your freezer in any location not properly insulated or heated e.g. garage etc. Your freezer was not designed to operate in temperature settings below 55°F ahrenheit.
- Select a suitable location for the freezer on a hard even surface away from direct sunlight or heat source e.g. radiators, baseboard heaters, cooking appliances etc. Any floor unevenness should be corrected.

## **FREEZER FEATURES AND USE**

### **Operation your freezer**

- Once the freezer is in its proper place, plug it in an electrical outlet having 115V/60HZ. Turn on power switch. Power light will come on, the green ”run” light will be lit indicating that the freezer compressor is in operation.
- Set the temperature, on the temperature control knob,”1”being the warmest and

‘5’ being the coldest. Initially set the temperature on ‘3’. Place food inside the freezer. After using the freezer for 24 hours set the freezer to your desired setting. Further, note on the temperature control knob extra there is a chilling depart for the refrigerator.

## English

 
- In case you unplug your freezer or experience an electrical outage, allow 5 minutes before plugging it back in.

## General features

### Adjustable temperature dial:(see fig.#1)

Your freezer will automatically maintain the temperature level you select. The temperature control dial has ‘5’ grades.’1’ is the warmest, ‘5’ is the coldest. Further the freezer with a refrigerator function. Set the dial to ‘3’ and allow 24 hours to pass before adjusting the temperature to your needs.

**(note: if the freezer has been placed in a horizontal or titled position for any period of time wait 24 hours before plugging the unit in.)**

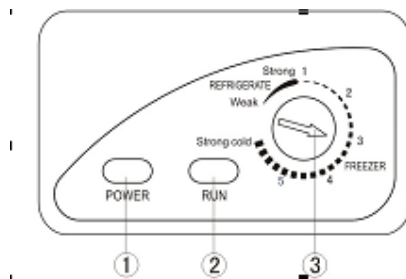

( fig.#1)

<b>Position</b>	<b>week → strong</b>	<b>1→2</b>	<b>2→3</b>	<b>3→4</b>	<b>4→5</b>	<b>≥5</b>	<b>Strong freezer</b>
<b>Temperature(°C)</b>	<b>10~-2</b>	<b>-2~-8</b>	<b>-8~-12</b>	<b>-12~-15</b>	<b>-15~-18</b>	<b>≤-18</b>	<b>Compressor Lasting operation</b>

## Food storage basket

- Your freezer has a basket. Removable baskets allow you to store food more accessibly or you can remove them if not needed. (see fig.#2)

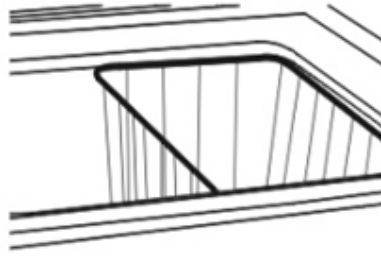 


fig. # 2

## English

### Defrosting and Draining

- Defrost whenever the frost becomes 1/4" thick. Never use a sharp or metallic instrument to remove the frost, as it may damage the cooling coils.  
(A punctured coil will void the warranty)
- Unplug the unit. Remove the drain plug from the inside of the freezer. Defrosting Usually takes a few hours. To defrost faster keep the freezer door open.
- For draining, place a tray beneath the outer drain dial. Turn the drain dial in a counter-clockwise direction to remove(see fig.#3) this will let the water-flow out into the tray. When finished, replace the drain dial and turn in a clockwise direction to close. **Note:** Monitor the container under the drain to avoid overflow.
- Wipe the interior of the freezer and replace the electrical plug in the electrical outlet.
- Reset the temperature control to the desired setting.



(fig.#3)

### Food storage information

#### Frozen food:

- Wipe containers before storing to avoid needless spills.
- Hot food should be allowed to cool before storing in the freezer. This will prevent unnecessary energy use.
- When storing meats, keep in the original packaging or rewrap as necessary.
- Proper freezer storage requires correct packaging. All foods must be in packages, which do not allow the flow of air or moisture in, or out. Improper storage will

result in order and taste transfer and will result in the drying out of the improperly packaged food.

- Follow package or container instructions for proper storage.

### **Packaging recommendations:**

Plastic containers with air tight lids

Heavy duty aluminum foil

Plastic wrap made from saran film

Self-sealing plastic bags

- Do not refreeze defrosted/thawed foods.
- It is recommend that the freezing date be marked on the packaging.

**English**

### **Normal operating sounds you may hear**

- Boiling water, gurgling sounds or slight vibrations that are the result of the refrigerant circulating through the cooling coils.
- The thermostat control will click when the transfer between freezer& refrigeration

## **PROPER FREEZER CARE AND CLEANING**

### **Cleaning and maintenance**

**Warning:** To avoid electric shock always unplug your freezer before cleaning. Ignoring this warning may result in death or injury.

**Caution:** Before using cleaning products, always read and follow manufacturer's instructions and warnings to avoid personal injury or product damage.

#### **General:**

- Prepare a cleaning solution of 3-4 tablespoons of baking soda mixed with warm water. Use sponge or soft cloth, dampened with the cleaning solution, to wipe down your freezer.
- Rinse with clean warm water and dry with a soft cloth.
- Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads. SOME of these chemicals may dissolve, damage and/or discolor your freezer.

#### **Door Gaskets:**

- Clean door gaskets every three months according to general instructions. Gaskets must be kept clean and pliable to assure a proper seal.
- Petroleum jelly applied lightly on the hinge side of gaskets will keep the gasket pliable and assure a good seal.



## **Power interruptions**

- Occasionally there may be power interruptions due to thunderstorms or other causes. Remove the power cord from AC outlet when a power outage occurs. When power has been restored, replug power cord to AC outlet. If outage is for a prolonged period, inspect and discard spoiled or thawed food in freezer. Clean freezer before reusing.

## **Vacation and moving care**

- For long vacations or absences, unplug the unit, empty food from freezer, and clean the door gaskets according to “General cleaning” section. Prop doors open, so air can circulate inside. When moving always move the freezer vertically. Do not move with the unit lying down. Possible damage to the sealed system could occur.

## **English**

# **TROUBLE SHOOTING**

## **Freezer does not operate:**

- Check if freezer is plugged in.
- Check if there is power at the ac outlet, by checking the circuit breaker.
- Wait for 30-40 minutes to see whether freezer will start, compressor cycle must be complete to operate.

## **Food temperature appears too warm:**

- Frequent door openings.
- Allow time for recently added warm food to reach freezer temperature
- Check gaskets for proper seal
- Clean condenser coils(for models with exposed condenser coils)
- Adjust temperature control to colder setting.

## **Food temperature is too cold:**

- If temperature control setting is too cold, adjust to a warmer setting and allow several hours for temperature to adjust.