


Prolux Hard Floor Cleaner Owners Manual

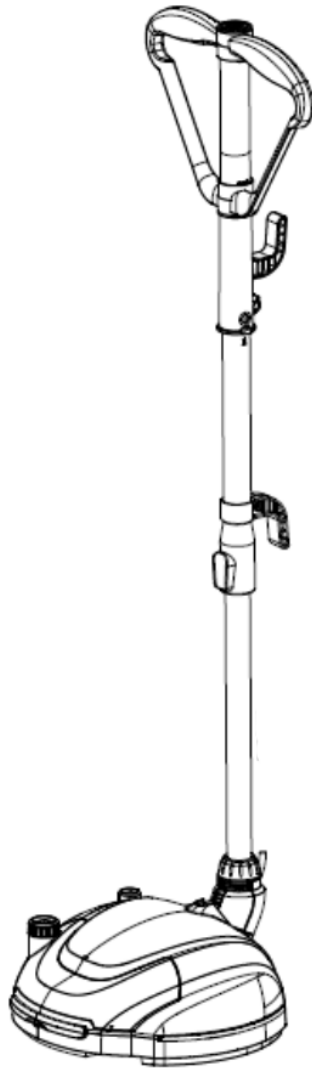

For your safety please read the Owners Manual in its entirety

Congratulations on your purchase of your new Prolux Hardfloor Polisher and Cleaner! With the Prolux Hardfloor Cleaner you can quickly clean, scrub, polish, buff, wax, and shampoo. From cleaning floors to scrubbing tile to polishing floors the Prolux Hardfloor Cleaner is designed to do it all. With its 2 year warranty, simple to use design, and multiple cleaning attachments it is designed to be one of your most used appliances.



Index Page

Product Specifications	3
Safety Instructions.....	3
Parts List & Unit Description.....	4
Assembling the Unit	7
Using the Unit in Waxing/Polishing/Scrubbing/Waxing.....	9
Storing the Unit.....	14
Suggest Settings for Cleaning different floor surfaces.....	17
Polishing Precautions.....	18
Frequently Asked Questions.....	19
Warranty Information.....	20

Specifications:

- Can be used to clean any hard floor surface from laminate to hardwood to tile.
- Can clean, buff, scrub, polish, wax, shampoo and also spray.
- Uses Different Cleaning brushes from Aggressive pads to fine polishing pads.
- Lightweight and only weights pounds.
- 25 foot long power cord.
- Telescoping Wand for different height of users.
- Only Weights 7 lbs
- Ergonomic Handle which folds into buffing T handle.
- 400 Watt 120 Volt Motor motor which powers 2 scrubbing/polishing pads.
- 2 Year Factory Warranty.
- Designed to save you time.

Safety Instructions:


- This floor waxing machine is only used for household rather than commercial waxing or other outdoor purposes.
- Please carefully read the Operating Instruction before using this floor waxing machine to ensure operation safety and correctness.
- To prevent electric leakage or electric shock, this floor cleaning machine can't be placed in water or cleaned with water directly.
- This floor cleaning machine is not a toy, no children can operate this floor waxing machine without permission or get close to the operating floor waxing machine.
- Before starting this floor waxing machine, please make the handle is locked vertical first and then insert the power plug in the wall outlet.

- During operation of the floor waxing machine, don't tilt the waxing head or insert hands or other body parts into the bottom of the waxing head to prevent danger.
- When stopping using this floor cleaning machine or changing discs, please remove the power plug firstly.
- When using this floor waxing machine, please don't crush or run it over the electric power wires.
- Don't use this floor waxing machine on wet ground environment or any ground containing liquid, lit cigarette, burning ash or other high temperature places.
- Wet cloth with water shall be used for cleaning the floor waxing machine, otherwise it may cause damage to the unit.
- When any part of this floor waxing machine has failure, please stop using this floor waxing machine. Please your authorized dealer you bought the unit from.


If the flexible power wire is damaged, it shall be replaced by authorized service center.

Included Parts List


Packing List	
Name	Quantity
Polishing Head	1
Handle component	1
Extension pipe component	1
Floor polishing fine Pad	2
Floor polishing scouring pad	2
Fine Polishing Seat	2
Rough Polishing Brush Disc	2
Operating Instruction	1

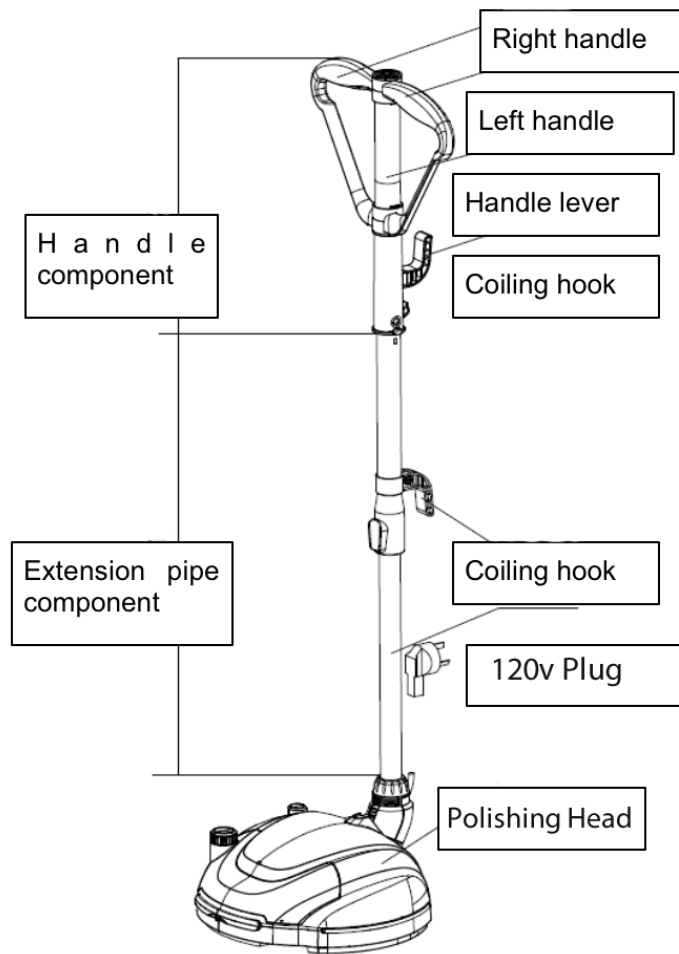


Floor polishing fine pad

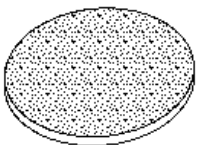


Floor polishing scouring pad

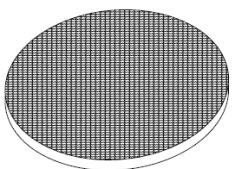

Fine Polishing Seat

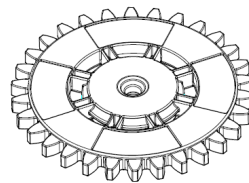


Rough Polishing Brush Disc

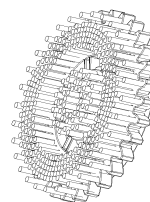

Parts Description


·Rough Polishing Brush Disc:

The Rough Polishing Brush Disc is composed of Nylon brushes and is used for aggressive cleaning and scrubbing. Users tend to use this brush for tile and grout scrubbing and hardwood floor stripping.

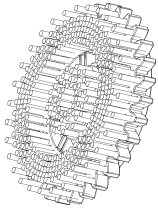


·Fine Polishing Seat + Polishing Fine Pad:

The Fine Polishing Seat + Floor Polishing Fine Pad is used for final polishing, buffing or cleaning of floor surfaces. It may also be used briefly on carpet surfaces if one of the Fine Polishing Seat + Polishing Fine Pad's are removed. In case the user is using the unit to wax your hardwood floors the polishing fine pad would be used in final step to polish floors.

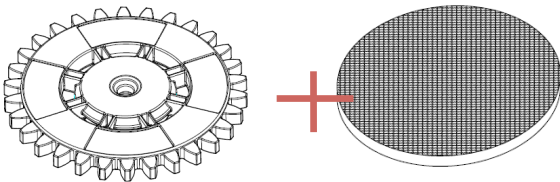

·Fine Polishing Seat+ Polishing Scouring Pad:

The Fine Polishing Seat + Floor Tile Polishing Scouring pad is used for scrubbing and cleaning floors. It can be used to scrub all floor surfaces BUT beware that it can cause permanent scratching on fine surfaces like wood surfaces. Always check with your floor manufacture first and test a small area before proceeding with this step.

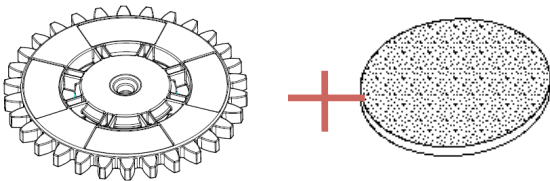

Steps to Cleaning:

For most (not all) floor surfaces the following steps are typically used to clean.

1. For aggressive stains and cleaning use the "Rough Polishing Brush Disc" and user may use spraying method of unit to spray cleaner on floor surface while cleaning.
2. For stains not as aggressive user may use the "Fine Polishing Seat + Scouring Pad" and user may use spraying method of unit to spray cleaner on floor surface while cleaning.
3. Final Cleaning Method is to use "Fine Polishing Seat + Polishing Fine Pad" to clean up left over moisture on floors and for final polishing.

Precautions:


·During use, please be sure to use the Fine Polishing Seat. If the user discovers that the machine has increased resistance during use, please stop the machine immediately to check it and ensure that the Fine Polishing Seat is dry. If you have any questions, please contact your authorized dealer you bought the unit from. The motor of the unit has a build over use mechanism which will turn off the unit if it is being used too hard. If this occurs check unit to make sure nothing is causing increased resistance. If unit turns off again avoid cleaning that surface.

- In order to get better polishing and cleaning effect, please uniformly polish every square yard of ground for more than one minute.
- Do not clean the Fine Polishing Seat with water to avoid degumming.

Installation of Parts to Assemble Unit

· Installation of handle part and extension pipe:

Insert the 2 handle parts to the mounting hole until hearing “click” sound as shown in the image below.

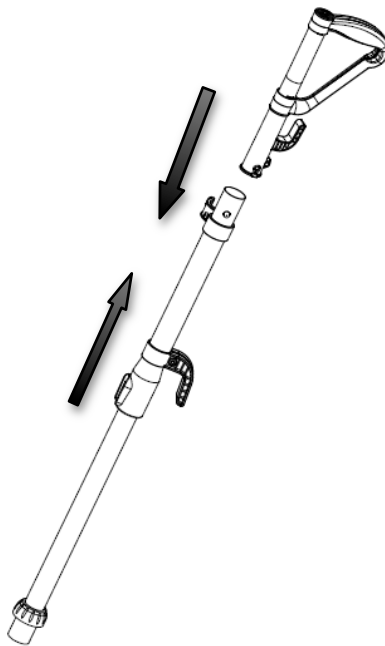


· Connection of Rough Polishing Brush Disc (or Fine Polishing Seat) to the Polishing head

Hold the Rough Polishing Brush Disc (or Fine Polishing Seat) by hand and make it align to the Rough Polishing Brush Disc (or Fine Polishing Seat) with the special section hole of the gear on the waxing head. Press the Rough Polishing Brush Disc (or Fine Polishing Seat) to the Polishing head, as shown in the arrow in the image below, until hearing “click” sound.

(If needing disassembling, apply pulling force to the Rough Polishing Brush Disc (or Fine Polishing Seat))


near the roller by hand, until the Rough Polishing Brush Disc (or Fine Polishing Seat) pops off.

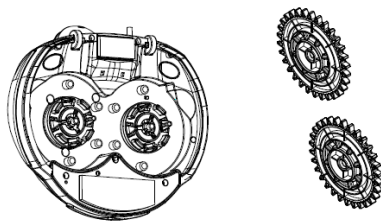

Align at the special section hole and slightly press it

· Connection of handle, extension pipe component and waxing head


Connect the lower end of the extension pipe with the Polishing head connector until the locking ring can't be rotated clockwise anymore.

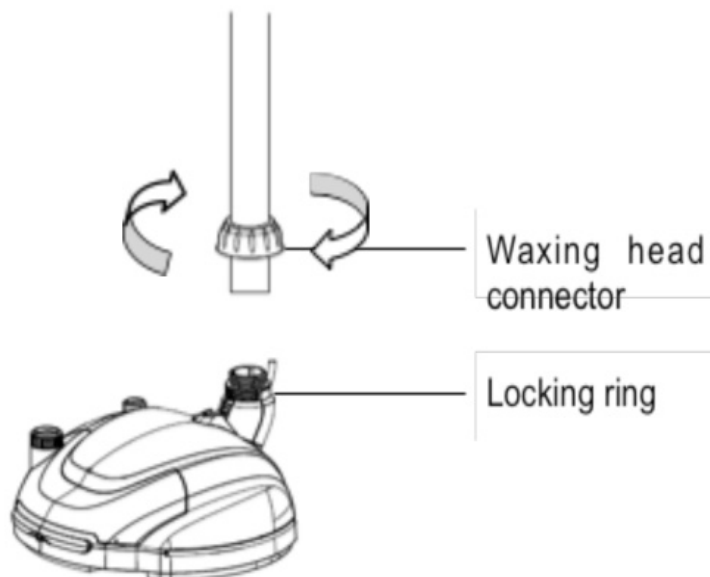

How to use the Unit for Polishing, Buffing, Scrubbing or Waxing


· One-handed handle operation (best for using unit going forward and back)

When left and right handles are folded and combined, it is available for one-handed cleaning.

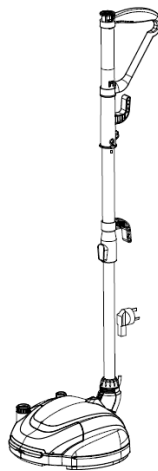


·Two-handed operation (best for cleaning side to side)

After left and right handles are rotated by 90° leftwards and rightwards and completely folded opened by 180°, they are available for two-handed operation. Two-handed operation can more accurately control movement direction and speed of the floor polishing machine; therefore, during fine polishing, two-handed operation mode is recommended to get excellent polishing/buffing/scrubbing/waxing effect.

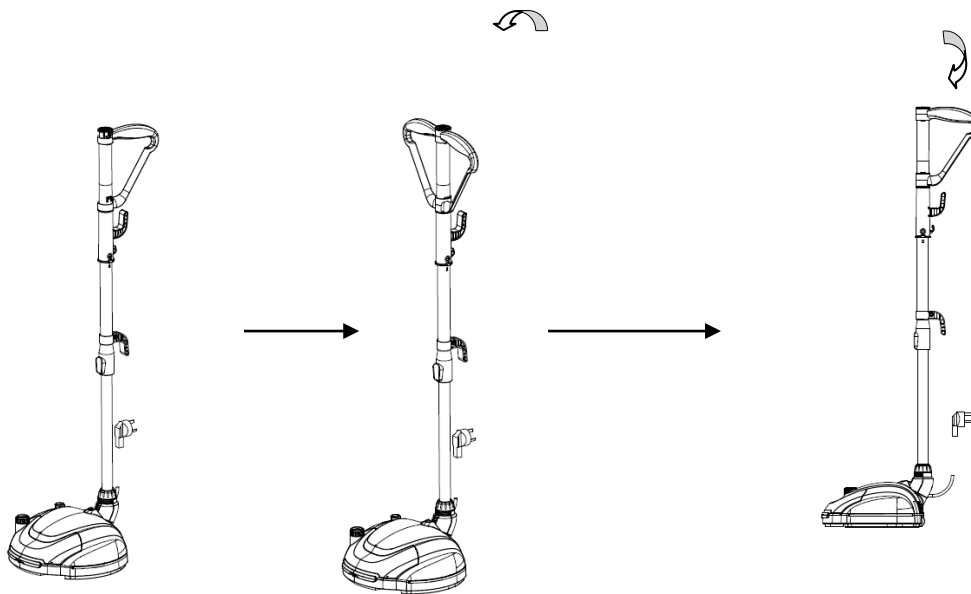





·Safety Stand By Mode

When the unit's handle is locked in the upright position the unit will power off for safety. For the user to being using the unit they simply release the handle and as the angle of the handle changes enough (see images below) then the unit will power on and the brushes may start spinning for polishing/buffing/scrubbing/waxing.

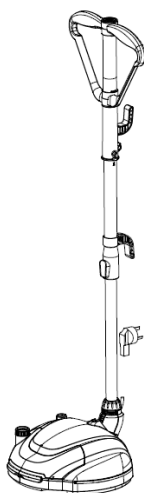

Standby Mode


Switch between Standby Mode and Polishing Mode.

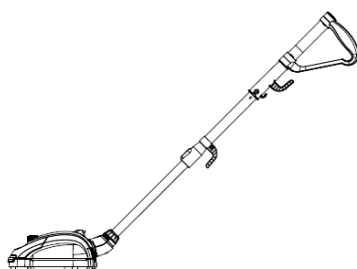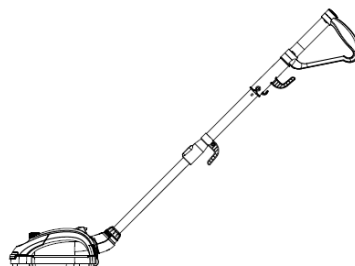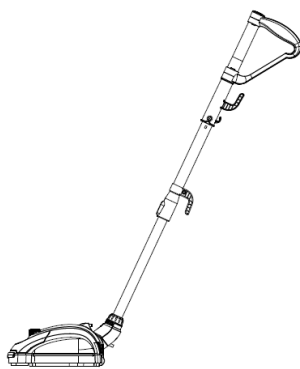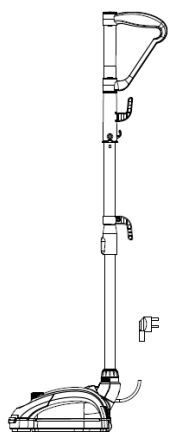

Polishing Mode


·Adjusting the handle length to fit the user

Push the sliding button on the extension pipe and pull the extension pipe to adjust the length of the extension pipe.

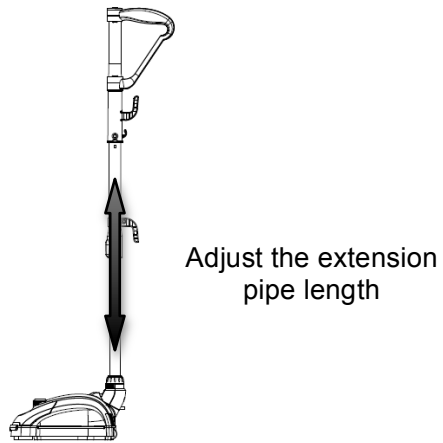


·Properly adjust the application angle

Slightly tilt the waxing head and then slightly step on it with feet to adjust the application angle of the handle.

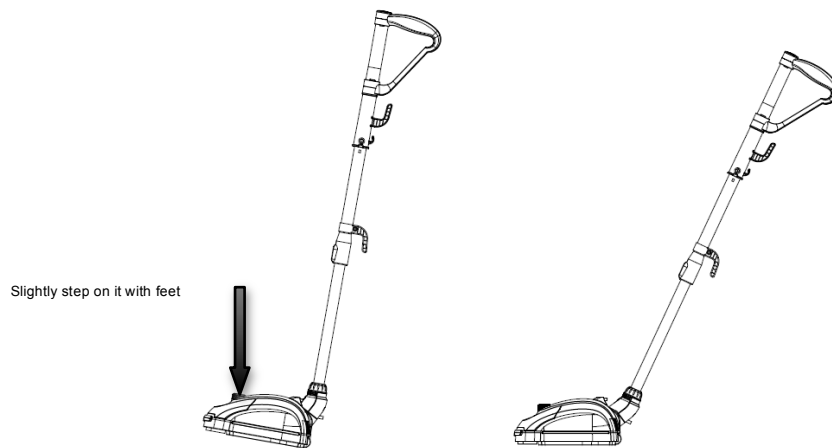

·Wax oil or Cleaning Solution

Loosen the Solution Knob and fill the solution container with Solution or Wax and avoid spilling. After filling, tighten the Solution knob.

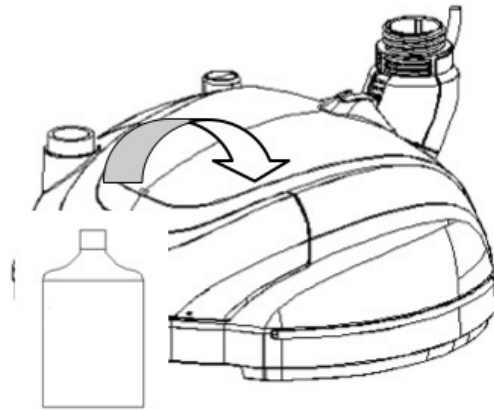


·Instructions of the Polishing Machine


1. Cleaning and Check	Before starting the polishing work, please clean the floor and ensure that there are no granular hard objects under the Polishing machine; otherwise, your floors may be scratched.
2. Preparations	Install the Rough Polishing Brush Disc on the Unit. Adjust the metal extension pipe to a proper operation height and set the Unit with the handle locked in the upright position.
3.Start and stop	The handle position has the built-in power switch. When the handle is in an upright position, the power switch will be turned off; when the handle is in a working position, the power switch will be turned on.

4. Solution spraying switch and indication	<p>The solution spraying switch can only control the spraying pump. When the user presses the solution spraying switch the switch turns on and a green indicator light will turn on. When this happens, it will enter into the pre programmed solution spray work cycle. This is where it will spray solution then pause for several seconds and spray solution again. It is designed so right when you run out of solution or wax on your floors then it sprays again. If you have run out of solution before it sprays on the next automatic spray then slow down your polishing movements of the unit until the sprays are perfectly timed. If you need it to spray manually you turn on the spray switch then after it sprays turn off the switch and repeat this until you have the desired amount of manual spray.</p> <p>Note: This unit is designed for residential use. It is recommended that the machine shouldn't be continuously used for more than 30 minutes at a time, which can be restarted after several minutes of the unit cooling down.</p>
5. Drying	If your application requires that you allow your floors to dry after solution or wax application allow at least 15 minutes or until your floor is dry.
6. Rough Polishing Cleaning Mode	Insert the power cord; slightly step on the upper cover of the waxing head with feet; pull the handle to form a proper working angle between the extension pipe of the floor waxing machine and the waxing head. Push the handle part of the floor waxing machine to drag it back and forth, and use the Rough Polishing Brush Disc for uniform polishing on the ground, please uniformly polish every square yard of floor for more than one minute
5.Wax coating and Rough Polishing Mode	<p>Insert the power plug; slightly step on the upper cover of the waxing head with feet; pull the handle to form a proper application angle between the extension pipe of the floor waxing machine and the waxing head. Push the handle part of the floor waxing machine to drag it back and forth,</p> <p>In such case, activate the wax spraying function and uniformly spray Wax or essential oil (as specified by the floor manufacturer).</p> <p>For uniform rough polishing on the floor, please uniformly polish every square yard of ground for more than one minute.</p>
6. Drying	After waxing and rough polishing mode, allow at least 15 minutes to dry the floors (or until floors are properly dried).
7.Fine polishing	Use the Fine Polishing Seat and perform fine polishing to the floor with the same polishing method (as mentioned in #5 above) until the floor is polished.


- Polishing can be carried out on the floor or floor tile

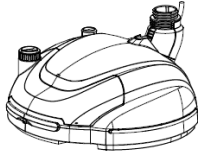


Floor

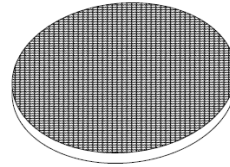

Polishing Fine Pad

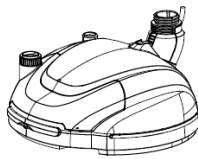

Floor Tile

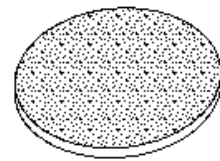


Polishing Fine Pad and Scouring Pad

·In order to get the best effect during Spraying Solution cleaning it is suggested to use non sticky solution. If solution is too sticky the floor surface and floor waxing machine may be damaged. It is important to follow any instructions from your floor manufacturer as well.

Storage


- Vertical storage

- ① Push the extension pipe button to shorten the extension pipe.
- ② Wind the power wire on the coiling hook at the back of the engine and the remaining power wire of the plug can be hung on the hanging hook.

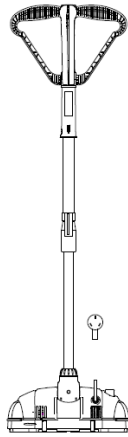


· Storage with the unit disassembled (which can save space).




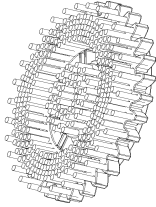
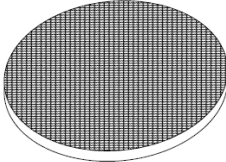
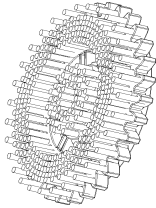
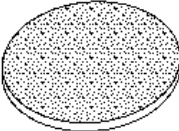

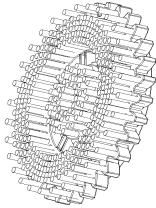
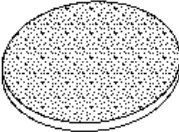
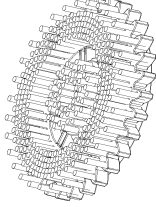
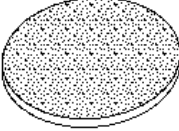
- ① Press down the locking button of the extension pipe and pull out the handle component upwards.
- ② After loosening the locking ring of the waxing head connector counterclockwise, pull out the extension pipe component.

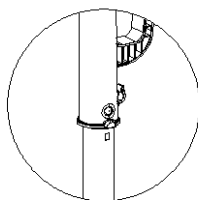

Locking button of the
extension pipe

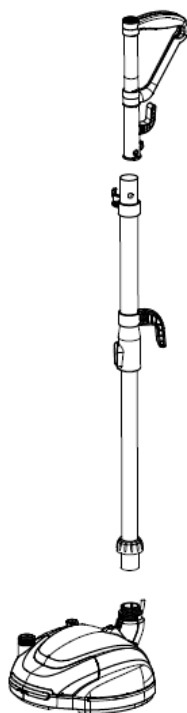

Suggestions for settings for different floor types



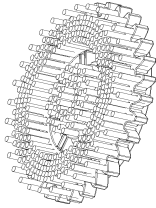
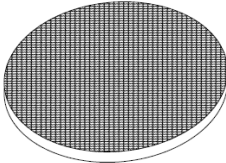
Part Hard Floor	Rough Polishing Brush Disc	Polishing fine pad + Fine Polishing Seat brush disc	Polishing scouring pad + Fine Polishing Seat brush disc	Solution
Laminate floor				
Composite floor				
Rocky ground Artificial stone, marble, granite, etc.				
Non-slip naked ceramic tile				
Brick surface Cement, brick, ceramic tile, etc.				

Polishing Precautions

1. Before polishing, please check if there are granular hard objects (like sand) under the floor polishing machine or adhesive foreign matters on the polishing disc; otherwise, the floor waxing machine will be damaged and your floor will be scratched. Once the floor is scratched, it can't be recovered.
2. If it is necessary to install or replace the polishing piece before or during polishing, please remove the power plug.
3. During use, please be sure to keep a Fine Polishing Seat. If discovering that the floor waxing machine has increased resistance increase during use, please stop the machine immediately to check it and ensure that the Fine Polishing Seat is dry.
4. It can't be operated on a wet floors.
5. In order to get better polishing effect, please uniformly polish every square water of ground for more than one minute.
6. Do not clean the Fine Polishing Seat with water to avoid degumming.
7. Please use the floor waxing machine referring to the Instructions in this manual.
8. When using this floor waxing machine for polishing, please constantly move it on the polishing surface, and avoid leaving it in one spot. During operation, the machine can't be operated under heavy load; otherwise, you floor may be scratched and the motor may over heat.

Cleaning and Replacement of Parts

Before part cleaning and polishing, please disconnect the electrical power cord from the wall outlet first.

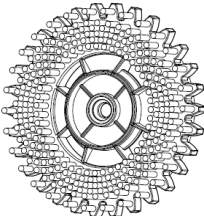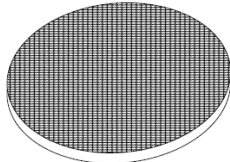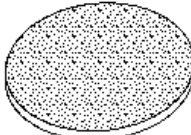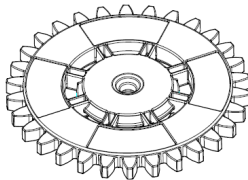Rough Polishing Brush Disc	Polishing fine pad	Polishing scouring pad	Fine Polishing Seat brush disc
			
Washable	Washable		Non-washable
<div>① Clean the Rough Polishing Brush Disc with water.</div> <div>② Wipe off the Rough Polishing Brush Disc with cloth and dry it.</div> <div>③ Install the parts in turn.</div>	<div>① Clean the polishing piece (rubbing is allowed).</div> <div>② Wipe off the polishing piece with cloth and dry it (rubbing is allowed).</div> <div>③ Install the parts in turn.</div>		<div>① Clean the Fine Polishing Seat with a piece of clean cloth and dry it.</div> <div>② Install the parts in turn.</div>

<p>Supplementary instruction of cleaning: If the surface of the Rough Polishing Brush Disc and floor polishing fine pad has condensed wax water and dirt, it can be immersed in a suitable amount of warm water with enzymatic laundry powder for about 20 minutes and then rubbed.</p>	
--	--

FAQs

Frequent Problem	Possible Cause	Solution
The polishing head motor doesn't rotate	It is not powered on	Check if the power socket is firmly inserted into the wall outlet and the handle is fully released all the way down to a working state.
Sharp friction sound during waxing	Foreign matters in the brush disc	Check if there are granular hard objects on the floor and under the waxing head and clean them.
Running resistance obviously increases during waxing	The brush disc has foreign matters or it is immersed in liquid	Check if the Fine Polishing Seat and floor fine polishing fine pad (floor tile fine polishing scouring pad) is dried.
The floor wax is not dried.	Time is insufficient	Polish it again after the floor wax is dried.
Floor gets to dry during spraying solution mode.	Not enough spray	Make sure nozzle is not clogged and slow down polishing movement of side to side until there is enough solution on floor.

Warranty

The manufacturer Prolux provides warranty of this Appliance for a time period of 1 year on the appliance and 2 years on the motor, starting from the date on which the appliance is sold to the end user. The repairs under warranty may only be carried out by an authorized service center. In case of warranty contact your authorized Prolux dealer you bought the unit from. In case of warranty issues the customer is responsible for paying for all shipping costs to and from the warranty center and Prolux is responsible for paying for all parts and labor associated with the warranty claim. When making a claim under the warranty, the proof of purchase (with purchase date) must be submitted. The warranty will not apply in cases of:

- Non Normal wear and tear (example- commercial use)
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable cord supply or non-compliance with the installation instructions or being dropped.
- Partially or completely dismantled appliances.
- The unit is equipped with a motor over load switch. If the motor trips and turns off it is an indication that the motor is being over worked. If this happens review manual to avoid the motor from over working. If the user continues to use the motor and allow it to trip multiple times and later burns out the motor the warranty will be void.

PROLUX OR ITS DEALERS ARE NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. OUR LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

***EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY**

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE ONE YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.