



Personal Pod Coffee Brewer



Model EHC-233

Instruction Manual

Before operating your new appliance, please read all instructions carefully and keep for future reference

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electrical hazard and injury to persons, including the following:

1. Read all instructions before operating.
2. Do not touch hot surfaces. Use handles or knobs if applicable.
3. Remove all packaging plastics and other materials from unit before operating.
4. Wash all removable accessories before using for the first time.
5. To protect against electrical shock, do not immerse cord, plug or appliance itself in water or other liquids.
6. Close supervision is necessary when appliance is used by or near children.
7. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts. Always allow to cool before cleaning the appliance.
8. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
9. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
10. Do not use outdoors.
11. Do not let cord hang over edge of table or counter or touch hot surfaces.
12. Do not place on or near a hot gas or electric burner, or in a heated oven.
13. Always attach plug to appliance first, then plug cord into wall outlet. To disconnect, turn any control to OFF position, then remove plug from wall outlet.
14. Oversized foods or metal utensils must not be inserted in the appliance as they may cause a fire or risk of electrical shock.
15. A fire may occur if the appliance is covered or touching flammable material including curtains, draperies, walls and the like when in operation.
16. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, involving a risk of electrical shock.
17. Extreme caution should be exercised when using containers constructed of other material other than metal or glass.
18. Do not store any materials other than manufacturer's recommended accessories in this unit when not in use.


19. Do not place any of the following materials in the unit: Paper, cardboard, plastic and other similar items.
20. Do not use appliance for other than intended use.

CAUTION: DO NOT IMMERSE IN WATER.

SAVE THESE INSTRUCTIONS

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY!

Parts & Features

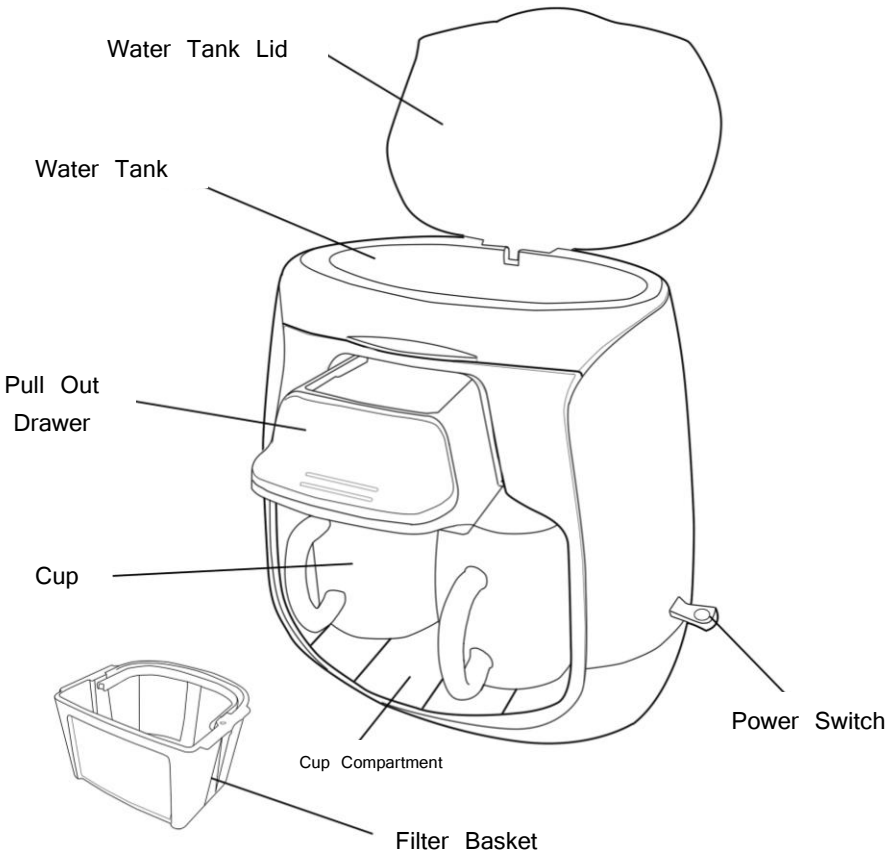

Polarized Plug

If this appliance has a *polarized plug* (meaning one blade is wider than the other), please follow the below instructions:

To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only in one direction. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

This appliance is intended for Household Use Only.

Before First Use

- Read all instructions carefully
- Remove all packaging materials; make sure all parts are included and are in good condition
- Wash any accessories with warm soapy water, rinse and dry thoroughly
- Use a damp cloth to clean the exterior of the base; do not immerse the unit in water.
- Before making coffee for the first time, you should use the coffeemaker once with water only (without ground coffee or coffee pods).

How to Use

1. Open the Water Tank Lid and fill the Water Tank with cold water.
2. Ensure the water level does not exceed the max level marking inside the tank.
3. Put desired amount of ground coffee into the Filter Basket. You may also use loose leaf tea, tea bags or coffee pods.
4. Ensure that the cup is placed properly in position.
5. Press down on the Power Switch. The Power Switch will illuminate blue. This means the unit is on. After a few minutes hot coffee will begin to drip into the cup through the drip hole
6. Turn off the Coffeemaker after it stops dispensing coffee. Remove the Filter Compartment and discard the remaining coffee grounds, loose leaf tea, tea bags, or coffee pod.
7. Take the cup out from the unit and enjoy your coffee.
8. After drinking, please switch the appliance off and unplug the appliance.

Care and Maintenance

- Always remove the main plug from the wall socket before cleaning the appliance.
- You may clean the unit with a damp cloth, but never immerse it in water or wash it directly under running water.
- When de-scaling, operate the appliance twice using ordinary vinegar instead of water to fill the water tank and do not fill the filter with coffee.
- Let the appliance work twice more with only water to rinse away the remainder of vinegar and scale.

LIMITED WARRANTY* ONE (1) YEAR:

Your small kitchen appliance is warranted to the original purchaser to be free from any manufacturing defects under normal use and conditions for one (1) year, cord excluded. During that period, should the appliance fail to operate properly, return the appliance with your sales receipt to the store where purchased. If you use your appliance for household use and according to instructions, it should give you years of satisfactory service. This product warranty covers only the original consumer purchaser of the product.

Warranty is only valid with a dated proof of purchase.

To guarantee repair or replacement without charge, a dated sales receipt showing purchase within the limited warranty period* must accompany the appliance. Without a sales receipt, warranty will be estimated according to the appliance's manufactured date. A comparable appliance should arrive within 2-3 weeks. However, in case an appliance is not covered by warranty, correspondence offering alternatives will be mailed to you.

During the one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to our Service Center. (See the "Returns" section below). The repaired or replacement product will be in warranty for the remaining balance of the one-year warranty period and an additional one-month period.

This limited warranty covers appliances purchased and used within the 50 contiguous states plus the District of Columbia and does **NOT** cover:

- Damages caused by unreasonable use, neglect, normal wear and tear, commercial use, improper assembly or installation of product.
- Damages caused in shipping.
- Damages caused by replacement or resetting of house fuses or circuit breakers.
- Defects other than manufacturing defects.
- Breakage caused by misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
- Lost or missing parts of the product. Parts will need to be purchased separately.
- Damages of parts that are not electrical; for example: cracked or broken plastic or glass.
- Damage from service or repair by unauthorized personnel.
- Extended warranties purchased via a separate company or reseller.
- Consumer's remorse is not an acceptable reason to return a product to our Service Center.

*The consumer is responsible for any delivery charges for all replacement units provided for exchange under the warranty.

RETURNS: Any return of defective merchandise to the manufacturer must be processed accordingly by contacting customer service first to obtain an RA # (Return Authorization Number). We will not accept any returns of merchandise without an applicable RA #. We cannot assume responsibility for loss or damages to products returned to us during incoming shipment. For your protection, always carefully package the product for shipment and insure it

with the carrier. Be sure to enclose the following items with your return: any accessories related to the problem, your full address and daytime phone number, a note describing the problem, a copy of the dated sales receipt or other proof of purchase and a valid RA#. C.O.D shipments cannot be accepted.

*One Year Limited Warranty valid only in the **50 contiguous states plus the District of Columbia, excluding** Puerto Rico and the Virgin Islands.

This warranty is effective only if the product is purchased and operated in the USA; product usage which is in violation of the written instructions provided with the unit will void this warranty. For international warranty, please contact the local distributor.

**Any instruction or policy included in this manual may be subject to change at any time.

Model EHC-233

***Elite Cuisine* Personal Pod Coffee Brewer**

Distributed by:

MAXI-MATIC[®], USA 18401 E. Arenth Ave. City of Industry, CA 91748

Customer Service Dept: (626) 912-9877 Ext: 107/120 MON-FRI 8am-5pm PST

Email: info@maxi-matic.com | Website: www.maxi-matic.com