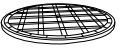 

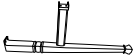 
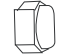 



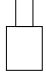 
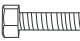 


KENNETT 48" ROUND DINING TABLE

IMPORTANT: PLEASE READ COMPLETE INSTRUCTION SHEET PRIOR TO ASSEMBLY!

Identify all parts packed in carton against the parts list. Remove all protective materials, place parts on a nonabrasive surface to avoid scratching. If any parts are missing or damaged, DO NOT attempt to assemble. Please contact our customer service center (Monday-Friday 9:00 a.m.-5:00 p.m.CST) at 1-877-527-0313 or visit our website at www.homedepot.com.

Parts List						
A	TABLE TOP		1	F	METAL WASHER	 16
B	TABLE LEG		4	G	PLASTIC BOLT CAP	 16
C	LEG CONNECTOR BRACKET		1	H	HEX WRENCH	 1
D	BOLT (M6x20)		8	I	TOUCH-UP PAINT	 1
E	BOLT (M6x25)		8			

Step 1

Turn table top (A) upside down. Attach 4 table legs (B) to table top (A) by inserting bolts (D) with metal washers (F) through the pre-drilled holes of the table legs and into the top. (Do not tighten the bolts completely).

Step 2

Attach the leg connector bracket (C) to the table legs (B) by inserting bolts (E) with metal washers (F) through the pre-drilled holes of the leg connector bracket and into the legs. Tighten all bolts completely and cover them with plastic bolt caps (G). Important note: Each bolt should be tightened a few revolutions at a time, alternating between bolts in a cross corner (X) pattern. This will ensure your table is level by placing equal pressure on all bolt joints. Do not over tighten.

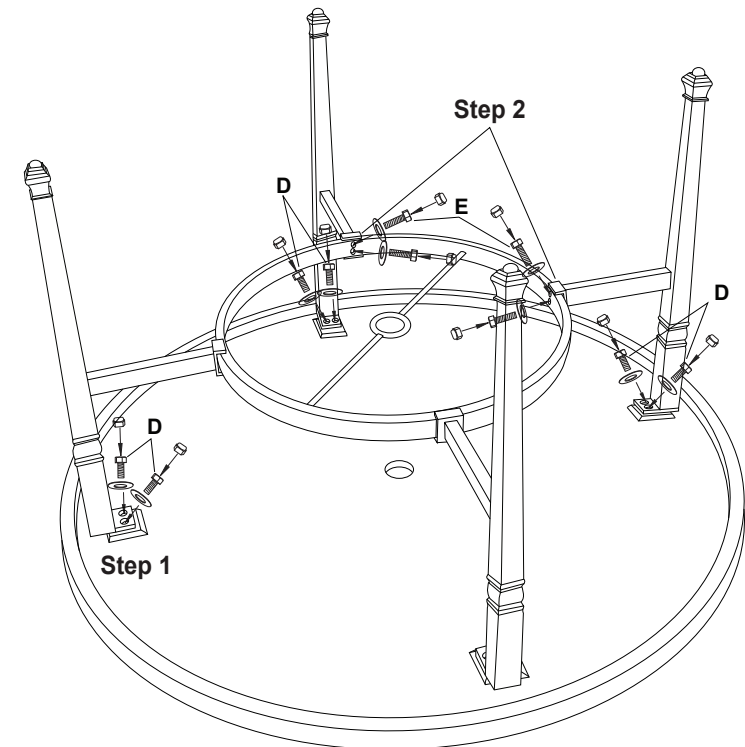
Step 3

Turn the table in the upright position. Keep touch-up paint (I) for future use for both your table and chairs. Your table is now ready for use.

IMPORTANT:

To avoid damage to your table:

- If using an umbrella, an umbrella base must be used at all times.
- Make sure the plastic umbrella safety ring is installed in the center of the table before you insert the umbrella pole through the table.
- Remove the umbrella from the table when not in use or in the event of wind, rain, hail, sleet, snow or any other inclement weather.
- In storing patio furniture, do not stack anything on glass, stone, or marble tabletops.
- Before storing, drain all water that may have accumulated in or around patio furniture frames. If not drained properly, water can cause freeze damage.
- Cover furniture with outdoor furniture covers when not in use.
- For safety reasons, do not sit or stand on the table.



KENNETT WOVEN STATIONARY CHAIR

IMPORTANT: PLEASE READ COMPLETE INSTRUCTION SHEET PRIOR TO ASSEMBLY!
Identify all parts packed in carton against the parts list. Remove all protective materials, place parts on a nonabrasive surface to avoid scratching. If any parts are missing or damaged, DO NOT attempt to assemble. Please contact our customer service center (Monday-Friday 9:00 a.m.-5:00 p.m.CST) at 1-877-527-0313 or visit our website at www.homedepot.com.

Step 1:

Place chair arm (A) on its side. Attach the back of chair frame (C) to the chair arm by inserting bolts (E) with metal washers (F) through each hole of the chair frame and into the chair arm. Repeat this step for chair arm (B). (DO NOT TIGHTEN COMPLETELY !)









Step 2:

Attach the seat of chair frame (C) to chair arm (A) by inserting bolts (D) with metal washers (F) through each hole of the chair arm and into the chair seat. Repeat this step for chair arm (B). (DO NOT TIGHTEN COMPLETELY !)

Step 3:

Tighten all bolts with the Allen wrench (H). Cover all bolts with plastic bolt caps (G). Your chair is now ready for use.

PARTS LIST

A	CHAIR ARM (LEFT WHEN SITTING)		4	E	BOLT (M6x35)		16
B	CHAIR ARM (RIGHT WHEN SITTING)		4	F	METAL WASHER		32
C	CHAIR FRAME		4	G	PLASTIC BOLT CAP		32
D	BOLT (M6x20)		16	H	ALLEN WRENCH		1

