



# INSTRUCTIONS

## ⚠️ **WARNING: READ AND UNDERSTAND ALL INSTRUCTIONS.**

Failure to follow all instructions listed below, may result in electric shock, fire and/or serious personal injury.

⚠️ **WARNING:** ELECTRIC PRODUCT. Keep away from children. Not recommended for children under 3 years of age. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electric shock. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. To avoid the risk of electrical shock, always make sure the figure is unplugged from the electrical outlet before assembling, disassembling, or relocating.

⚠️ **WARNING:** This product is to be assembled by adults only.

## IMPORTANT SAFETY INSTRUCTIONS

## READ AND FOLLOW ALL SAFETY INSTRUCTIONS

## SAVE THESE INSTRUCTIONS

## USE AND CARE INSTRUCTIONS

When using electrical products, basic precautions should always be followed, including the following:

1. This is an electrical product - not a toy! To avoid risk of fire, burns, personal injury, and electric shock, it should not be played with or placed where small children can reach it.
2. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
3. This seasonal use product is not intended for permanent installation or use.
4. Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
5. Do not secure product wiring with staples or nails or place on sharp hooks or nails.
6. Do not let lamps rest on the supply cord or on any wire.
7. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
8. Do not use this product for other than its intended purpose.
9. Do not hang ornaments or other objects from cord, wire, or light string.
10. Do not close doors or windows on the product, or extension cords, as this may damage the wire insulation.
11. Do not cover the product with a cloth, paper, or any material not part of the product when in use.
12. Do not place the product against carpeting, furniture, or any other fabric when in use.
13. This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If the plug still does not fit, contact a qualified electrician. Do not use an extension cord unless the plug can be fully inserted. Do not alter or replace the plug.
14. This product employs overload protection (fuse). A blown fuse indicates an overload or a short-circuit condition. If the fuse blows, unplug the product from the outlet. Also unplug any additional string or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product markings for proper fuse rating) and check the product. If replacement fuse blows, a short-circuit may be present and the product should be discarded.
15. Read and follow all instructions that are on the product or provided with the product.
  1. Before using and reusing, inspect the product carefully. Discard any products that have cut, damaged or frayed wire insulation cords, cracks, lamp holders or enclosures, loose connection, or exposed copper wire.
  2. When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections and wires.
  3. When not in use, store neatly in a cool, dry location protected from sunlight.



# INSTRUCTIONS

**Congratulations!** You're the proud owner of a Gemmy Santa in Hot Air Balloon. Please read over the directions carefully before using the item.

## CAUTION

Do not attempt to assemble or operate your Santa in Hot Air Balloon during unusually strong winds. If it becomes too windy for safe operation, please disassemble Santa in Hot Air Balloon and bring indoors until conditions improve.

## CAUTION

Operation of your Airblown Inflatable during extreme weather conditions is not recommended.

## CAUTION

**DO NOT** place children, animals or other objects inside or on your Airblown Inflatable. This is **NOT** a ride and is not designed to support weight.

## CONTENTS

Top Structure with Airblown Inflatable Unit	1 piece
Base Structure	1 piece
Eye glasses	1 piece
Mid-Section Structure	1 piece
Short Poles	4 pieces
Long Poles	4 pieces
Metal L-shaped Base Stakes	4 pieces
Spiral Stakes for Tethers	8 pieces
Fabric Wrap (for base structure)	1 piece
spare C-7 Light Bulb	1 piece
5 Amp, 125V fuse	1 piece

Assembly Time: Approximate 20 minutes.

## ASSEMBLY INSTRUCTIONS

1. Remove contents from packaging. Lay out all parts and deflated Airblown Inflatable in a clear area.
2. Locate square base, which contains the center support for Santa, and insert L-shaped Stakes into ground (see photo #1).
3. Insert the Short Poles to each corner post (see photo #2).
4. Attach the Mid-Section on top of each of the short poles (see photo #3).
5. Insert the Longer poles onto the corner post of the Mid-Section (see photo #4).
6. Check zippers on both the back of balloon and at base of fan to insure they are properly zipped up.
7. Carefully place the Top Structure with Airblown Inflatable unit on top of the 4 posts of the Mid-Section. This action may require two people (see photo #5).
8. Unzip the zipper on the back of Santa and connect the 2 support poles together (see photo #6).
9. Making sure the air-tube connecting the fan unit to Santa is not twisted and preventing proper airflow, place Santa on the center of the square base.
10. Ensure that Santa is facing forward, while the fan power-cord is in the back.
11. Run the Tethers located at each corner (4) of the square base up and attach to the Top structure.
12. Attach tethers between Santa and the Midsection structure.
13. Plug into receptacle or other outlet device to inflate your Airblown Inflatable.
14. Once the Airblown Inflatable is fully inflated, insert spiral stakes into ground and attach the tethers (see photo #7).
15. Place santa's glasses on face.
16. To deflate, unplug fan. For faster deflation, unzip zipper on back of Santa and/or back of fan.



photo 1



photo 2



photo 3



photo 4



photo 5

 


photo 6



photo 7



# INSTRUCTIONS

## DISASSEMBLY INSTRUCTIONS USER SERVICING INSTRUCTIONS


Please refer to assembly instruction above in reverse order.

### Fuse Replacement

**WARNING: Risk of Fire:** Replace only with same size and type of fuse.

**WARNING: Risk of Fire:** Do not replace the attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if attachment plug is damaged.

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on the cord.
2. Open fuse cover. Slide open the fuse access cover on top of the attachment plug towards blades (see illustration).
3. Remove fuse carefully.
4. Replace fuse only with 5 Amp Max, 125 Volt (provided with product)
5. Close the fuse cover. Slide closed the fuse access cover on top of the attachment plug.

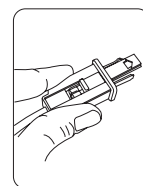

### Lamp Replacement

Disconnect the plug from the electrical outlet and allow the lamp to cool completely before replacing bulb. Do not touch the bulb when the power is "ON" as it is extremely hot and make cause electrocution.

1. Grasp plug and remove from receptacle or other outlet device. Do not unplug by pulling on the cord.
2. Open the zipper opening on the Airblown® Inflatable.
3. Open the protective light cover carefully by pressing down on the two locking side tabs simultaneously.
4. Replace lamp with same type 7W maximum, candelabra base, UL classified.
5. Do not over-tighten the lamp as this may damage the lamp or lamp holder.

Replace only with same type C7, 7 Watts Max Candelabra-base 120V UL Classified lamps.

To reduce the risk of fire, do not deliberately reposition either the lamp holder contact.

Do not attempt to operate your Airblown Inflatable in the following conditions:

1. During inclement weather conditions such as heavy rains and wind storms, store the product indoors.
2. Operation of your Airblown Inflatable during extreme weather conditions is not recommended.

Remove all plastic fasteners and tags. These are part of the packaging and should be discarded.

This item is not a toy and should be used for decorative purposes only. For indoor and outdoor use.

Do not discard the box, as it should be used for storage. Store all parts in a cool, dry location.

If your Airblown Inflatable is not operating, the problem may be:

1. The power source is disabled or the cord is unplugged.
2. The zippers are not zipped closed.

## CAUTION CAUTION

## WARNING

## STORAGE

## TROUBLE SHOOTING CHECKLIST



# INSTRUCTIONS

**NOTE:** ONCE FAN IS UNPLUGGED AND STOPS BLOWING, YOUR Airblown® Inflatable WILL DEFLATE.

## FREQUENTLY ASKED QUESTIONS (FAQ'S)

### **1. Can I continually run my Airblown® Inflatable?**

Yes, you can run your Airblown® Inflatable during the day and at night. We recommend that you turn off your Airblown® Inflatable when leaving the immediate area and when retiring for the evening. Otherwise, your Airblown® Inflatable is designed to run continually as you see fit.

### **2. What happens if my Airblown® Inflatable becomes torn?**

Rips in the Airblown® Inflatable can be sewn by hand (no special thread is required) or taped with clear packing tape.

### **3. How can I clean my Airblown® Inflatable?**

Wipe clean with a damp cloth and allow to dry before storing away. Use mild detergent if necessary.

### **4. When I unplug my Airblown® Inflatable, it deflates. Why is this?**

Your Airblown® Inflatable will not stay inflated unless it is plugged in and the fan is blowing air.

### **5. How much electricity does a Airblown Inflatable consume?**

Please reference the tag attached to the Power Cord.

### **6. What is the best way to store my Airblown Inflatable?**

Store dry in a bag, box or other storage container and keep in a cool, dry location.

### **7. My area is prone to unusually windy conditions, will this affect my Airblown Inflatable?**

In order to prevent damage, we suggest you keep the Airblown Inflatable protected from high winds by simply relocating the item and to a sheltered area until wind conditions improve.

### **8. What if it is raining or snowing? Will this affect my Airblown Inflatable?**

Operation of your Airblown Inflatable during light weather conditions, such as a gentle rain or snowfall is fine. However, operation of your Airblown Inflatable during extreme weather conditions, such as heavy snow, rain or windstorms is not recommended as the unit may become over-weighted or could fall over, thus damaging the unit.

This instructions are for this item number: 60845, 60845-A, 60845-F, 81805, 81805-A, 81805-F, 83480, 83480-A, 83480-F, 83589, 83589-A, 83589-F.



Visit [WWW.GEMMY.COM](http://WWW.GEMMY.COM) for more information.

©2010 GEMMY INDUSTRIES CORP.

COPPELL, TX 75019 U.S.A.

(972) 961-7000

MADE IN CHINA / PRINTED IN CHINA