 


LPL720/LPL720W Owner's Manual

Location of Controls

1. ON/OFF/DIMMER Switch
2. Adjustable Light Head
3. Adjustable Neck
4. Battery Compartment*
5. Adjustable Base/Mounting Bracket

*In back of unit

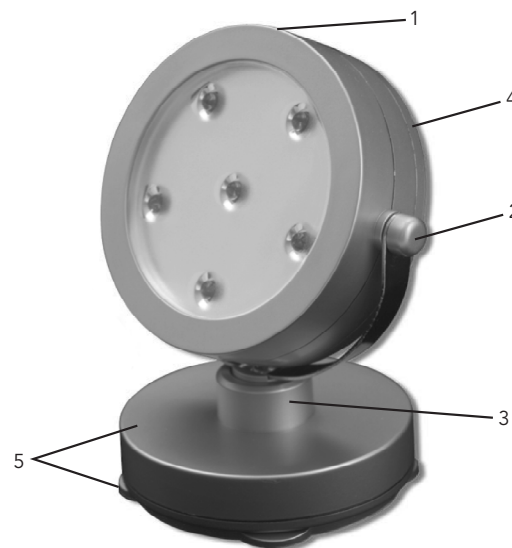

Installation

Hook and Loop Tape (included)

Note: Hook and loop tape may be cut to desired size for easier removal.

1. Check the location of where you want to place the spotlight.
Make sure it is clean and there is no debris or dust.
2. Remove the paper covering to expose one sticky side of the tape.
3. Place the hook and loop tape in the recessed area on the mounting bracket.
4. Remove the paper covering on the other side of the tape to expose the sticky surface.
5. Place the spotlight in the desired location. Press firmly for five (5) seconds so the tape adheres to the surface.

CAUTION: Be cautious of what surface the hook and loop adhesive is attached to, as it may remove paint or damage surface.




Detachable Bracket and Screws (included)

1. Remove the hook and loop tape by pulling the tape away from the mounting bracket.
2. Remove the printed mounting bracket template to use as a guide. Drill two (2) pilot holes in the location where you want to mount the spotlight.
3. Remove the mounting bracket so it can be mounted. To do so, hold the spotlight base in one hand, with the mounting bracket facing up. With the other hand grab finger grips (Fig. 1) on mounting bracket and pull away from the spotlight. The cover will pop off. You may also use a flathead screwdriver to gently pry off the mounting bracket.

NOTE: It may help to turn the spotlight base clockwise or counter-clockwise as you are pulling it off.

4. Place screws (included) in pre-drilled holes. Tighten slightly until secure, but do not tighten all the way. Align and slide the keyhole slots on the mounting bracket over screw heads. Slide the bracket so the narrow ends of the keyhole slots are under the screw heads. Tighten screws to secure mounting bracket to mounting surface.
5. Re-attach the spotlight to the detachable bracket. It will snap into place.

NOTE: The base of the spotlight also acts as a stand so it can be placed on desk tops, table tops, just about anywhere!

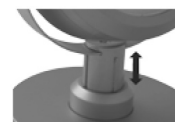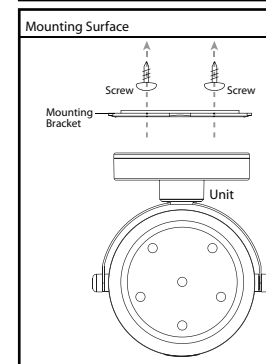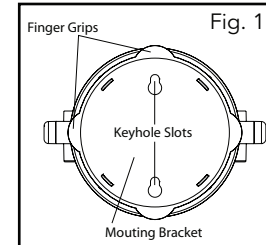

Operating Directions

Universal Light Positioning

- Point the light head up, down or any angle in between by adjusting the light head accordingly.
- Turn the base to the left or right to point the light right where you need it.
- Slide the light neck in or out to adjust the height of the light head.

ON/OFF/DIMMER Operation

- Press power symbol once for full brightness.
- Press again for softer light.
- Press a third time to turn the light OFF.



Inserting/Replacing the Batteries

If the LEDs appear to be dim this is an indication that your batteries need to be replaced.

1. Remove battery compartment cover on the back of the spotlight light head. To do so, hold the front of the spotlight in one hand, with the other hand twist the battery cover counter clockwise (in the direction of the "OPEN" arrow) and pull off.
2. Install three new AA batteries.
3. Make sure to follow battery polarity guide when installing new batteries.
4. Replace battery compartment cover by placing it back on the spotlight making sure that the "Open" and "Lock" markings are at the top of the spotlight (Fig. 1). Twist it clockwise until it locks into position (in the direction of the "LOCK" arrow).

Battery Precautions:

1. Use only the size and type of batteries specified.
2. Always purchase the correct size and grade of battery most suitable for the intended use.
3. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
4. Do not mix alkaline, standard (Carbon-Zinc), or rechargeable (Nickel Cadmium) batteries.
5. Replace all batteries of a set at the same time. Do not mix old and new batteries.
6. Clean the battery contacts and also those of the device prior to battery installation.
7. Do not dispose of batteries in fire.
8. Remove batteries if consumed or if product is to be left unused for an extended period of time.

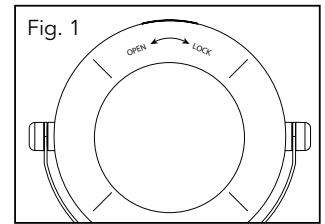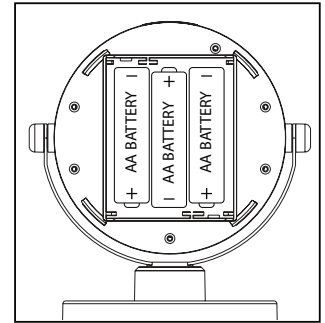

Customer Service

Answers to the most commonly asked questions can be found at www.lancerandloader.com

Limited 2 Year Warranty

If you recently purchased the item the quickest option is to return the product to the retailer where the item was purchased. Return policies vary by retailer. If returning the item to the retailer is not possible visit www.lancerandloader.com for warranty details and directions on how to have the product repaired or replaced.