 
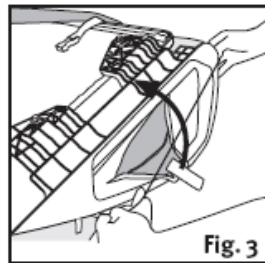 


Seat Bottom Cover Installation:

1. Fit the bottom cover on the seat top (Fig. 1, Fig. 2)

You will need to remove your car seat bottom. Consult your golf car owner's manual. Fit your cover over one end of your seat then pull it across the entire seat.

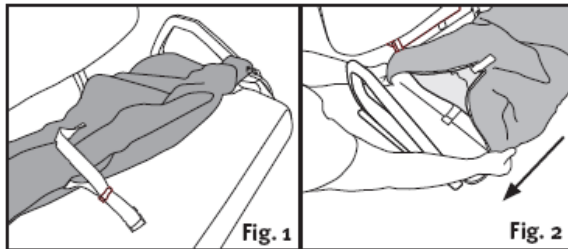

 
 
 
 
 
 
2. Pull the elastic hem over the seat.

On both ends of the seat, pull the exposed elastic hem cord over the end of the seat. In some cases, depending on the style of seat, you will have to pull it over the armrests. (Fig. 3)

3. Thread the attachment flap over the end of the seat.

On both ends of the seat, pull the attachment flap over the end the seat or under the armrest (Fig. 4).

Your seat should look like the illustration above (Fig. 5) with the attachment webbing, attachment flaps and elastic seat hem showing.

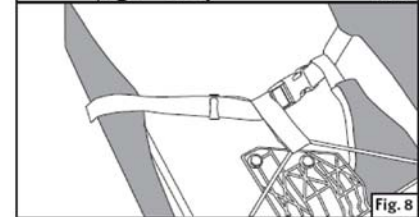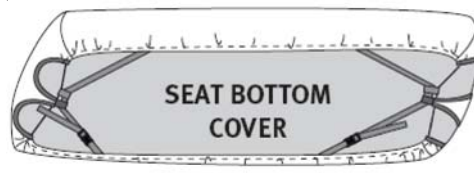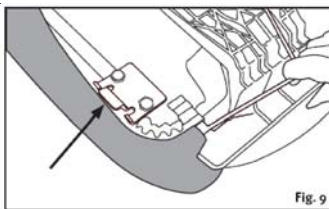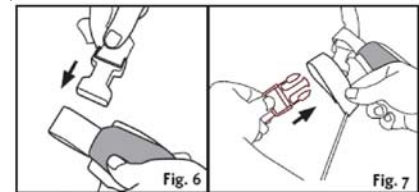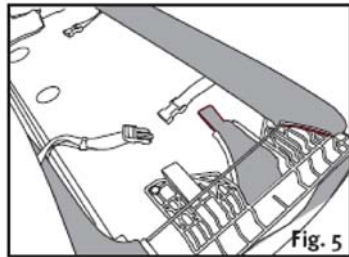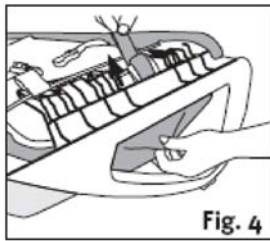

4. Thread the webbing attachment straps through the attachment flap hoop and hem loop.

Thread the webbing attachment straps with buckles through the loops at the ends of both the attachment flaps and the elastic hem. Once both loops are threaded with the webbing attachment straps, insert the side release buckles into one another. (Fig. 6, Fig. 7, Fig. 8).

 
 
5. Warning! Keep the seat attachment points clear.

On some models of golf cars it is necessary to keep the seat cover clear of any metal tab fittings that keep the seat in place (Fig. 9). Failure to keep these attachment points clear will cause the seat to malfunction and could damage your cover.

Correct installation of the seat bottom cover shown above.

Seat Back cover Installation:

1. Place the cover over one end of the seat back and pull the cover over the entire seat front. (Fig. 10).

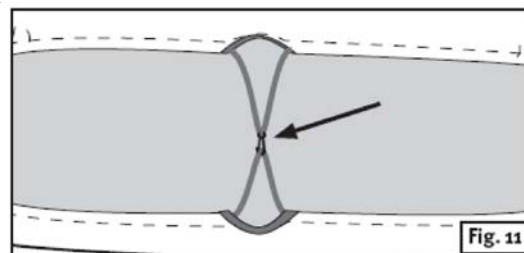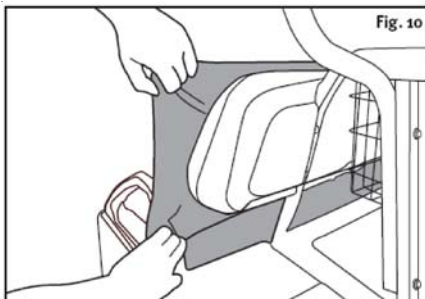

2. Attach the hem clip on the back of the cover.

Hook the hem clip attached to the elastic hem to the opposite side of the seat hem (Fig. 11).

Enjoy your seat covers!