

## Care Instructions

Congratulations on your purchase of this stainless steel firepit. This product is made of durable stainless steel with a black painted iron fire screen and stand. Be sure to carefully read ALL safety and operating instructions. It's easy for stainless steel fire bowl to darken when exposed to heat and flames. The metal can be easily cleaned and the shine restored by applying an all purpose cleaner with a soft cloth. Simply wipe it on, rub it in and wipe it off.

The black paint on the fire screen will break down over time, as the fire pit is burned. We recommend the use of a high heat black spray paint to help inhibit the process.

You don't need to season your fire pit before burning. You may burn wood, synthetic logs or charcoal in your firepit. Pinon wood is ideal because it emits a pleasing aroma that also repels insects. We recommend a mixture of pinon chunks with other woods to achieve a pleasant burning experience.

Some woods tend to crackle and spark more than others. Wind can also blow burning embers around the firepit. In order to safeguard against blowing sparks/embers, make sure you have the screen securely in place while using your firepit.

**ENJOY YOUR NEW FIREPIT, BUT ALWAYS USE IT SAFELY**

**Distributed By:**  
Well Traveled Living  
716 S 8th Street  
Amelia Island, FL 32034



**Web:** [www.wtliving.com](http://www.wtliving.com)  
**Email:** [cservice@welltraveled.net](mailto:cservice@welltraveled.net)

### 1 YEAR LIMITED WARRANTY – Customers in the Continental US

All components are warranted for a period of 1 year after date of purchase by the original owner against defects in materials and workmanship under normal use. This warranty does NOT cover normal wear and weathering, assembly and/or maintenance OR use in a commercial application. At Well Traveled Living's sole discretion, products under warranty will be repaired and/or replaced at no charge to the customer. Any returns sent back to Well Traveled Living must be sent via prepaid freight and in the original retail packaging.

For warranty service contact Well Traveled Living at the address, phone numbers or internet site and email listed in this owner's manual. Be sure to have your sales receipt, date of purchase and catalogue/model numbers available when calling. All warranty service will be coordinated by the Well Traveled Living's, Amelia Island, Florida service center.

This warranty is extended only to the original purchaser. Proof of purchase will be required before warranty service is rendered. The sales receipt is the only valid proof of purchase. This warranty only covers failures due to defects in materials or workmanship which occur during normal use. Failures and/or damage which result from accident, negligence, misuse, abuse, neglect, mishandling, alteration or modification, failure to maintain, improper assembly or maintenance, service by unauthorized agency or use of unauthorized components or damage that is attributable to acts of God are NOT covered.

**\*\*\*THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED ABOVE\*\*\***

**\*\*\*PURCHASER ASSUMES ALL RISKS IN THE ASSEMBLY AND OPERATION OF THIS UNIT\*\*\***

**\*\*\*FAILURE TO FOLLOW WARNINGS AND OPERATIONAL INSTRUCTIONS CONTAINED IN THIS MANUAL CAN RESULT IN SEVERE PROPERTY DAMAGE AND/OR PERSONAL INJURY\*\*\***

**IN NO EVENT WILL WELL TRAVELED LIVING, OR ITS DIRECTORS, OFFICERS OR AGENTS BE LIABLE TO THE PURCHASER OR ANY THIRD PARTY, WHETHER IN CONTRACT, IN TORT, OR ON ANY OTHER BASIS, FOR ANY INDIRECT, SPECIAL, PUNITIVE, EXEMPLARY, CONSEQUENTIAL, OR INCIDENTAL LOSS, COST, OR DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE SALE, MAINTENANCE, USE, OR INABILITY TO USE THE PRODUCT, EVEN IF WELL TRAVELED LIVING OR ITS DIRECTORS, OFFICERS OR AGENTS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH LOSSES, COSTS OR DAMAGES, OR IF SUCH LOSSES, COSTS, OR DAMAGES ARE FORESEEABLE. IN NO EVENT WILL WELL TRAVELED LIVING, OR ITS OFFICERS, DIRECTORS, OR AGENTS BE LIABLE FOR ANY DIRECT LOSSES, COSTS OR DAMAGES THAT EXCEED THE PURCHASE PRICE OF THE PRODUCT.**

**SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO THE PURCHASER.**

**This limited warranty gives you specific legal rights and you may also have other rights which vary from jurisdiction to jurisdiction. The provisions of the United Nations Convention on Contracts for the Sales of Goods shall not apply to this limited warranty or the sale of products covered by this limited warranty.**

**\*\*\*IMPORTANT NOTICE\*\*\***

**-Do NOT return to place of purchase-For customer service and warranty issues contact our Customer Service Center at:**

**(866)-985-7877 OR**

**Email: [cservice@welltraveled.net](mailto:cservice@welltraveled.net)**

**Customer Service Hours: Mon. – Fri. 9:00 a.m. – 6:00 p.m.**

**Fire Sense® and Well Traveled Living® are registered trademarks of Well Traveled Imports, Inc®. All assembly instruction presentations are the property of Well Traveled Imports, Inc®. and are protected by U.S. copyrights and trademarks. All rights reserved.**



# Cocktail Fire Pit

## OWNER'S MANUAL

### Stainless Steel Cocktail Firepit

Item # 02113



**WELLTRAVELED  
L I V I N G**

**\*\*\*IMPORTANT NOTICE\*\*\***

**Do NOT return to place of purchase!!**

**Please contact our Toll Free Hotline:  
(866-985-7877)**

**for customer service & warranty issues**

**Warning: For OUTDOOR USE only**

**\*\*\*\* Uncovered Areas\*\*\*\***

**48" clearance from combustible  
Materials required**

**Web:** [www.wtliving.com](http://www.wtliving.com)  
**Email:** [cservice@welltraveled.net](mailto:cservice@welltraveled.net)  
Page 2

Well Traveled Living  
716 S 8th Street  
Amelia Island, FL 32034

**\*\*\*Important Notice\*\*\***

 
**Do not return to place of purchase!!**  
Please contact our Toll Free Hotline:  
**(866) 985-7877**  
for customer service & warranty issues

**Assembly  
Instructions**



**Warning: For OUTDOOR USE only**

**Assembly Time:  
Approx. 15 minutes**



Firescreen lift tool

- h Cross head bolt (6pcs)
- m nut (9pcs)
- l Small bolts (8pcs)

**PARTS LIST:**

- \*1piece Stainless steel Firebowl
- \*4pieces Steel fire screen components
- \*1piece Handle
- \*1set Decorative Stand Assembly:  
Includes: 3 legs, 1 large circular ring & 1 small ring
- \*1piece Firescreen lift tool
- \*Hardware: 6 cross head bolts, 9 nuts, 8 small bolts

**Tools Required:**  
Screw driver(not included).

**Step 1:**

- \*Attach 3 legs of the decorative stand to the large circular ring. Align threaded holes on the large ring with pre-drilled holes in the tops of the legs. Secure with cross head bolts(h), hand tighten for now. See Fig. 1.
- \*Now, attach smaller circular ring to middle brackets. Position ring into the channels. Align holes and apply cross head bolts(h) and hand tighten at this time. See Fig. 1.
- \*Make sure all stand components are square to one another and the entire assembly is level with the floor. Then tighten all cross head bolts securely.

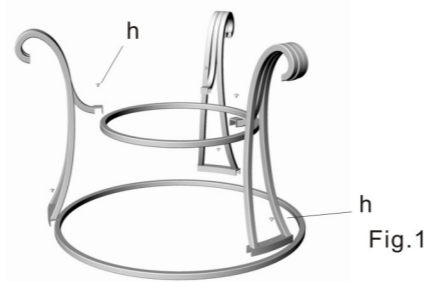 


Fig.1

**Step 2:**

- \*Identify the 4 fire screen components and lay them out on the floor. Please make sure A, B, C, D four pieces screens are available (the letter is also marked on screens).
- \*Stack four screens, make sure screen A and B is above C and D, see Fig. 2, then insert the handle through screen top hole by handle nut from inside of the screen. Do not over tighten.
- \*Assemble A, B, C, D four screens' bottom hole together, by using small bolts(l) and nuts(m), see Fig 3. The bolts must always be fastened towards the inside of the screen assembly. You need one bolt(l) and nut(m) to fasten two screen lids together. See Fig. 4.
- \*Assemble four screens' middle hole using the same method.

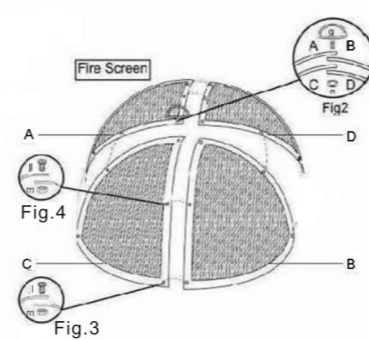 


Fig.3

**Step 3:**

- \*Position bowl onto leg assembly, ridge line on firebowl should be resting on upper rim or leg assembly. Make sure bowl is level & square with leg assembly.
- \*Place steel grate onto bottom ridge of bowl so that it lays flat.
- Position assembled fire screen onto the fire bowl, centering it and making sure it is level. See Fig. 5.



Fig.5

Assembled Firepit

**CAUTION: NEVER** use your hands to open or close the screen when hot, use the lift tool provided.

**\*\*\*Important Notice\*\*\***

**Do not return to place of purchase!!**  
Please contact our Toll Free Hotline:  
**(866) 985-7877**  
for customer service & warranty issues



**Safety First!!**

**Warning: For OUTDOOR USE only**

This is an outdoor patio firepit and should be placed in a safe, uncovered location away from combustible materials on all sides of the product.



- \*Do NOT leave open flames or embers unattended!
- \*Do NOT allow children to be near open flames & firepit
- \*Do NOT burn EXCESSIVELY HOT fires!
- \*Do NOT use during windy periods!
- \*ALL METAL SURFACES WILL BE VERY HOT WHEN IN USE- DO NOT TOUCH!

- \*Do NOT use within 4 feet of any combustible materials or walls.
- \*Do NOT use in an enclosed, or covered location, or under tree branches.
- \*The Spark Arrester, fire screen MUST be in place at ALL times during use.
- \*Use heat resistant gloves & lift tool when removing fire screen dome.
- \*Always use the wrought iron stand provided when using the fire pit.
- NEVER place directly onto a wood floor/deck, near a wood fence or materials.
- \*If used over a wood deck, place a non-combustible material such as concrete pavers, stove-mat or hearth board directly beneath the fire pit to catch sparks & embers as well as protect the deck surface.
- \*Do not use flammable liquids, large amounts of wood pellets and/or multiple firelogs in the chiminea/fire pit which could produce extremely hot fires.
- \*Make sure there is plenty of ventilation completely surrounding the fire pit.
- \*Keep your fires reasonable. A fire that is too large or too hot can be very dangerous and could damage your firepit.
- \*Although your firepit is considered a closed system, always comply with all local laws, ordinances & statutes restricting the use of outdoor open flames in your community. Consult your local fire department.
- \*Always ensure that the fire is completely out before leaving your firepit unattended. Smother any remaining embers with sand or water.

Please use caution and common sense when burning in your firepit. Failure to adhere to the safety guidelines could result in fire damage to your deck, home or yard. Failure to exercise caution could also cause bodily injury or even death-so please be careful!



Use heat resistant gloves & lift tool when removing fire screen dome



Fire screen-spark arrester dome MUST be in place at ALL times during use.

**Lighting & Operation**

**\*BEFORE you ignite your first fire-**

- \*Place wood (no more than 3 large log pieces at a time), or firelog (no more than 1 at a time) in the center of the metal grate allowing for air flow between pieces and firepit walls.
- \*Use matches, butane lighters or electric starters. **Do NOT use gasoline, kerosene, starter fluids or other flammable liquids** that might cause a flash, high heat ignition fire.
- \*Check and remove ash build up in the fire bowl regularly.

Web: [www.wtliving.com](http://www.wtliving.com)  
Email: [cservice@welltraveled.net](mailto:cservice@welltraveled.net)