



## PALM CANYON 70"x40" TILE TOP DINING TABLE

### IMPORTANT: PLEASE READ COMPLETE INSTRUCTION SHEET PRIOR TO ASSEMBLY!

Identify all parts packed in carton against the parts list. Remove all protective materials, place parts on a nonabrasive surface to avoid scratching. If any parts are missing or damaged, DO NOT attempt to assemble. Please contact our customer service center (Monday-Friday 9:00 a.m.-5:00 p.m.CST) at 1-866-538-7735 (fax:952-946-0031), e-mail: [custserv@homecasual.net](mailto:custserv@homecasual.net) or visit our website at [www.homecasual.net](http://www.homecasual.net).

#### STEP 1

Remove the tile and set aside in a safe place until the table has been completely assembled. Turn the table rim (A) upside down. Attach 4 table legs (B) to the table rim (A) by inserting bolts (E) through the pre-drilled holes of the table legs and rim.

#### STEP 2

Insert leg connector bracket (C) into the legs. Insert bolts (F) through the pre-drilled holes of the legs and leg connector bracket. Tighten all bolts completely and cover them with plastic bolt caps (G).










#### STEP 3


Turn the table in the upright position carefully. With help of another person, place tiles (D) into the table rim. Keep touch-up paint bottle (I) for future use for both your table and chairs. Your table is now ready for use.

**Thank you for choosing a Home Casual product!**

#### IMPORTANT: To avoid damage to your table:

- An umbrella base must be used at all times.
- Make sure the plastic umbrella safety ring is installed in the center of the table before you insert the umbrella pole through the table.
- Remove the umbrella from the table when not in use or in the event of wind, rain, hail, sleet, snow, or any other inclement weather.
- In storing patio furniture, do not stack anything on glass, stone, tile or marble tabletops.
- Before storing, drain all water that may have accumulated in or around patio furniture frames. If not drained properly, water can cause freeze damage.
- Cover furniture with outdoor furniture covers when not in use.
- For safety reasons, do not sit or stand on the table.

Parts List							
A	TABLE RIM		1	F	BOLT (M6x25)		8
B	TABLE LEG		4	G	PLASTIC BOLT CAP		16
C	LEG CONNECTOR BRACKET		1	H	ALLEN WRENCH		1
D	TILE		4	I	TOUCH-UP PAINT BOTTLE		1
E	BOLT (M6x20)		8				

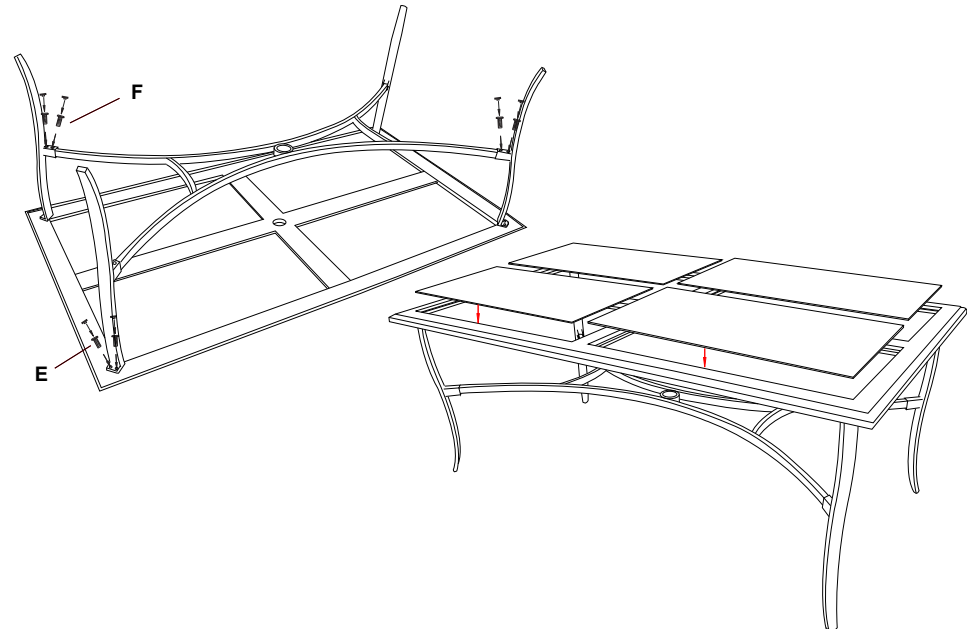



## PALM CANYON DINING CHAIR

**IMPORTANT: PLEASE READ COMPLETE INSTRUCTION SHEET PRIOR TO ASSEMBLY!**

Identify all parts packed in carton against the parts list. Remove all protective materials, place parts on a nonabrasive surface to avoid scratching. If any parts are missing or damaged, DO NOT attempt to assemble. Please contact our customer service center (Monday-Friday 9:00 a.m.-5:00 p.m.CST) at 1-866-538-7735 (fax:952-946-0031), e-mail: [custserv@homecasual.net](mailto:custserv@homecasual.net) or visit our website at [www.homecasual.net](http://www.homecasual.net).

Parts List							
<b>A</b>	CHAIR ARM (LEFT WHEN SITTING)		<b>4</b>	<b>E</b>	BOLT (M6x40)		<b>16</b>
<b>B</b>	CHAIR ARM (RIGHT WHEN SITTING)		<b>4</b>	<b>F</b>	METAL WASHER		<b>32</b>
<b>C</b>	SEAT AND BACK COMBINATION		<b>4</b>	<b>G</b>	PLASTIC BOLT CAP		<b>32</b>
<b>D</b>	BOLT (M6x15)		<b>16</b>	<b>H</b>	HEX WRENCH		<b>1</b>

### STEP 1


Place chair arm (left) (A) upside down on a flat, soft surface. Using the Hex wrench, attach the seat and back combination (C) to chair arm (left) (A) by using bolts (D&E) with metal washer (F) through each hole on the seat and back combination (C) and chair arm. Repeat this step for chair arm (right) (B).

### STEP 2

Tighten all the bolts with Hex wrench (H). Cover all bolts with plastic bolt caps (F). Turn the chair in the upright position. Place the cushion on the chair seat .

Your chair is now ready for use.

Thank you for choosing a Home Casual product!

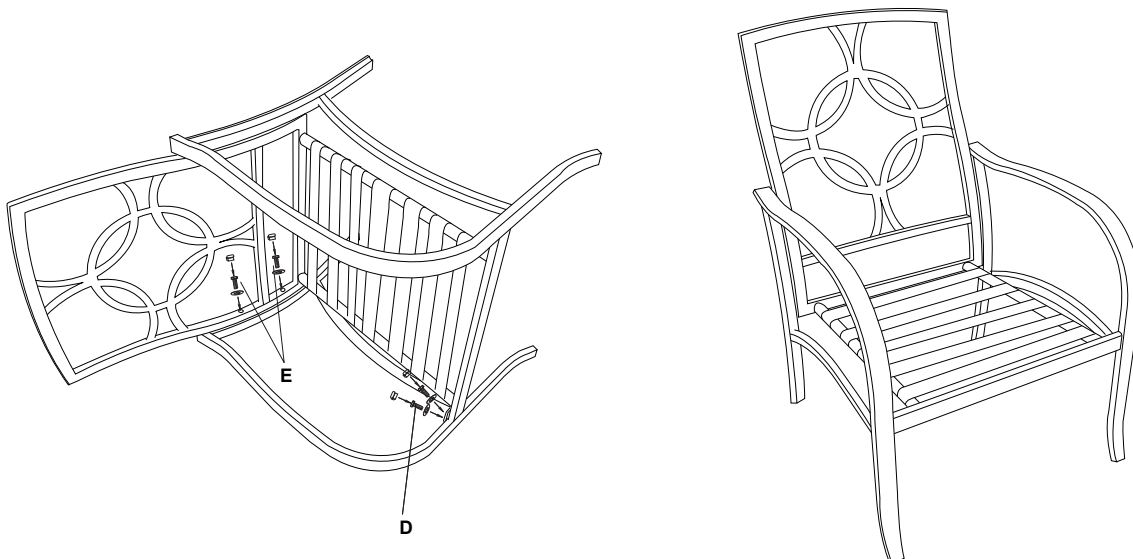



## PALM CANYON SWIVEL DINING CHAIR

**IMPORTANT: PLEASE READ COMPLETE INSTRUCTION SHEET PRIOR TO ASSEMBLY!**


Identify all parts packed in carton against the parts list. Remove all protective materials, place parts on a nonabrasive surface to avoid scratching. If any parts are missing or damaged, DO NOT attempt to assemble. Please contact our customer service center (Monday-Friday 9:00 a.m.-5:00 p.m.CST) at 1-866-538-7735 (fax:952-946-0031), e-mail: [custserv@homecasual.net](mailto:custserv@homecasual.net) or visit our website at [www.homecasual.net](http://www.homecasual.net).

### Step 1:


Place the chair frame (A) upside down on a soft surface. Align T-rock (C) on chair frame (A). (FIG. 1)

### Step 2:

Attach T-rock (C) to chair frame (A) using in order of: bolts (D), metal washers (F), rectangular steel plates (G), chair frame (A), T-rock (C), metal washer (F), nuts (E). (FIG. 2)

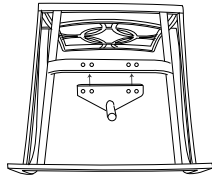

(FIG.1)

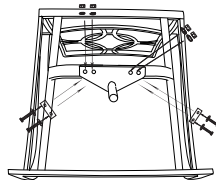

(FIG.2)

### Step 3:

Tighten all bolts and nuts by using Hex wrench (J).

### Step 4:


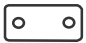 








Cover all bolts and nuts with plastic bolt and nut caps.

### Step 5:

 Insert the chair frame into the chair base by using a twisting motion as you insert.

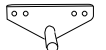Your chair is now ready for use.

Thank you for choosing a Home Casual product!

Parts List							
A	CHAIR FRAME		2	F	RECTANGULAR STEEL PLATE		4
B	CHAIR BASE		2	G	METAL WASHER		16
C	T-ROCK		2	H	PLASTIC BOLT CAP		8
D	BOLT (M8x40)		8	I	PLASTIC NUT CAP		8
E	NUT		8	J	HEX WRENCH		2

