

# Assembly



If you need assistance or find any parts missing, CALL TOLL FREE: 1-800-737-2112

## Parts Included With The Earth Auger

1. 43cc Auger Powerhead
2. 8" Auger Bit
3. Fishtail Point
4. M8-1.25 x 45 Bolt & Locknut
5. 10mm Wrench
6. 12mm Wrench
7. Spark Plug Wrench
8. 2-Cycle Engine Oil Bottle

## **▲ WARNING**

Do not operate Earth Auger if it is damaged or not securely and fully assembled.

## Tools Needed For Assembly

- Adjustable wrench.

Questions? Call Toll Free at 1-800-737-2112

5

Copyright © 2010 MAT Engine Technologies, LLC

# Assembly (Continued)

- Save all instructions

## **A To Assemble Auger Bit**

1. Insert the spark plug wrench handle into the cross hole in the adapter.
2. Hand tighten the Fishtail Point into the opposite end of the adaptor. Avoid contact with the Earth Blade and cutting edge of the Fishtail Point.
3. Grip the side of the Fishtail Point with an adjustable wrench and tighten while holding the spark plug wrench to secure the auger bit from rotating.

## **B To Assemble Auger Bit to Powerhead**



1. Move the On/Off Switch to the off position.
2. Remove the Spark Plug boot from the Spark Plug and secure the boot away from the engine and frame.
3. Insert the Powerhead output shaft into the auger bit adapter and align the top hole of the auger bit to the hole at the output shaft.
4. Insert the bolt with concave washer installed (concave side towards adapter) thru the hole in the Adapter and Powerhead shaft.
5. Install second concave washer and locknut and tighten with 13mm wrenches provided.
6. Reinstall the Spark Plug boot onto the Spark Plug.