

DO NOT RETURN TO RETAILER

IF YOU HAVE ANY

QUESTIONS OR CONCERNS

PLEASE CALL

BOND MANUFACTURING


TOLL FREE AT

866-771-2663

MONDAY – FRIDAY 8AM TO 4:30 PM PST

OR EMAIL TO customerservice@bondmfg.com

OR VISIT OUR WEBSITE ON www.bondmfg.com

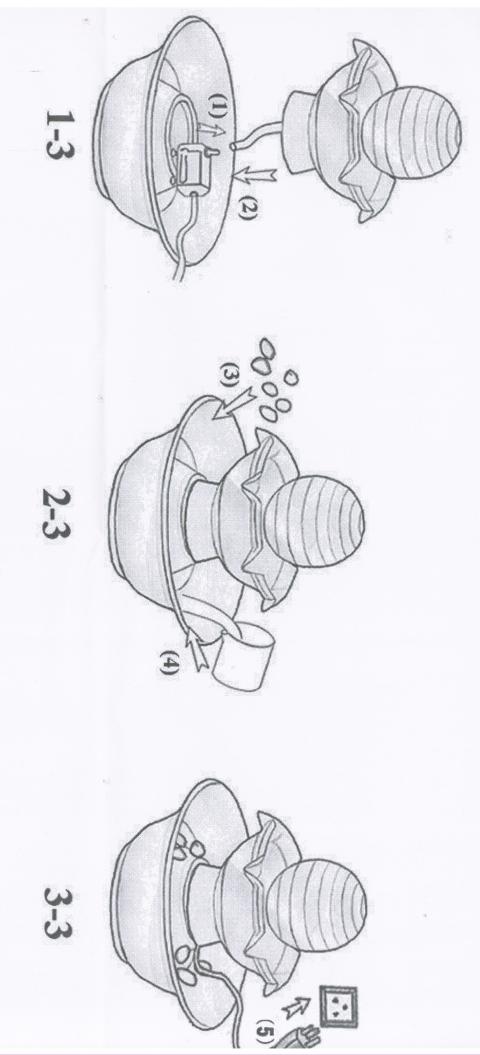


TOLL FREE AT 866-771-BOND SANS FRAIS AU 866-771-BOND SIN CARGOS AL 866-771-BOND

JEBAO®

SUBMERSIBLE AQUARIUM PUMP

OWNER'S MANUAL

operating performance. Failure to follow the instructions and warnings in this manual may result in pump damage and/or serious injury. Be sure to read, thoroughly understand, and save this manual for future reference.

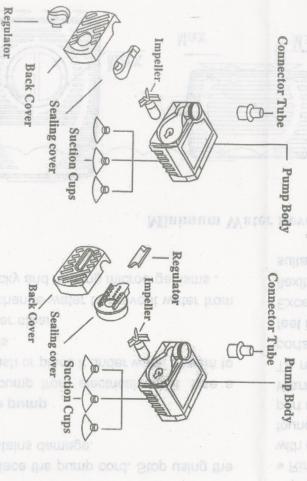

INSTRUCTIONS

- 1.Only the pump and the electrical cord directly connecting the two are to come in contact with water. Under no circumstances should the other parts come into contact with water
- 2.Do not plug-in or otherwise use this product if any part of it appears to be damaged or operates abnormally. Have the product examined and repaired, if necessary, by a qualified electrician.
- 3.Make a "drip loop" on the electrical cord connecting the pump to the plug by letting a portion of the cord hang lower than either the pump or the plug.
- 4.Do not let the pump run when not submerged in water. Doing so may damage the pump. Always submerge the pump first, and then plug in the unit. At the beginning, it probably can't pump water, because there is air in the pump and the tube. Don't worry about it. Please pull out and insert electrical outlet several times, it will work very well at once.
- 5. Take care to ensure excess power cords are stowed so as to avoid tripping.
 6. Operate the unit only under constant adult supervision and monitoring.
 Keep the unit unplugged when not under direct observation.
- 7. Use this product for indoor/outdoor.

MAINTENANCE

- 1.Use this pump with distilled water only. Mineral build up from tap water, or water from other sources, can ruin the pump.
- 2.No maintenance is necessary when this product is used in the manner described in this manual.
- 3.If debris is caught in the intake vents of the pump, disconnect the pump from any power sources and rinse the pump under clean running water.

AFELL MAINUCHURA

Assembly Instructions

- 1) Place the fountain base on a level surface.
- Before attaching the water supply tube to the pump, make sure to adjust the flow control knob to the maximum (+) setting.
- 3) Feed the power cord on the pump down through the base, leading it through the notch in the bottom of the base. Position the cord and fountain base to face the electrical outlet if possible.
- 4) Fill the base with distilled water to a level 2 inches from the top of the base. Tap water can be used, but poor water quality may accelerate wear and tear on the pump and other fountain parts.
- 5) Connect the power cable to the power source. Follow local electrical codes when selecting an extension cord size (if required) and be sure to use a GFCI outlet when using outdoors. The fountain will begin to flow. (See Hints & Troubleshooting if water does not flow)

Maintenance

- 1) Keep water clean.
- 2) Clean periodically to prevent mineral deposits and contamination.
- 3) Disconnect the power and empty the basin if fountain will not be used for an extended time.
- 4) If installed outdoors and in a freeze area of the country, ensure all water is removed and The unit is completely dry. Product is not to be operated below 41 deg. F (5 deg. C) Freeze damage may occur

Important

- 1) To reduce risk of electric shock, connect only to a properly grounded outlet.
- 2) To reduce risk of electric shock, inspect cord for damage before installation and/or maintenance. Replace entire pump/cord assembly if damage is found.
- 3) Do not remove the grounding pin from the cord.
- 4) Do not exceed voltage shown on pump.
- 5) Always disconnect from electrical outlet before handling the pump.
- 6) Do not let the pump run dry.
- 7) Do not lift the pump by it's power cord.
- 8) Do not pump heated liquids.
- 9) Operate in freshwater only.
- 10) Pump must be completely submerged for proper operation and cooling.

Hints & Troubleshooting

- 1) If the pump operates, but there is no flow, check to ensure the pump is fully submerged.
- 2) If the pump operates, but there is no flow, check the supply tubing for kinks.
- 3) If the pump operates, but there is no flow, and if the pump is submerged and there are no kinks in the supply tubing, lift the pump from the water. Remove supply tubing at pump outlet and clean tubing inside and out if necessary. Reset pump in water (outlet side up) and once water begins to flow, reattach supply tubing.