


EXPLODED VIEW & REPLACEMENT PARTS LIST

For replacement parts or the nearest service center, call toll free 1-877-841-9438

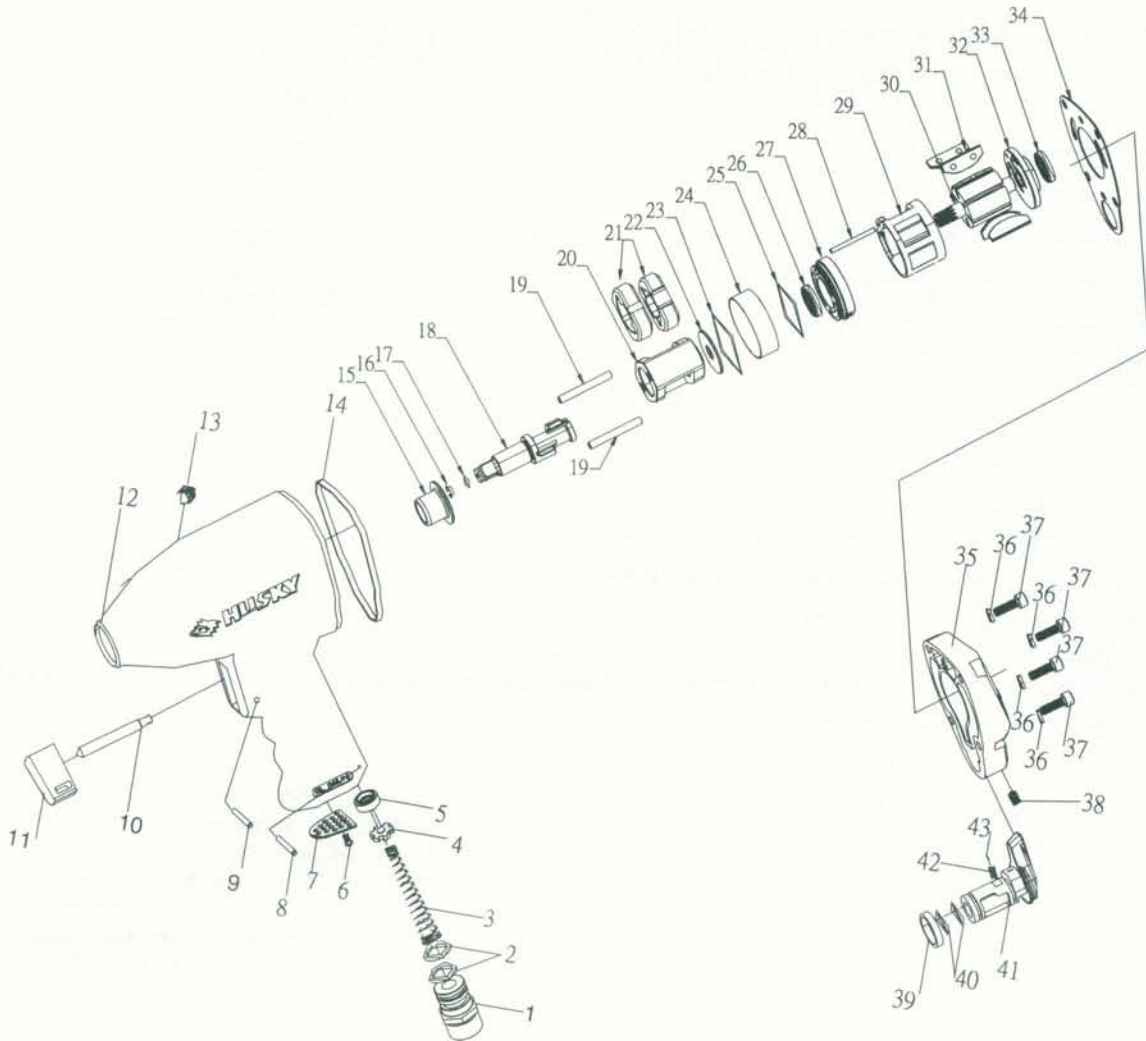

Ref. #	Part No.	Description	Qty	Ref. #	Part No.	Description	Qty
1	HSTC-AI-12-40	Air Inlet	1	23	HSTC-ORP-0560	O-Ring	1
2	HSTC-ORP-0120	O-Ring(P12)	2	24	HSTC-AI12-25	Housing Adaptor Ring	1
3	HSTC-AI12-38	Spring	1	25	HSTC-ORP-0500	O-Ring	1
4	HSTC-AI-12PM-34	Valve Stem	1	26	HSTC-BB-EE4	Ball	1
5	HSTC-AI-12PM-33	Bushing	1	27	HSTC-AI12-29	End Plate	1
6	HSTC-SS-0308A	Screw M3x6	1	28	HSTC-SP-35548	Pin3.5x54.8	1
7	HSTC-AI12-34	Exhaust Deflector	1	29	HSTC-AI12-31	Cylinder	1
8	HSTC-SP-30280	Pin(3x28)	1	30	HSTC-AI12-32	Rotor	1
9	HSTC-SP-30240	Pin(3x24)	1	31	HSTC-AI12-33	Rotor Blade	6
10	HSTC-AI12-31	Stem	1	32	HSTC-AI12-34	Rear End Plate	1
11	HSTC-AI12-11	Trigger	1	33	HSTC-BB-EE4-R85	Ball BearingEE4-R85	1
12	HSTC-AI12HU-12	Housing	1	34	HSTC-AI12-35	Gasket	1
13	HSTC-SS-0806	Screw M8x6	1	35	HSTC-AI12-36	Rear Cover	1
14	HSTC-AI12HU-14	Washer	1	36	HSTC-WW-0005	Washer	4
15	HSTC-AI12-16	Bushing	1	37	HSTC-SS-0520	ScrewM5x1.25P*x20	4
16	HSTC-AI12-17	Anvil Collar	1	38	HSTC-SS-0406	ScrewM4x0.7Px6L	1
17	HSTC-AI12-18	O-Ring	1	39	HSTC-AI12-29	Washer	1
18	HSTC-AI12-19	Anvil	1	40	HSTC-ORP-0150A	O-Ring	2
19	HSTC-AI12-20	Hammer Pin	2	41	HSTC-AI12-39	Regulator Knob	1
20	HSTC-AI12-21	Hammer Frame	1	42	HSTC-AI12-13	Spring	1
21	HSTC-AI12-22	Hammer	2	43	HSTC-SB-0035	Steel Ball	1
22	HSTC-AI12-23	Spacer	1				