



## TRAMORE 46'X30" MARBLE COFFEE TABLE

**IMPORTANT: PLEASE READ COMPLETE INSTRUCTION SHEET PRIOR TO ASSEMBLY!**

Identify all parts packed in carton against the parts list. Remove all protective materials, place parts on a nonabrasive surface to avoid scratching. If any parts are missing or damaged, DO NOT attempt to assemble. Please contact our customer service center (Monday-Friday 9:00 a.m.-5:00 p.m.CST) at 1-866-538-7735 (fax:952-946-0031), e-mail: [custserv@homecasual.net](mailto:custserv@homecasual.net) or visit our website at [www.homecasual.net](http://www.homecasual.net).

### STEP 1

Insert leg connector bracket (C) into the legs. Insert bolts (E) through the pre-drilled holes of the legs and leg connector bracket.  
(DO NOT TIGHTEN COMPLETELY!)









### STEP 2


Turn the table top (A) upside down. Attach 4 table legs (B) to the table top (A) by inserting bolts (D) through the pre-drilled holes of the table legs and top.  
Tighten all bolts completely and cover them with plastic bolt caps (F).

### STEP 3

With help of another person, turn the table in the upright position carefully.  
Keep touch-up paint bottle (H) for future use for both your table and chairs.  
Your table is now ready for use.

**Thank you for choosing a Home Casual product!**

Parts List							
A	TABLE TOP		1	E	BOLT (M6x25)		8
B	TABLE LEG		4	F	PLASTIC BOLT CAP		16
C	LEG CONNECTOR BRACKET		1	G	ALLEN WRENCH		1
D	BOLT (M6x15)		8	H	TOUCH-UP PAINT BOTTLE		1

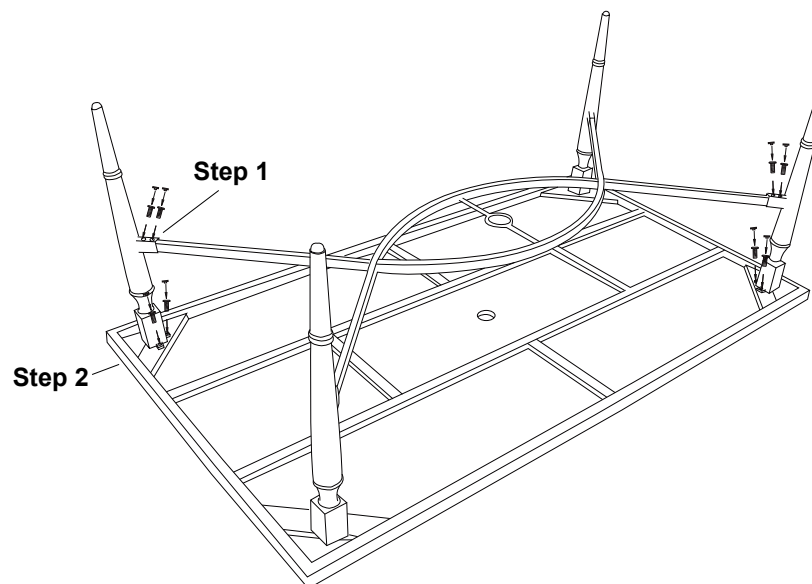

**IMPORTANT:** To avoid damage to your table:







- An umbrella base must be used at all times.
- Make sure the plastic umbrella safety ring is installed in the center of the table before you insert the umbrella pole through the table.
- Remove the umbrella from the table when not in use or in the event of wind, rain, hail, sleet, snow, or any other inclement weather.
- In storing patio furniture, do not stack anything on glass, stone, tile or marble tabletops.
- Before storing, drain all water that may have accumulated in or around patio furniture frames. If not drained properly, water can cause freeze damage.
- Cover furniture with outdoor furniture covers when not in use.
- For safety reasons, do not sit or stand on the table.



## TRAMORE DEEP SEATING CHAIR

 **IMPORTANT: PLEASE READ COMPLETE INSTRUCTION SHEET PRIOR TO ASSEMBLY!**

Identify all parts packed in carton against the parts list. Remove all protective materials, place parts on a nonabrasive surface to avoid scratching. If any parts are missing or damaged, DO NOT attempt to assemble. Please contact our customer service center (Monday-Friday 9:00 a.m.-5:00 p.m.CST) at 1-866-538-7735 (fax:952-946-0031), e-mail: [custserv@homecasual.net](mailto:custserv@homecasual.net) or visit our website at [www.homecasual.net](http://www.homecasual.net).

Parts List							
<b>A</b>	SEAT AND BACK COMBINATION		<b>2</b>	<b>D</b>	METAL WASHER		<b>8</b>
<b>B</b>	CHAIR BASE		<b>2</b>	<b>E</b>	PLASTIC BOLT CAP		<b>8</b>
<b>C</b>	BOLT (M6x25)		<b>8</b>	<b>F</b>	HEX WRENCH		<b>1</b>


### STEP 1

Place the seat and back combination (A) upside down on a flat, soft surface. Attach the chair base (B) to the seat and back combination (A) by using bolts (C) with metal washers (D) through each hole on the chair base and then into the seat and back combination (A).

### STEP 2

Tighten all the bolts with Hex wrench (F). Cover all bolts with plastic bolt caps (E). Turn the chair in the upright position. Place the cushion on the chair seat.

**Your chair is now ready for use.  
Thank you for choosing a Home Casual product!**

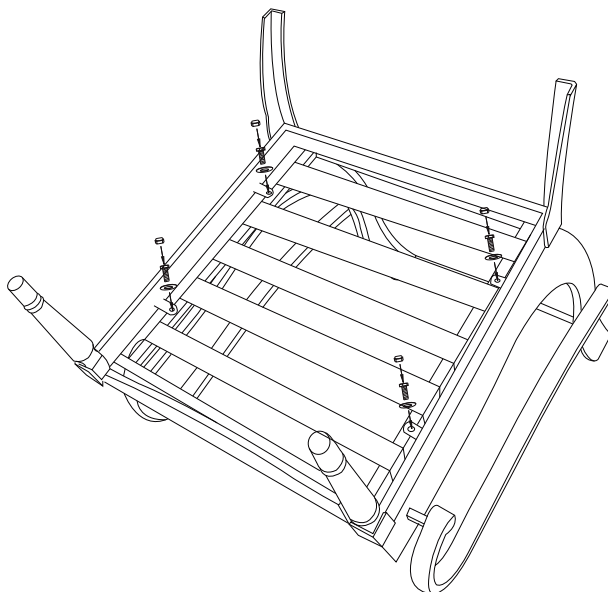










## TRAMORE DEEP SEATING SOFA

**IMPORTANT: PLEASE READ COMPLETE INSTRUCTION SHEET PRIOR TO ASSEMBLY!**

Identify all parts packed in carton against the parts list. Remove all protective materials, place parts on a nonabrasive surface to avoid scratching. If any parts are missing or damaged, DO NOT attempt to assemble. Please contact our customer service center (Monday-Friday 9:00 a.m.-5:00 p.m.CST) at 1-866-538-7735 (fax:952-946-0031), e-mail: [custserv@homecasual.net](mailto:custserv@homecasual.net) or visit our website at [www.homecasual.net](http://www.homecasual.net).

### Parts List

Parts List							
<b>A</b>	<b>SEAT AND BACK COMBINATION</b>		<b>1</b>	<b>E</b>	<b>METAL WASHER</b>		<b>7</b>
<b>B</b>	<b>SOFA BASE</b>		<b>1</b>	<b>F</b>	<b>PLASTIC BOLT CAP</b>		<b>7</b>
<b>C</b>	<b>BOLT (M6x25)</b>		<b>4</b>	<b>G</b>	<b>HEX WRENCH</b>		<b>1</b>
<b>D</b>	<b>BOLT (M6x40)</b>		<b>3</b>				

### STEP 1

Place the seat and back combination (A) upside down on a flat, soft surface. Attach the sofa base (B) to the seat and back combination (A) by using bolts (C&D) with metal washers (E) through each hole on the sofa base and then into the seat and back combination (A).

### STEP 2

Tighten all the bolts with Hex wrench (G). Cover all bolts with plastic bolt caps (F). Turn the sofa in the upright position. Place the cushion on the sofa seat.

Your sofa is now ready for use.

Thank you for choosing a Home Casual product!

