


ASSEMBLY INSTRUCTIONS

STEEL FIREPIT WITH CAST ALUMINUM TOP ITEM#99589

IMPORTANT !!! PLEASE READ ENTIRE INSTRUCTION SHEET BEFORE ASSEMBLY !!!

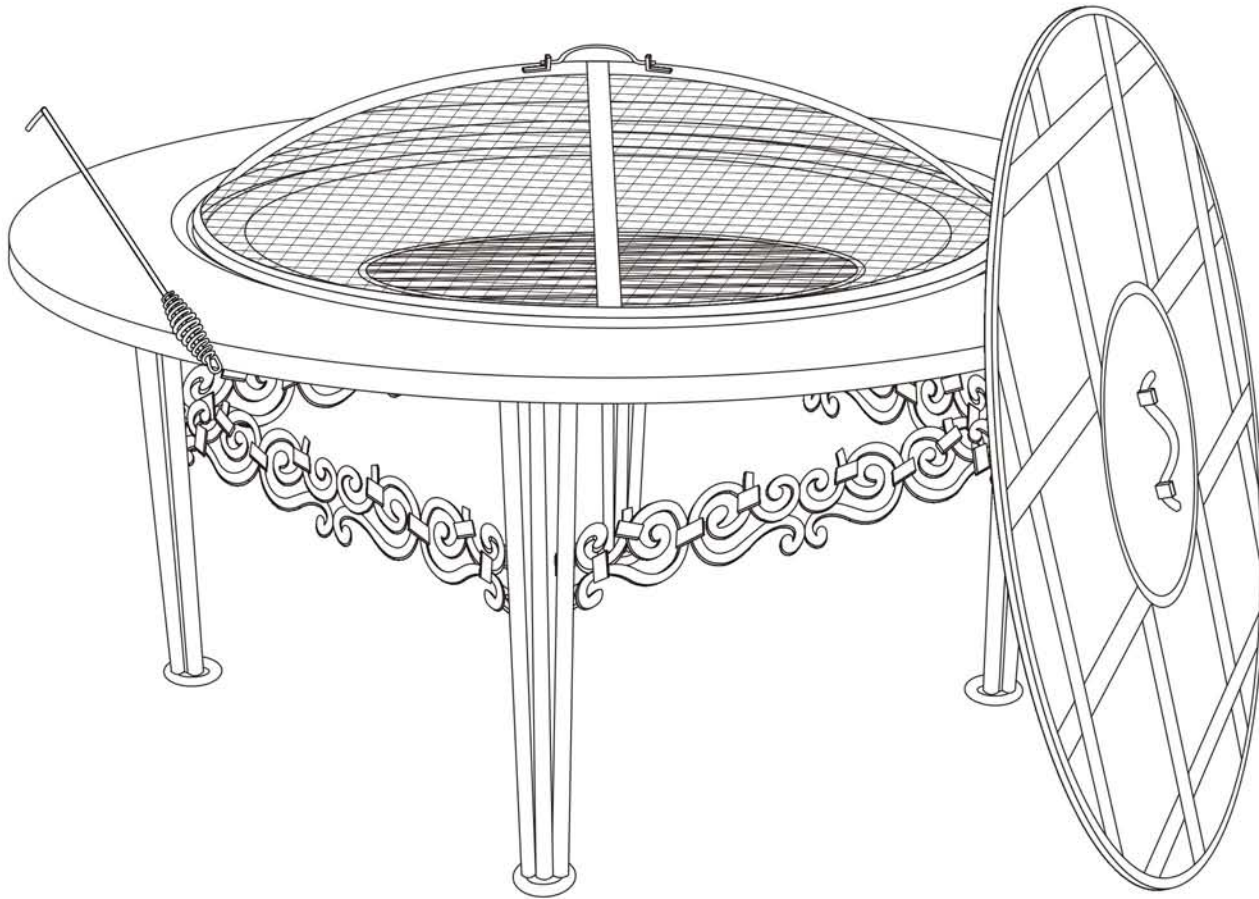

WARNING:

1. FIREPLACE IS INTENDED FOR OUTDOOR USE ONLY. DO NOT USE ON WOODEN DECKS.
2. FIREPLACE IS INTENDED TO BURE WOOD LOGS ONLY . DO NOT BURE COAL.LEAVES OR OTHER COMBUSTIBLE MATERIALS IN THE FIREPLACE.
3. NOT FOR USE BY CHILDREN, KEEP CHILDREN&PETS AWAY FROM FIREPLACE.
4. FIREPLACE IS HOT. USE WITH CAUTION. NEVER TOUCH HOT FIREPLACE WITH BARE HANDS. NEVER BURNING FIREPLACE UNATTENDED AND ALWAYS EXTINGUISH FIRE COMPLETELY BEFORE LEAVING THE FIREPLACE.
5. DO NOT USE NEAR FLAMMABLE OR COMBUSTIBLE OBJECTS OR MATERIALS.
6. GRATE IS NOT INTENDED FOR COOKING AND SHOULD NOT BE USED FOR THIS PURPOSE.

Step 1.

Identify all parts packed in the carton against the parts list. Remove all protective materials. Set the parts on a flat, non-abrasive surface. If you are missing any parts or unsure how to assembly, please contact our Customer Service Center immediately at 1-800-416-3511. Do not attempt to assembly if any parts are missing or damaged.

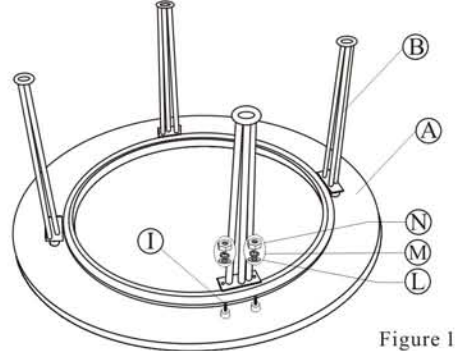


Figure 1

Step 2.

Carefully place Cast Aluminum Tabletop Rim (A) upside down on a flat, non-abrasive surface. Insert 1/4" x 30mm Headless Bolts (I) into pre-drilled holes in the tabletop rim. Tighten headless bolts. Do not over-tighten. Attach Firepit Leg (B) by positioning over headless bolts (I) as shown in Figure 1. Add a 1/4" washer (L), 1/4" lock washer (M) and 1/4" nut (N) to the end of each bolt. Tighten nuts and bolts a few revolutions at a time only as some adjustments may be necessary for proper alignment of the Firepit Legs and the Tabletop Rim. **DO NOT TIGHTEN COMPLETELY.**

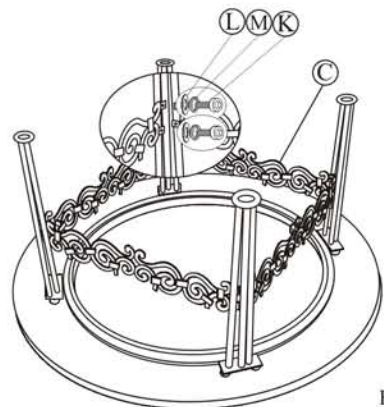


Figure 2

Step 3.

CAREFULLY NOTE THE PROPER POSITION FOR ASSEMBLY OF THE DECORATIVE TRIM IN FIGURE 2 BEFORE BEGINNING THIS STEP. Attach Decorative Trim (C) to Firepit Legs (B) using 1/4" x 18mm Hex Bolts (K), 1/4" Washers (L), and 1/4" Lock Washers (M) as shown in Figure 2. Tighten nuts and bolts a few revolutions at a time only as some adjustments may be necessary for proper alignment of the Firepit Legs and the Tabletop Rim. **DO NOT TIGHTEN COMPLETELY.**

At this time, make any adjustments to the alignment of the Firepit Legs, Tabletop Rim, and Decorative Trim. Once properly aligned, tighten each nut and bolt a few revolutions at a time, alternating between bolt joints until all nuts and bolts are completely tightened. **DO NOT OVER TIGHTEN.**

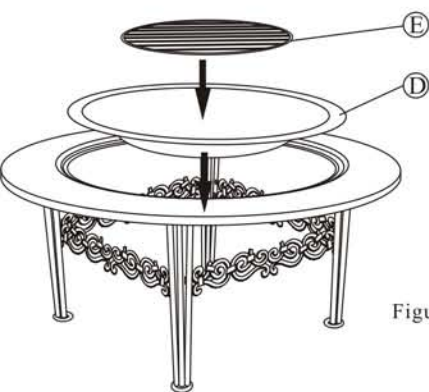


Figure 3

Step 4.

With the help of another person, carefully turn the Firepit to the upright position as shown in Figure 3. Place the steel Fire Bowl (D) onto the Tabletop Rim(A). Position the Iron Grate (E) in the center of the Fire Bowl.

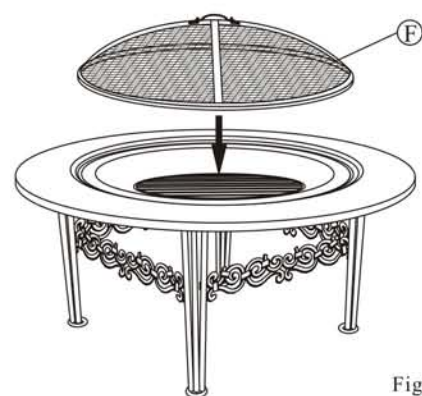


Figure 4

Step 5.

Place the mesh cover (F) over the steel Fire Bowl (D) as shown in Figure 4. **CAUTION: TO PREVENT HOT EMBERS FROM ESCAPING, ALWAYS PLACE THE MESH COVER OVER THE FIRE BOWL BEFORE LEAVING THE FIREPIT.**

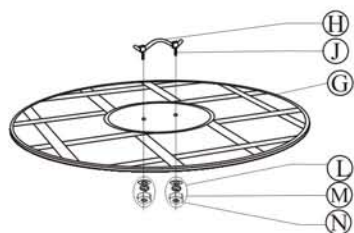


Figure 5

Step 6.

Insert a 1/4" x 28mm Headless Bolt (J) into each of the pre-drilled holes in the Cover Handle (H). Tighten bolts. Do not over tighten. Guide other end of Headless Bolts through holes in Fire Bowl Cover (G) as shown in Figure 5. Add a 1/4" washer (L), a 1/4" lock washer (M), and a 1/4" nut (N) to the end of each bolt. Tighten. Do not over tighten.



Figure 6

Step 7.

As shown in Figure 6, the Mesh Cover (F) can be stored upside down inside the steel Fire Bowl (D) when Firepit is not in use. Always clean firepit Fire Bowl after use. Be sure to let ashes cool completely before cleaning Fire Bowl.

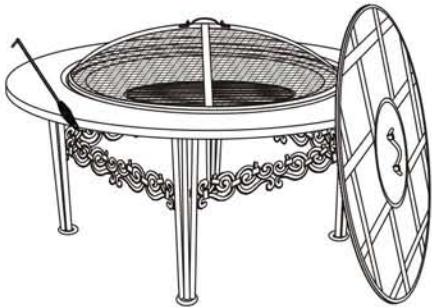










Figure 7

Step 8.

Final Firepit assembly shown in Figure 7. After reading the usage warnings on first page, your firepit is ready for use.

	PART LIST	DESCRIPTION	ORDER PART #	QTY
A		CAST ALUMINUM TABLE TOP RIM	FP0403	1
B		STEEL LEG	FP0404	4
C		DECORATIVE TRIM	FP0405	4
D		STEEL FIRE BOWL	FP0406	1
E		IRON GRATE	FP0407	1
F		MESH COVER	FP0408	1
G		FIRE BOWL COVER	FP0409	1
H		FIRE BOWL COVER HANDLE	FP0410	1

	PART LIST	DESCRIPTION	ORDER PART #	QTY
I		1/4" * 30 HEADLESS BOLT	HW0498	8
J		1/4" * 28 HEADLESS BOLT	HW0499	2
K		1/4" * 18 HEX BOLT	HW0371	16
L		1/4" WASHER	HW0331	26
M		1/4" LOCK WASHER	HW0332	26
N		1/4" NUT	HW0014	10
O		WRENCH	HW0366	1
P		FIRE POKER	FP0411	1