

READ AND SAVE THESE INSTRUCTIONS

INSTRUCTIONS FOR MOUNTING LIGHT FIXTURES KG1K




WARNING: To reduce the possibility of electrical shock, be sure that the power is turned off at its source (fuse or circuit breaker). All electrical components must be installed in accordance with national and local electrical codes. To reduce the risk of fire and electrical shock, this light fixture should be used only with UL, ETL & CUL Certified Casablanca ceiling fans that are compatible. See your dealer for a compatibility chart.

INSTALLING THE LIGHT FIXTURE

Step 1.

- a) Remove switch housing cup from carton
- b) Remove plug from bottom of switch housing cup.
- c) Pass the wires from the light fixture through the outer hole of the switch housing cup, thread cup onto light fixture threads until tight.
- d) Locate the locknut. Pass wires from light fixture through the lock nut and thread on light fixture until tight.

FAN PULL CHAIN

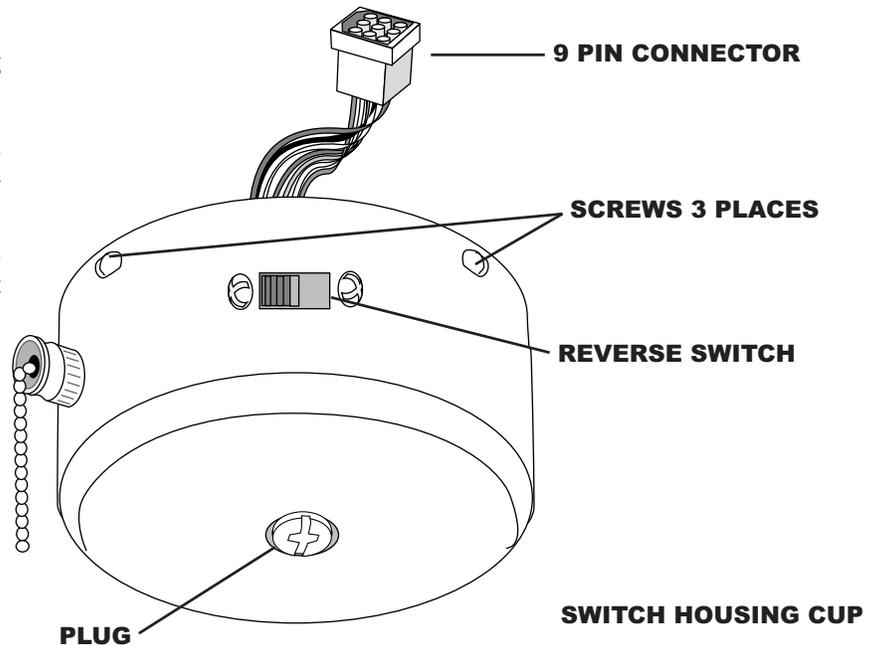


e) Locate the 2 wires from the switch housing cup labeled "lights". Remove plastic wire nuts from switch housing cup wires and strip 1/2" insulation from both wires (blue & white). Connect the wires from the switch housing cup to the wires from the light fixture: Blue to Black and White to White by placing the bare ends of the wires together and then secure with the wirenuts. CAUTION: Make sure no bare wires are exposed. Test the secureness of each splice by pulling on the wire nut.

f) Reconnect the 9 pin connector from the fan to the switch housing cover.

g) Remove the 3 screws from the switch housing mounting bracket.

h) Align switch housing cover with the bracket holes on the fan, making sure no wires are pinched in the process.

i) Install the 3 screws removed in step "g". Again make sure that no wires are pinched in the process.

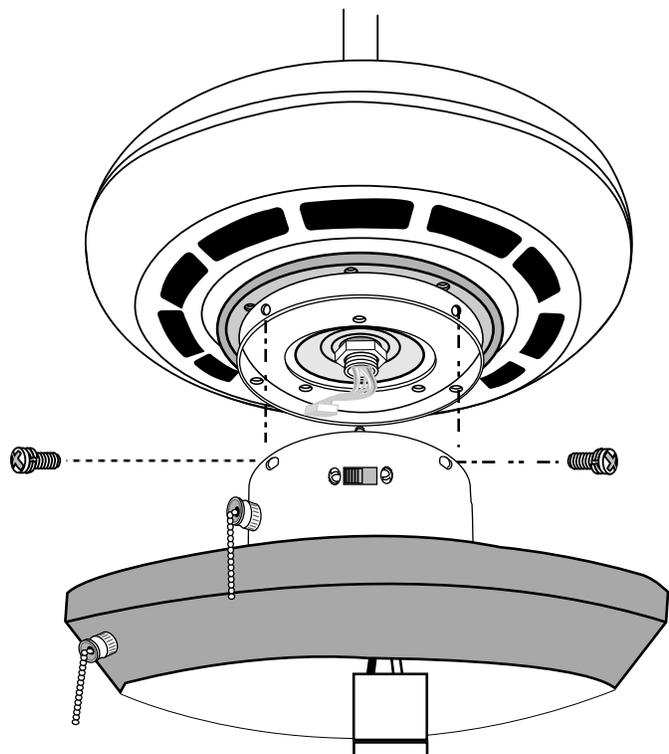


INSTALLING THE LIGHT FIXTURE

j) Install appropriate light bulbs(100W A19 Bulb). Do not exceed the maximum wattage indicated on the light fixture

k) Align the three (3) indents in the glass with the three(3) tabs in the shade holder and turn right(clockwise) until the glass is locked in place

l) Connect fob pull chains to light pull chain and fan pull chain.

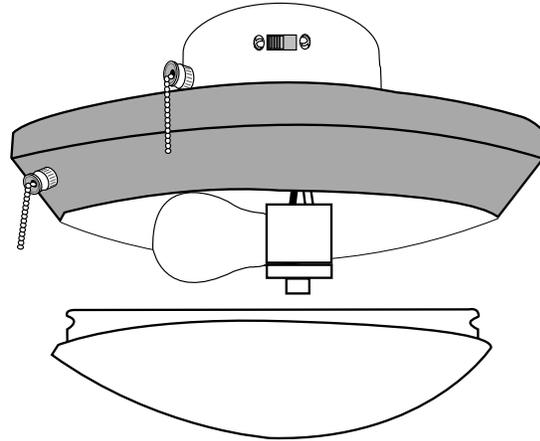

TROUBLESHOOTING

BEFORE REQUESTING SERVICE:

Please follow this troubleshooting guide before contacting your dealer for assistance.

Caring for Finishes: For cleaning, a soft brush or lint-free cloth should be used to prevent scratching the finish. A vacuum cleaner brush nozzle can remove heavier dust. Surface smudges or an accumulation of dirt and dust can easily be removed by using a mild detergent and slightly dampened soft cloth. An antistatic agent may be used, but **never** use abrasive cleaning agents. These will damage the finish. Painted and high-gloss blades may be cleaned in the same manner.

Blades: Wood finish blades should be cleaned with a furniture polishing cloth. Occasionally, a light coat of furniture polish may be applied for added protection and beauty.
Never Lubricate this Fan!

The precision motor at the heart of your Airflow fan features sealed bearings that are lubricated for life. Do not attempt to oil the motor.

Changing Light Bulbs

Be sure to turn power to the fan OFF at the wall switch or circuit breaker before changing light bulbs. Replace bulbs with same type as removed from the fixture. Each fan is rated for a maximum **TOTAL** wattage of lighting.

Exceeding the rated maximum allowable wattage for the fan will burn out the fan electronics module and void the warranty.

PROBLEM

POSSIBLE REMEDIES

FAN WILL NOT START	Check main circuit fuses, circuit breakers, or wall switch position. Check all wire connections, making sure the power is turned off during this inspection. Check that reverse switch is not set in center of throw.
FAN WOBBLER OR SHAKES EXCESSIVELY	Be sure canopy pin is properly set into the slot on the ball. Check the screws holding the blade holders to the flywheel (or direct drive motor). Tighten as necessary. Check that bladeholders have not been bent during installation.
FAN NOISY DURING OPERATION	Check and tighten light fixture retaining screws, glass shade screws and/or the light bulb(s) as necessary. Tighten the blade to bladeholder screws. Tighten canopy screws and mounting plate assembly. Check and tighten blade holders to flywheel (or direct drive motor). Make sure all screws in the motor housing are snug, but not overly tight. Check that the wire nuts inside the canopy and switch housing are not touching the metal parts or have fallen off the wire splices. Tighten or adjust as necessary.
BREAK-IN PERIOD DOES NOT RUN ON LOW SPEED	Let fan run at high speed for two (2) hours If new, "break-in" may be required - run at higher speed for several days

For questions or to locate the nearest
Airflow Authorized Service Center
call toll free:

1-888-227-2178