



Add-on Wireless Color Digital Camera User Manual

HOME
MONITORING

SMALL BUSINESS
PROTECTION

BABY
MONITORING

NANNY CAM

THEFT DETECTION
& PREVENTION

NIGHT VISION

DOORWAY
MONITORING
(INDOORS)

WAITING AREAS

CAREGIVER ASSISTANCE/
MONITORING

PET SUPERVISION



<http://goo.gl/3wUHy>

NOTE: Camera and surveillance products may be prohibited by laws that vary under federal and state laws. IT IS THE SOLE RESPONSIBILITY OF THE USER TO DETERMINE WHETHER THEIR USE OF THESE PRODUCTS VIOLATES ANY APPLICABLE FEDERAL OR STATE LAWS.

Congratulations on your purchase of this add-on camera for the GE Wireless Color Digital Home Monitoring Kit! Please review these instructions carefully and retain them for your future reference.

PACKAGE CONTENTS:

Please locate and identify all the parts before proceeding:

- (1) Camera
- (1) AC power supply adapter
- (1) Camera wall plate and mounting hardware

 
 
 
 


CAMERA FEATURES:

- 2.4GHz digital wireless technology—private and secure monitoring with interference-free picture and sound
- Built-in motion and/or sound detection
- Built-in night vision (black & white, up to 20ft visibility)
- Built-in microphone for broadcasting audio to monitor automatically
- Built-in night light (manually activated on camera or remotely activated on monitor)
- (4) Musical lullabies (remotely activated on monitor)
- Tabletop or wall mount options
- Portable operation using (4) AA batteries or optional rechargeable battery pack (sold separately at www.jascoproducts.com)



For the most up-to-date product support, accessories, electronic (PDF) format manuals and more, visit www.jascoproducts.com/support or Call 1-800-654-8483, option 1 M-F, 8-5pm CST

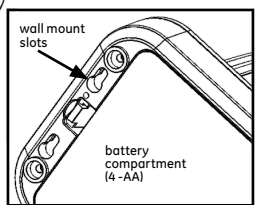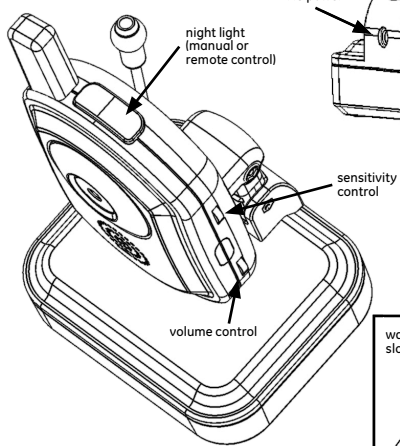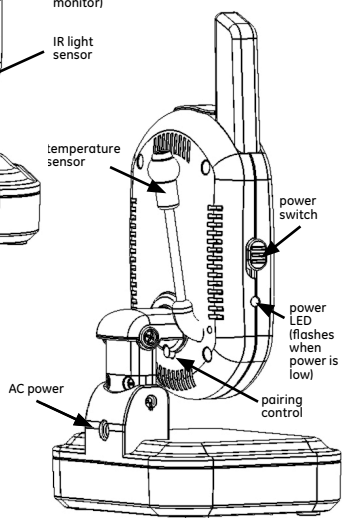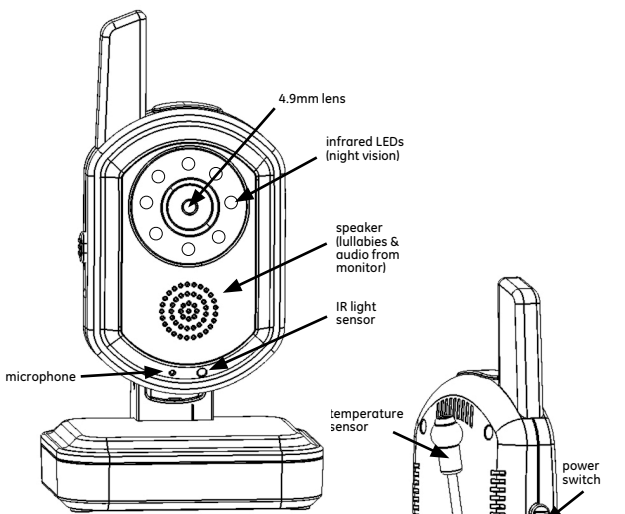

INITIAL SETUP:

NOTE: Before use, remove the plastic film protecting the night vision LEDs (around lens).

Supply power to the camera using one of the following options:

• **AC Adapter-**

1. Plug-in one of the two AC power adapters into an electrical outlet.
2. Insert the other end of the power adapter into the base of the camera.
3. Locate the power switch on the left side of the camera.
4. Slide the power switch to the 'on' position. The power LED will illuminate green below the OFF position.

• **AA Batteries-**

1. Locate the rear battery compartment underneath the base of the camera.
2. Push the tab towards the batteries to release the cover.
3. Insert the batteries, following the polarity diagram shown inside the battery compartment.
4. Locate the power switch on the left side of the camera.
5. Slide the power switch to the 'on' position. The power LED will illuminate green below the OFF position.

NOTE: A flashing POWER LED indicates a low battery.

Special Note: In the event of a power outage, having standard AA batteries installed in the camera WILL NOT act as a 'battery backup' for the absence of AC power. An optional rechargeable LI-polymer battery pack is available that WILL serve as a battery backup during a power outage. Optional rechargeable Li-polymer battery packs can be ordered online at www.jascoproducts.com or by contacting our sales department at 800-654-8483.

⚠ WARNING

Strangulation Hazard

Children have been strangled in cords.

Keep away from children

- Keep all cords at least 3 ft. away from infant cribs
- Do not use with household extension cords
- Do not remove warning tags

⚠ CAUTION

Batteries may leak harmful liquids or ignitable materials or explode causing injury or product damage.

- Do not mix old and new or other battery types
- Replace all batteries at the same time
- Replace fully discharged batteries immediately
- Remove batteries if product is to be unused for extended period of time

Camera Placement - Built-in Tabletop Stand and/or Wall Mount

NOTE: It is recommended to complete the **'Initial Setup'** procedures for the monitor before proceeding with mounting the camera.

 
To simplify the mounting process, a custom wall mounting plate is included with the mounting hardware.

1. After selecting an ideal location, use the supplied mount as a template. Drill 3/16" holes where indicated.
2. Insert wall anchors (unless screwing directly into a stud).
3. Secure the mounting plate to the wall.
4. Disconnect AC power adapter (if connected).
5. Slide the base of the camera onto the mounting plate.
6. Connect the AC power adapter.

NIGHT LIGHT FEATURE:

The Night Light can be activated two ways:

1. **Manually** - Press and release the button on top of the camera to manually turn on or off.
2. **Remotely** - Press and release the button on the right side of the monitor. The night light will illuminate on the camera shown on the screen.

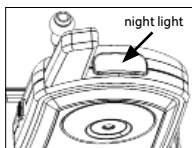

NOTE: The night light feature is not supported in quad mode (multi-screen) view—only in single camera view.

 
PAIRING THE CAMERA:

1. Follow the **'Initial Setup'** procedures first.
2. Press and release the **'menu'** button on the monitor. Using the directional keypad, highlight the **'Pairing'** option. Press and release the **'ok'** button.
3. Using the directional keypad, highlight the camera number desired. Cameras previously assigned can be overwritten. Press and release the **'ok'** button to save.



4. Press and release the **'pair'** button, located on the bottom rear part of the camera head.


The monitor will allow 30 seconds before timing out. If successful, the camera will be automatically added and a live video stream will appear on the display.

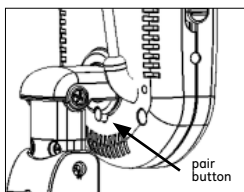

ADJUSTING THE SOUND AND/OR MOTION DETECTION SENSITIVITY

• Sound

 1. Identify the **'sensitivity'** dial and adjust as shown.
2. Turn the dial completely down to disable sound detection.

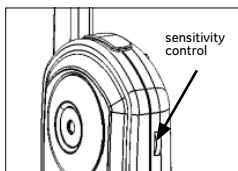

• Motion

1. Press and release the **'menu'** button on the monitor. Using the directional keypad, highlight the **'Record'** option.



2. Press and release the **'ok'** button. Using the directional keypad, highlight the **'Motion Sensitivity'** option.
3. Press and release the **'ok'** button. Use the directional keypad to highlight **'High', 'Medium', 'Low'** or **'Off'**. Press and release the **'ok'** button.
4. Press and release the **'menu'** button to exit.

TECHNICAL SUPPORT:

For additional assistance:

Online: www.jascoproducts.com/support

Email: support@jascoproducts.com

Our in-house call center is open M-F, 8-5pm central
(except holidays and special events).

Featuring the most updated copy of the user manual, FAQs, firmware updates and demonstration videos. Live chat support also available for product information, troubleshooting and warranty requests (M-F, 8-5 central).

For product information, troubleshooting and warranty calls:

800-654-8483, option 1

For consumer/business sales: 800-654-8483, option 2

Mailing Address:

Jasco Products Company, Attn: CIC,

10 E Memorial Rd, Bldg B, Oklahoma City, OK 73114

Please contact technical support (using one of the above options) before attempting to ship product returns or warranty requests. Failure to do so may delay processing times considerably.

CAMERA SPECIFICATIONS:

Imaging Sensor: 1/4" CMOS
Lens Type: 4.9mm F2.8
Minimum Illumination: 0 Lux with IR Illumination
System Resolution: QVGA (320X240)-Monitor
..... VGA (640X480)-USB
Imager Resolution: VGA (640 x 480)
View Angle: 45°
Night Vision Range: 16ft
Temperature Sensor: -10~35C (14~ 95F)
Current Consumption: 540mA
Battery Type: 4AA Alkaline
Battery Life: Up to 4 hours
Dimensions: 3.3mm x 2.6mm x 6.3mm
Weight: 130 grams

FCC STATEMENT

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

FCC NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ONE-YEAR LIMITED WARRANTY

Jasco Products Company warrants this product to be free from manufacturing defects for a period of one year from the original date of consumer purchase. This warranty is limited to the repair or replacement of this product only and does not extend to consequential or incidental damage to other products that may be used with this unit. This warranty is in lieu of all other warranties express or implied. Some states do not allow limitations on how long an implied warranty lasts or permit the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state. If unit appears to be defective within the warranty period, please contact our technical support team for assistance ('Technical Support' section in the manual).



is a trademark of General Electric Company
and is under license by Jasco Products Company LLC,
10 E. Memorial Road, Oklahoma City, OK 73114
www.jascopeproducts.com