

DASH go™
unprocess your food™



PERSONAL BLENDER

INSTRUCTION MANUAL

MODEL DPBD001

DASH GO PERSONAL BLENDER

TABLE OF CONTENTS

Safety Guidelines.....	4
Parts & Features.....	5
Using and Cleaning Your Toaster	6
Warranty.....	7

SAFETY GUIDELINES

- Read all instructions.
- Remove all bags and packaging from appliance before use.
- To reduce the risk of severe injury or damage, keep hands and utensils away from moving Blades while appliance is engaged.
- Keep hands and utensils out of the Processing Cup while the motor is running.
- Do not put fingers, hair, clothing or other objects into the blender while appliance is in use. If food becomes lodged in the Blades, turn off and unplug the Personal Blender before trying to remove it.
- Always make sure the Processing Cup is locked securely in place before engaging the motor. Do not remove the Cup before Blades have stopped moving.
- Do not operate the appliance when the Processing Cup is empty.
- Caution: Blades are sharp and can cause injury! Handle and clean with care.
- Do not touch the Blades. Hold the Blade attachment by the black base.
- To prevent the risk of fire, electric shock, or personal injury, do not place the cord, plug, or unit near water or other liquids.
- When cleaning the Personal Blender, remove the Processing Cup from the Motor Base and wash. Never immerse the Motor Base in water or any other liquid; instead, wipe with a damp cloth.
- Never leave appliance unattended when in use.
- Turn off and unplug appliance when not in use.
- Make sure to securely attach the Blade to the Processing Cup before screwing into Motor Base.
- Avoid contact with moving parts.
- Do not microwave Processing Cups or Lids.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always be sure to unplug the appliance from outlet prior to assembly, disassembly, cleaning and storage.
- Wait until the Blade comes to a complete stop before removing Processing Cup from Motor Base.
- If the Motor Base gives off a burnt smell, immediately turn off and unplug the Personal Blender. Allow appliance to cool before resuming use. If smell persists, discontinue use until problem is solved.
- Do not let the cord touch hot surfaces or hang over the edge of tables or counters.
- Do not operate any appliance with a damaged cord or plug.
- Do not use the appliance if any of the parts are damaged.
- Do not use Processing Cup if it is cracked or chipped.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock or personal injury.
- Do not use appliance outdoors or for commercial purposes.
- Extension cords are not recommended for use with this appliance. However, if an extension cord must be used, make sure the electrical rating of the wire is compatible with the Personal Blender.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Do not place utensils, fingers or other foreign objects inside the Personal Blender.
- Do not attempt to blend frozen ingredients that have formed a solid mass. Break up into smaller pieces before placing in Processing Cup.
- Warning: the Personal Blender is not suitable for making crushed ice.
- Always place soft or liquid food in Processing Cup before adding hard food or ice cubes.
- Improper use of the Personal Blender can result in property damage or even in personal injury.
- Never overfill the Processing Cup. Do not exceed the MAX line.
- Do not place hot liquids in Personal Blender. Allow ingredients to cool to room temperature prior to pouring into Processing Cup.
- Do not use the Personal Blender for more than 3 minutes at a time. Allow the motor to rest for 3 minutes between blending cycles.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

PARTS AND FEATURES

- 1. Processing Cup
- 2. Blade
- 3. Motor Base
- 4. Non-Slip Feet
- 5. Resealable Lids



USING YOUR PERSONAL BLENDER

Clean the Personal Blender and all of its components prior to assembly and use. Remove any stickers and packaging before first-time use.

WARNING: This appliance is NOT designed for blending foods without liquids.

NOTE: The Personal Blender is designed to function only when the Processing Cup is correctly inserted into the Motor Base and the top of the Cup is pressed down.

1. Place the Motor Base on a stable surface. Plug the cord into a power outlet.
2. Place your ingredients in the selected Processing Cup. Make sure to put all liquid ingredients in first, then powdered ingredients, and finally any solid ingredients. Do not exceed the MAX level marked on Cup. Securely attach Blade to Cup by carefully inserting blade end into Cup and turning the clockwise.
3. Insert the Processing Cup in the Motor Base with the blade end down, making sure to fit the locking tabs into the slots located on the Motor Base.
4. To begin blending, turn the Processing Cup clockwise in the Motor Base and press down on the top of the Cup. To discontinue blending, simply release.
5. Once you are done blending, lift hand off of Processing Cup and unplug the Motor Base. Turn the Processing Cup counterclockwise in the Motor Base and lift to remove. Carefully detach the Blade assembly from the Cup by turning the black base counterclockwise. Your blended creation is ready to enjoy! When storing the Cup in the refrigerator, just pop on one of the Resealable Lids.

CLEANING YOUR PERSONAL BLENDER

IMPORTANT NOTE: Motor Base is not dishwasher safe. Do not submerge motor base in water or any other liquids. Processing Cups, Lids and Blade are all top-rack dishwasher safe.

1. Turn off and unplug the appliance. Remove the Processing Cup from the Motor Base.
2. Carefully unscrew the Blade from the Processing Cup. Empty remaining contents in Processing Cup into the trash.
3. Fill 1/4 of the Processing Cup with warm water and a few drops of dish soap. Reattach Blade and return Processing Cup to Motor Base. Pulse for a few seconds by pressing down on the top of the Cup. Remove from Base, disassemble and rinse thoroughly with hot or warm water. Dry with dishtowel.
4. Wash Resealable Lids and Blade in warm, soapy water. Rinse and dry thoroughly. Use care when washing Blade as blades are very sharp. If necessary, gently scrub with dish brush.
5. Wipe down the Motor Base with a damp cloth. Never submerge the Motor Base in water or other liquids.

SUPPORT

For product support, warranty and maintenance related questions, please contact StoreBound directly at: 1-800-898-6970 from 7AM - 7PM PST, Monday - Friday, or by email at info@storebound.com.

REPAIRS

DANGER! Risk of electric shock! The Dash Go Personal Blender is an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances.

Contact customer service regarding repairs to the device.

STOREBOUND, LLC – 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact customer care at 1-800-898-6970 for further assistance and instruction. A customer care agent will conduct troubleshooting in an attempt to fix any minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO Box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send All Inquiries To: info@storebound.com
There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

DOUBLE YOUR PRODUCT WARRANTY

To double your product warranty, register your product online at: <http://register.bydash.com>



For more information, please visit bydash.com
Customer Support 1-800-898-6970