



Personal Security
Glass
Vibration
Alarm
User Manual

Do not use in wet locations

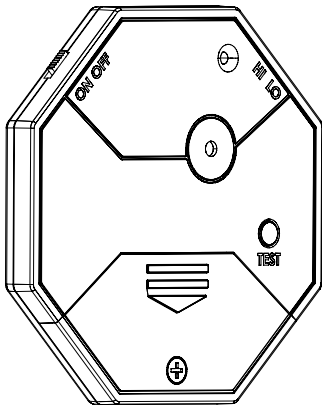 


Table of Contents

Important Safeguards	4
Introduction	5
Installing Batteries	6
Low Battery Indicator	7
Installation	7-9
Operation	10
Sensitivity Selection	10
Care and Maintenance	11
Specification	12
Warning	13-15

Before connecting or operating the Glass Vibration Alarm, please read these instructions carefully and save this manual for future reference.

This user manual explains in simple steps how to install, use and care for your new Personal Security Glass Vibration Alarm.

If you have any questions or would like additional information please visit our web site www.jascoproducts.com or contact our Technical Support Group at 1-800-654-8483, option 4.

 
Important safeguards

Pre cautions

1. Do not attempt to disassemble the Glass Vibration Alarm, unless described in the user's manual. There are no user serviceable parts.
2. Handle with Care – Avoid striking or shaking. Improper use or storage could damage the Glass Vibration Alarm. Modifying the device or its internal components can cause a malfunction and void the Alarm's warranty.
3. If you feel the Glass Vibration Alarm is not operating correctly or as described, please contact Technical Support for assistance **(1-800-654-8483), option 4.**

Introduction


The Glass Vibration Alarm is designed to be mounted on glass where there is a potential for tampering or breakage. The thin profile makes it ideal for mounting between sliding windows and glass doors. When mounted properly it will sound an alarm when glass has been broken or there is excessive vibration. The alarm has a printed warning label visible from the outside.

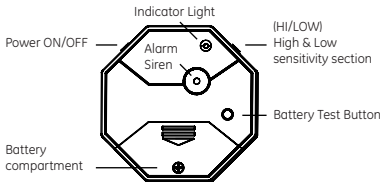

Installing Batteries

The alarm requires (4) LR44 or 357 button batteries (included). Average battery life for typical usage is up to one year.

 1. Make sure alarm ON/OFF switch is set to "OFF" position.
2. Remove the screw securing the battery compartment cover.
3. Slide cover off the battery compartment in direction of arrow.
4. Insert (4) LR44 button batteries noting polarity.
5. Replace battery compartment cover.
6. Secure the battery cover screw.

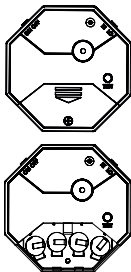

Low Battery Indicator

The alarm has a low battery indicator light. Push the 'Battery Test' button located on the front of the unit. Batteries can be tested in either ON/OFF mode. If the red light illuminates when the button is pressed, the batteries are good. If the light fails to illuminate, replace all batteries.


Installation

Your GE Personal Security Glass Vibration Alarm is an octagon shaped alarm with a visible warning sticker on opposite side (facing out). Before mounting to glass ensure proper orientation so that warning sticker can be easily viewed.

1. Locate a position on the window or sliding glass door to be protected that allows easy access to the alarm controls, and access to the battery door. Make sure switch is in the OFF position, and the mounting surface is clean and dry. For best results, clean the mounting surface with a mixture of 50% isopropyl alcohol and 50% water. Allow to dry.
2. Remove protective covering from the back side of the double-sided tape and lightly position the alarm on the glass window or sliding glass door in a visible location.
3. Ensure that warning label can be easily viewed from outside and that you can easily access all the controls and battery door. Once correct placement is established, apply pressure to secure double-sided tape.

Your GE Personal Security Glass Vibration Alarm has a thin profile and can be placed between sliding windows and sliding glass doors. Note: There must be **at least a 3/8" gap** between windows and doors to prevent damage to alarm.

Window and door preferred mounting location

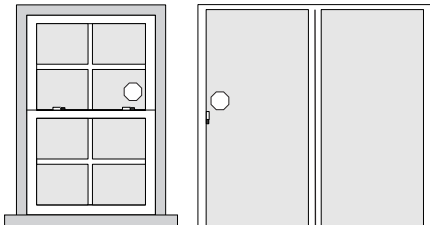

Operation

1. To arm the alarm, locate the ON/OFF switch on the side. Slide the switch to the "ON" position. When in the "ON" position, if the protected window or door is struck or hit, the alarm siren will sound continuously until disarmed.
2. To disarm the alarm, slide the switch to the OFF position.

Sensitivity Selection

The GE Glass Vibration Alarm has a selectable HI/LO sensitivity switch. Locate the switch on the side and select the desired sensitivity setting. Select "LO" position for windows or doors that may be exposed to vibration from strong winds.

Care and Maintenance

To clean the unit housing, use a soft cloth slightly dampened with water and wipe dry. Do not use chemical agents as this may damage and discolor the unit.

Specification:

Power Supply: 4 LR44 Batteries

Operating Voltage: 4~6V DC

Operating Current: <40mA (6V DC)

Standby Current: <8uA (6V DC)

Alarm Sound Period: Continuous

Alarm Sound-Level: >95dB SPL @ 30cm

Low Battery Voltage-Level Indicator: 4~4.7V DC
(Testing Button)

Battery Good: Red LED lights up

Battery Voltage-Level Low: Red LED does not
light up

Operating Temperature: 0°F~40°F

WARNING Limitations of Alarm Products

This product should be tested periodically to make sure it is working properly. The product, if used properly, may reduce the risk of burglary, robbery, or other adverse events. However, JASCO is not an insurer, this product is neither insurance nor a guarantee that such an event will be prevented, and users should protect themselves with proper insurance. JASCO makes no representation that this product cannot be compromised or circumvented, that it will provide an adequate warning, or that it will prevent any personal injuries, property damage, or other losses. Like any alarm product, including expensive commercial systems, it may be bypassed, it is subject to compromise, and it may fail to warn for a variety of reasons, including, but not limited to: improper installation or positioning; improper maintenance; tampering; dead or improperly installed batteries; sensing limitations; component failures; receivers; for infrared products, intrusions may be outside of a product's designed range and certain environmental conditions may impact performance and audible alarm signals may be outside of hearing range, muted by doors, walls, and floors, unheard by deep sleepers or the hearing-impaired, or overwhelmed by other sounds.

WARNING

Risk of personal injury

- Prolonged exposure to alarm siren may cause permanent hearing loss

Battery Warning

- Remove batteries if the Alarm will not be used for extended periods
- Batteries may leak harmful liquids or ignitable materials or explode causing injury and product damage
- Do not mix old and new or other battery types
- Replace all batteries at the same time
- Replace fully discharged batteries immediately

For indoor use only; do not use in wet locations.

This Jasco product comes with a 90 day limited warranty. Please contact Technical Support at 800-654-8483 option 4 between 7:30 AM—5:00 PM CST or via our website (www.jascoproducts.com) if the unit should prove defective within the warranty period.

GE is a trademark of the General Electric Company and is used under license to Jasco Products Company LLC, 10 E. Memorial Road, Oklahoma City, OK 73114.

45413

01/25/2011