

IMPORTANT

allure GARAGE installation instructions

This document pertains to installing **allure** Garage Resilient Flooring only, especially if installed in a garage, but it's not just for garages. It's great for workshops, basements, and many other high traffic areas in your home or place of business. It is coated with a very durable Nano-Ceramic finish to help prevent the wear and tear of everyday activities within your garage.

The enclosed **allure** Owners Manual refers to Allure Planks & Tile. Virtually all of the same installation, maintenance, and warranty information also applies to **allure** Garage. The information below will help you understand important installation methods or requirements specific to installing **allure** Garage. If you have any questions regarding this information please contact our customer service center at 1-866-843-8453 option 6.

► ***Tools needed for installation:***

- Heavy Duty Utility Knife with SHARP BLADE or Vinyl Shears or Dremel/Rotozip rotary tool with cut off wheel (at low speed)
- Straight Edge
- 100 lb. floor roller

YOU MUST FOLLOW THESE INSTRUCTIONS BELOW:

Before installing **allure** Garage in a garage, it is critical that the product be acclimated inside the garage for 48 hours (or any room of installation). The temperature inside the garage must be a minimum of 65 degrees and a maximum of 90 degrees during this time period and also during installation. Do not attempt to install **allure** Garage in extreme hot or cold temperatures. This will result in voiding the warranty.

If your garage is not heated, we recommend you consult with your Home Depot Flooring Associate about bringing in a source of heat. Space heaters can be purchased or rented from The Home Depot.

When cutting **allure** Garage we strongly recommend the use of a heavy duty utility knife with sharp blade or a pair of Shears for vinyl cutting, or a DREMEL/ROTOZIP rotary tool with a cut off wheel at low speed. **allure** Garage is much thicker than **allure** Plank or Tile. It has a fiberglass sheet inside the bottom layer of vinyl you must cut through. This is not a simple score and snap process. You need to cut all the way through **allure** Garage. Several passes with a sharp utility knife will be required to cut **allure** Garage.

► **HELPFUL HINT:** From your Owners Manual that apply to **allure** Garage

- Most installations require a 10% overage for waste.
- Be sure to keep dust, dirt, or foreign particles away from the GripStrip.
- The same method of staggering the rows (3'-2'-1') applies to **allure** Garage.
- Maintain an expansion space of a minimum of 1/8" around the perimeter of the garage.
- Roll the floor with 100 lb. floor roller in both directions