

7.0' Aspen Pine
SYLVANIA™ Power-Lit™
M5 Multi LED
Pre-Lighted Tree V68036-56

INSTRUCTION MANUAL

Thank you for purchasing a SYLVANIA™ Power-Lit™ Pre-lighted Tree. This tree assembles in minutes and is decorated with UL listed energy saving SYLVANIA™ Power-Lit™ LED light sets.

SYLVANIA™ Power-Lit™ LED light strings are guaranteed to light if a bulb is loose, twisted, broken or even missing.

Please note this tree comes with an on/off foot pedal switch for easy illumination.

This product carries a 3 year limited guarantee. This guarantee does not cover damage resulting from accident, misuse, abuse, negligence, or normal wear and any discoloration. To register for the limited guarantee you must complete and return the enclosed registration card or register on-line at www.inliten.com within thirty days of purchase. Please retain sales receipt as proof of purchase. Receipt is required for warranty service.

Extremely Important: Please retain your Home Depot sales receipt as proof of purchase. Receipt is required for warranty service. Please note this warranty is non-transferable and is good only for original purchaser of this tree. This warranty does not apply if tree is purchased from a source other than Home Depot.

This 7.0' tree is pre-strung with 300 M5 Power-Lit™ Multi LED lights:

CARTON INCLUDES:

- 3 Pre-lighted tree sections (A-Top Section, B - Middle, C –Bottom Section)
- 1 Sturdy metal tree stand
- 1 Screw for tree stand
- 6 Extra 3V replacement LED bulbs
- 3 Spare fuses for (3-Amp) for LED light string (Exhibit A)
- 1 Spare fuse (5-Amp) for extension cord – note fuse is already in extension cord plug, slide access panel to open (Exhibit B)

- Warranty Registration Card

In the unlikely event that you experience problems - please do not return the tree to a Home Depot store. Please call our customer service hotline at (800) 414-3434 for assistance.

Please provide the 7 digit product ID number of the tree as well as information pertaining to the nature and description of the problem. Your product ID number can be located on the pole of the bottom section. Please have this number available before you call.

ASSEMBLY:

Note: Before you start to assemble your tree please choose a location near an electrical wall outlet. Place the tree stand on a level surface.

 
Please remove protective plastic covers from the base of the pole from each section.

1. Carefully insert bottom section (C) of tree into stand as illustrated in Figure 2. Make sure pole is firmly inserted into stand and screw is tightened.
2. **Insert middle section (B) of tree into bottom section (C) after insuring that the arrows on both poles are in alignment as illustrated in Figure 3.**
3. Locate end of long extension cord that hangs down from mounted outlet in Section (B). Run the cord downwards through section (C) positioning cord close to pole - and resting plug on floor as illustrated in Figure 7.
4. Insert top section (A) into middle section (B) as illustrated in Figure 4.
5. Connect light set plug (1) from section (A) into outlet of extension cord (E1) mounted in section (B) as illustrated in Figure 5.


IMPORTANT: Do not remove the tape wrapped around the outlets of the light set cords. The outlet you need to plug into is not wrapped in tape. Only remove tape when inspecting fuses (see Trouble Shooting section).

Note: There are yellow tags attached to the cords to help locate ends to make connections.

6. Locate light set plug (2) in bottom section (C) and insert plug into outlet of extension cord (E2) hanging from section (B) into section (C) as illustrated in Figure 6.
7. Locate end of extension cord that hangs down from section (C) and plug into wall outlet as illustrated in Figure 7. Please note this tree comes with an on/off foot pedal switch for easy illumination.

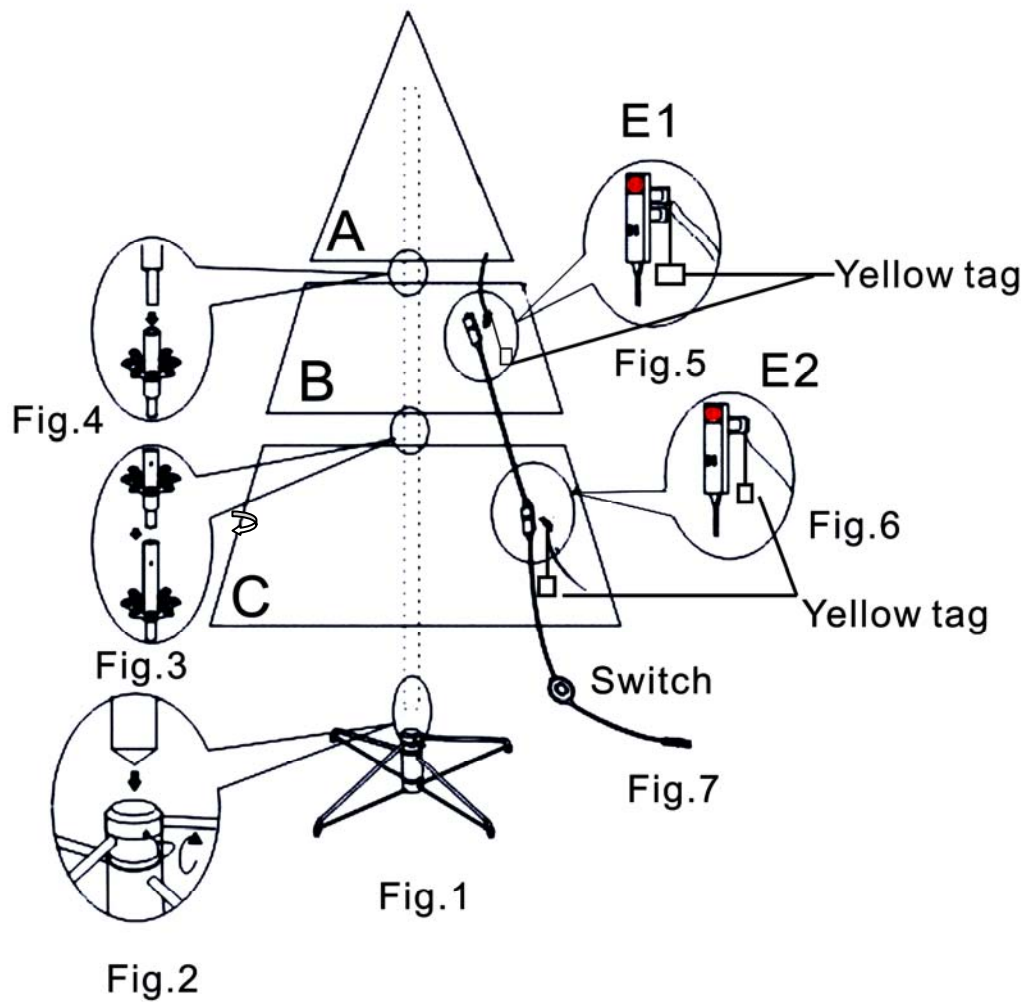

 8. Allow the branches to fall into place or gently pull branches up and out. When adjusting branches be sure that all wires are free of branch hinges as illustrated in Figure 8.
9. Shape the branches. Starting with tips closest to the pole, shape one tip to the right, one to the left and one at the center of the main stem as illustrated in Figure 8a. Repeat pattern for each branch.

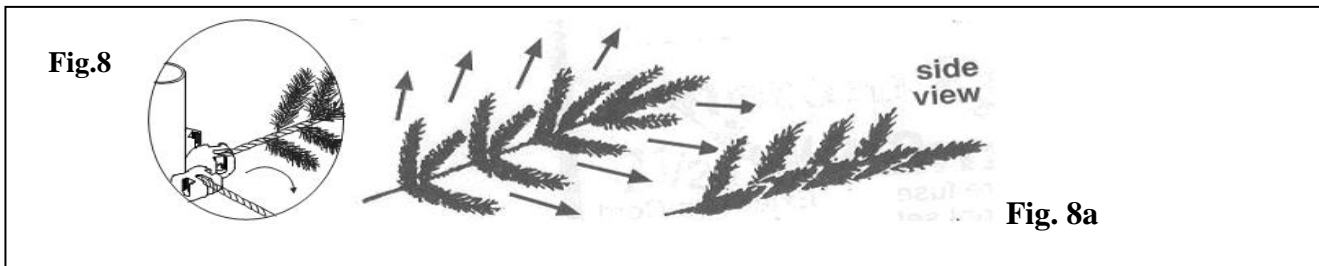

TROUBLE SHOOTING:

1. If entire tree does not light, make sure extension cord plug is securely inserted into a working electrical outlet.
2. If an entire section of the tree does not light:
 - a. Check to be sure that all plugs within the tree are securely connected.

- b. Check fuse in the extension cord and replace if necessary (please note that the 5-Amp extension cord fuse is different than the 3-Amp fuse used in the mini light sets).
IMPORTANT: This is the only time you are to remove the tape wrapping the outlets of the light sets. Please remove tape to inspect fuses and replace tape to original condition after inspecting.

3. If you are still experiencing problems with the tree please call 1-800-414-3434 for instructions.

 
CAUTION! – ALWAYS UNPLUG YOUR TREE FROM ITS POWER SOURCE BEFORE ATTEMPTING EITHER FUSE OR BULB REPLACEMENT.

FUSE REPLACEMENT:

This product comes with overload protection (fuse). A blown fuse indicates an overload or short circuit. If a fuse blows, unplug tree from wall outlet. Replace the fuse as per the fuse replacement instructions below (follow product marking for proper fuse rating). If the replacement fuse blows, a short circuit may be present and the product should be reviewed to determine the cause.

A) Light set fuse replacement (replaceable 3-amp 125V fuses)

1. Grasp plug and remove from its power source.
2. Locate blown fuse(s) by sliding access cover on top of plug towards prongs.
3. Remove blown fuse by turning the plug over. Fuse should fall into your hand (Gentle tapping may be required).
4. Locate Spare 3-amp fuses in plastic bag.
5. Insert new fuse. Close fuse cover by sliding fuse access cover towards the cord.

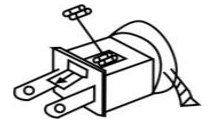


(Exhibit A)

CAUTION: To reduce risk of fire – replace fuse in extension cord with only 3-amp 125 volt fuse. Do not replace attachment plug. Discard product if the attachment plug is damaged.

B) Extension cord fuse replacement (replaceable 5-amp 125V fuse is located in the plug):

 1. Grasp plug and remove from its power source.
2. Locate blown fuse by sliding access cover on top of plug towards prongs.
3. Remove blown fuse by turning the plug over. Fuse should fall into your hand (Gentle tapping may be required).
4. Locate spare fuse in plug.
5. Insert new fuse. Close fuse cover by sliding fuse access cover towards the cord.



(Exhibit B)

CAUTION: To reduce risk of fire – replace fuse in extension cord with only 5-amp 125 volt fuse. Do not replace attachment plug. Discard product if the attachment plug is damaged.

BULB REPLACEMENT:

1. Grasp plug and remove from its power source
2. Unlock the lamplock on the socket of the bulb (Fig.A).
3. Pull bulb AND plastic base straight out of socket. Do not twist bulbs. (Fig.B)
4. Replace burned bulb with 3.0 volt, 0.06 watt LED bulb ONLY. (Additional bulbs are included for your convenience)(Fig.C).
5. Relock the lamplock on the socket of the bulb (Fig.D).



IF PLUG DOES NOT FIT:

This product contains an extension cord with a polarized plug (one prong is wider than the other) as a feature to reduce the risk of electrical shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless the plug can be fully inserted. Do not alter or replace the plug.

BASIC PRECAUTIONS SHOULD BE FOLLOWED WHEN USING THIS PRODUCT:

(Inspect product carefully before using or re-using):

- 1) Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- 2) This seasonal use product is not intended for permanent installation or use.
- 3) Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- 4) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- 5) Do not let lamps rest on the supply cord or on any wire.
- 6) For your safety, unplug the product when leaving the house, when retiring for the night, or if left unattended.
- 7) This is an electric product - not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- 8) Do not use this product for other than its intended use.
- 9) Do not hang ornaments or other objects from cord, wire, or light string. Hang ornaments only on the tree itself.
- 10) Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- 11) Do not cover the product with cloth, paper or any material not part of the product when in use.
- 12) This product is equipped with push-in type lamps. Do not twist lamps.
- 13) This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
- 14) Read and follow all instructions that are on the product or provided with the product.
- 15) When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
- 16) When not in use, store neatly in a cool, dry location protected from sunlight.
- 17) Do not remove tape on placed over mounted sockets. Any outlet you need to plug into is not wrapped in tape. Only remove tape when inspecting fuses (see Trouble Shooting section).
- 18) Should you discover any of the following: a) cut, damaged, or frayed wire insulation; b) cracks in the sockets; c) loose connections or exposed wires, please call the toll free number (800) 414-3434.

STORAGE: Disassembled tree can be stored in its original box. Store tree in a cool dry place where the temperature does not exceed 100 degrees Fahrenheit.

SYLVANIA is a registered trademark of OSRAM SYLVANIA INC. used under license.

Power-Lit is a registered trademark of Inliten LLC.