

# English

## INSTRUCTION MANUAL

### Important

- Read these directions for use carefully before using the appliance and save them for future reference.
- Before connecting the appliance ensure that the voltage indicated on the underside of the appliance corresponds with the main voltage in your home.
- Connect the appliance to a grounded wall socket.
- Position the appliance so that:
  - the power cord is not hanging over the edge of the table or sink;
  - children cannot touch it when in use;
  - it is standing on a flat surface with sufficient free space around it.
- Never put the power cord near to or in contact with the hot surface of the appliance.
- Always preheat the cooking plate before starting to cook.
- Unplug the appliance after use.
- Do not leave the appliance in operation without supervision.
- Avoiding touching the metal parts as they become very hot.
- Never use sharp or abrasive items in contact with the cooking plate as this will damage the nonstick surface.
- Always clean the appliance after use. First unplug and allow the appliance to cool down. Never immerse the appliance into water. Avoid water running into the appliance.
- If the mains cord of this appliance is damaged, it must only be replaced by a service technician, as special tools and/or parts are required.

Product is not for use by persons (taking into account children) with reduced physical, mental or psychological ability, or lack of experience, unless they are supervised or educated on the use by a person responsible for their safety.

-Children must be supervised, not to play with the device

Before using for the first time

- Clean the baking plates with a damp cloth or sponge.
- Slightly grease the baking plates with a small amount of cooking oil.
- Plug in the ice cream maker and heat up the plates until the green "Ready To Cook" pilot light goes off.
- The ice cream maker is ready for use.

*Note: When using this maker for the first time, a fine smoke Haze may result. This is normal because of the initial heating of the Internal components.*

Making toasted ice cream cone

- Put the main plug into the wall socket. The red power On pilot light and green Ready To Cook pilot light will light up.
  - When the green Ready To Cook pilot light goes off, the ice cream maker is ready for use.
  - Prepare the ingredients for your toasted ice cream cone. You can refer to the suggested recipes.
  - To obtain an even golden brown result, you can slightly butter the side of the ice cream cone in contact with the plate.
  - Lay the slices of ice cream cone with the buttered side on the lower cooking plate, place your filling and cover with the second slices of ice cream cone with buttered side up.
- For optimal result, filling should be placed well within the ice cream cone.
- Lower the upper cooking plate carefully onto the ice cream cone until the ice cream maker is tightly clamped.
  - Open the ice cream maker after 2-3 minutes and check whether the toasted ice cream cone is sufficiently 'brown'. The cooking time required to obtain crisp brown sandwiches depends on the type of bread, fillings and your personal taste.
  - Use a non-metallic utensil(e.g. Wooden spatula)to remove the toasted ice cream cone. Do not use sharp or abrasive kitchen utensils.
  - Unplug the ice cream maker from the wall socket after use.

*Note: During cooking, the green Ready To Cook pilot light will cycle on and off to maintain the appliance at the correct temperature.*

After use

- Unplug the ice cream maker and let it cool down before cleaning.
  - Clean the cooking plates with a damp cloth/sponge. Avoid water running into the appliance.
- Never Immerse the appliance Into water.  
Never use an abrasive cloth as it will damage the coating of the plate.
- The appliance can be stored in a vertical position

Operating Voltage:110-120V~60Hz

Power: 750W

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.