


### **PRODUCT MODEL NUMBERS**

### WUR50X24E

**Electrical:** A 115 volt, 60 Hz., AC only, 15- or 20-amp fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your refrigerator be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.

# Refrigerator

## **OPENING DIMENSIONS**

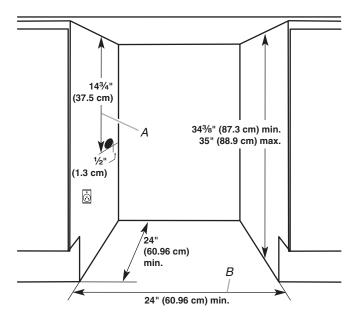


Critical Dimensions: A. 14¾" (37.5 cm) utility opening

- Height dimensions are shown with the leveling legs extended to the minimum height.
  NOTE: When leveling legs are fully extended, add 5%" (15 mm) to the height dimensions.
- If the floor of the opening is not level with the kitchen floor, shim the opening to make it level with the kitchen floor.

B. 24" (60.96 cm) minimum opening width

Model	Door Swing
WUR50X24E	Reversible

### **LOCATION REQUIREMENTS**

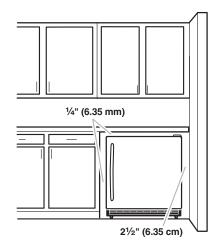

To ensure proper ventilation for your refrigerator, allow for a 1/4" (6.35 mm) space on each side and at the top. When installing your refrigerator next to a fixed wall, leave 21/2" (6.35 cm) minimum clearance on the hinge side to allow for the door to swing open.

■ NOTE: It is recommended that you do not install the refrigerator near an oven, radiator, or other heat source. Do not install in a location where the temperature will fall below 55°F (13°C). For best performance, do not install the refrigerator behind a cabinet door or block the base grille.