



EASY ASSEMBLY AND OPERATION INSTRUCTIONS

5124738_12 Foot Skeleton

Before you begin

3D-GUIDED INTERACTIVE ASSEMBLY INSTRUCTIONS CAN BE FOUND IN BILT®

DOWNLOAD THE FREE APP







Assembly requires at least 2 adults, 3 adults are recommended. Please follow the step by step guide and enjoy your 12 Foot Skeleton!

CARE AND STORAGE INSTRUCTIONS

When not in use, remove the batteries and store this product in its original packing. Keep away from heat and moisture.

WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please assemble item according to instructions. Connect all wires according to matching color.
2. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard.


Please view all instructions carefully before assembling. Save this instruction sheet for future reference.

TROUBLESHOOTING:

- If not functioning properly (eyes don't light up), ensure that cables are connected to their corresponding cable as shown in the instruction sheet(See steps 5.1 and 7.2).
- If item does not activate when turned on, try replacing the existing batteries with fresh ones.
- Be sure to remove the eye stickers from the LCD screens before assembling the 12 Foot Skeleton head to the rest of the body.
- If the item still does not work, call 1-877-527-0313 for customer service.



PARTS LIST

- A. Base x 1
- B. Right Foot x 1
- C. Left Foot x 1
- D. Right Lower Support Pole x 1
- E. Left Lower Support Pole x 1
- F. Right Shin x 1
- G. Left Shin x 1
- H. Upper Support Pole x 2
- I. Right Femur x 1
- J. Left Femur x 1
- K. Pelvis x 1
- L. Spinal Support x 1
- M. Rib Cage x 1
- N. Right Humerus x 1
- O. Left Humerus x 1
- P. Right Forearm x 1
- Q. Left Forearm x 1
- R. Head x 1
- S. Base Stabilizer x 4
- T. Loop Screw x 1
- U. Cable x 1
- V. Stake x 4
- W. Allen Wrench x 1


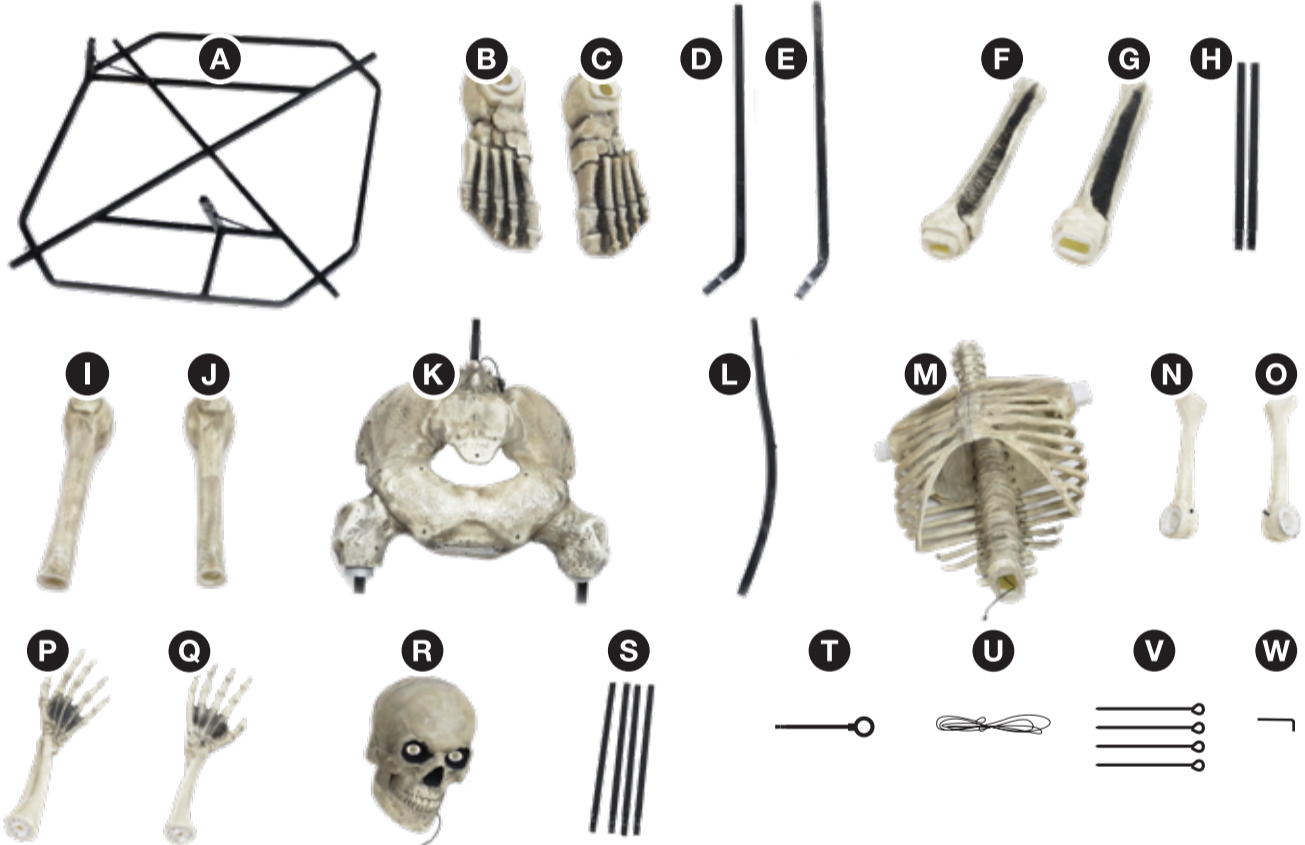


BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING OR BROKEN, DO NOT ATTEMPT TO ASSEMBLE THE PRODUCT AND CONTACT CUSTOMER SERVICE FROM 8:30AM TO 5:30PM PST AT 1-877-527-0313, 1-855-428-3921.EMAIL CUSTOMERSERVICE@SVIUS.COM.

NOTE: Throughout the instructions, Right and Left are relative to the character. Allen wrench included for assembly.


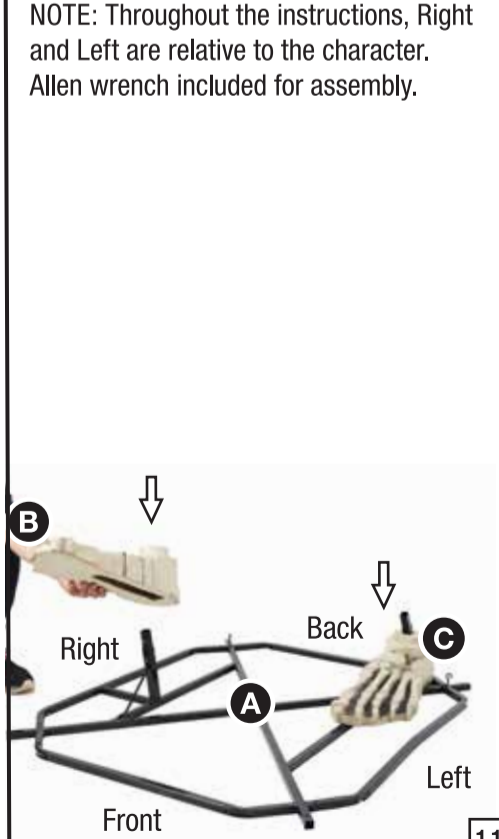
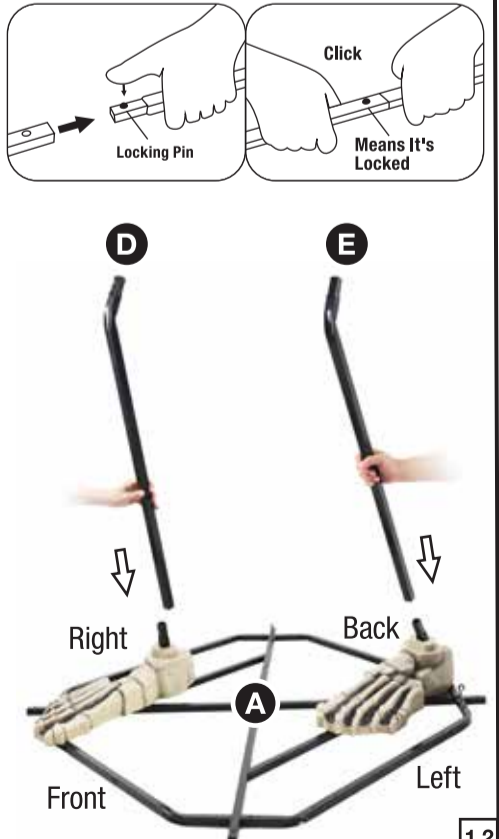



NOTE: Slide the two shins over the lower support poles and fit them onto the feet as shown.


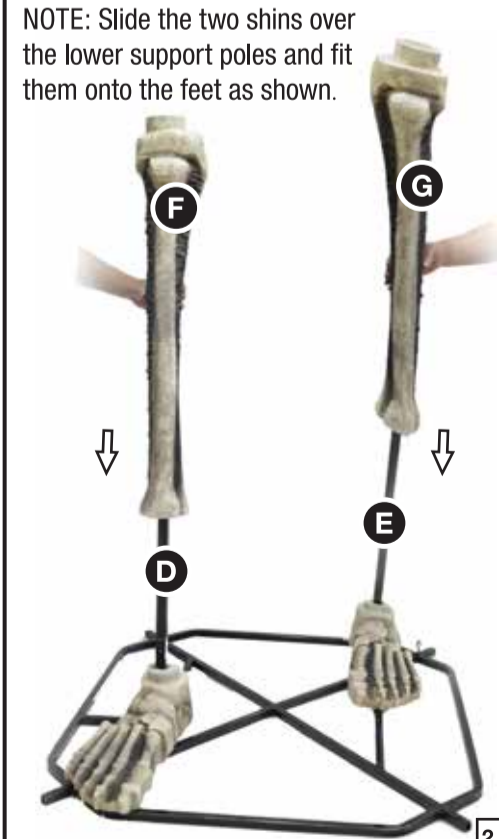
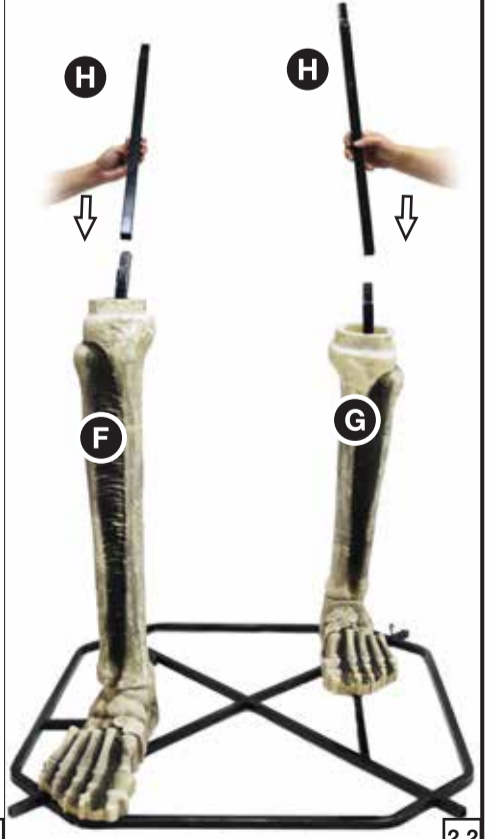



NOTE: Slide the two femurs onto the upper support poles and then fit them onto the shins as shown.


NOTE: A ladder and more than 2 people are advised when assembling the (K) Pelvis to the (H) Upper Support Poles and the (I,J) Femurs..

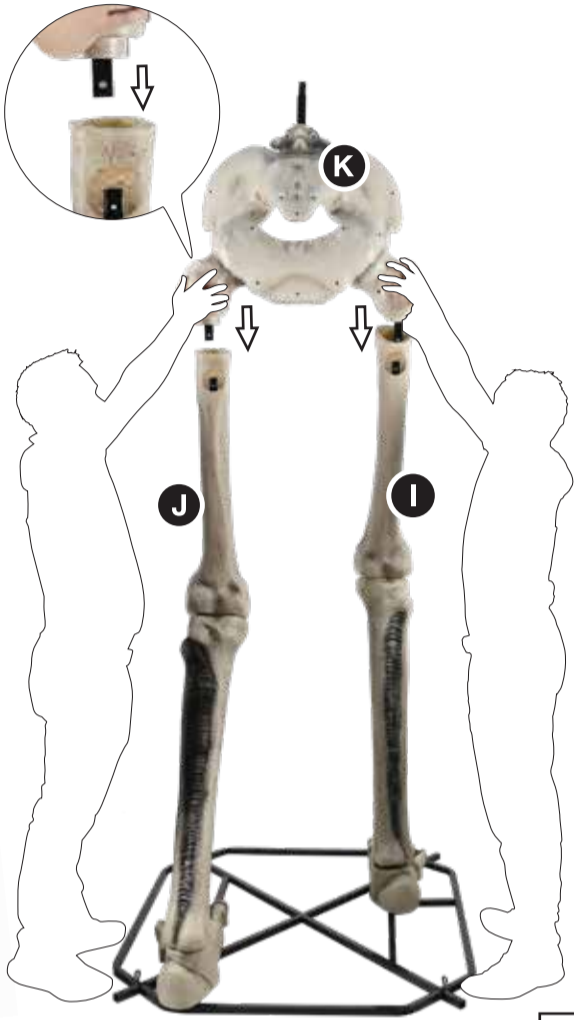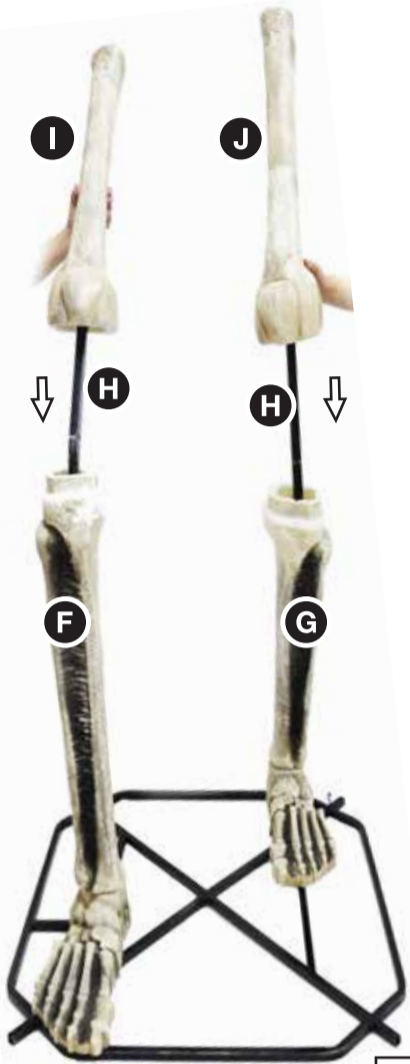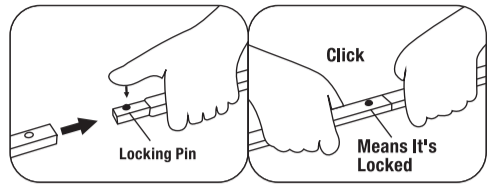


NOTE: Lean the skeleton against the box it came with for easier assembly. 3 adults are strongly recommended for this step.

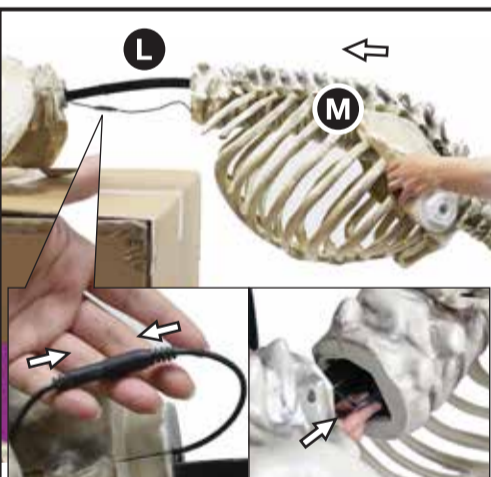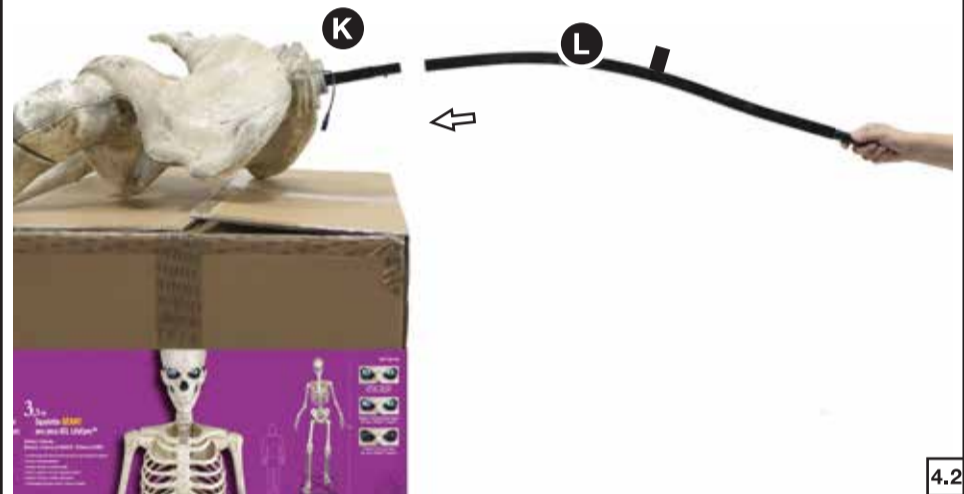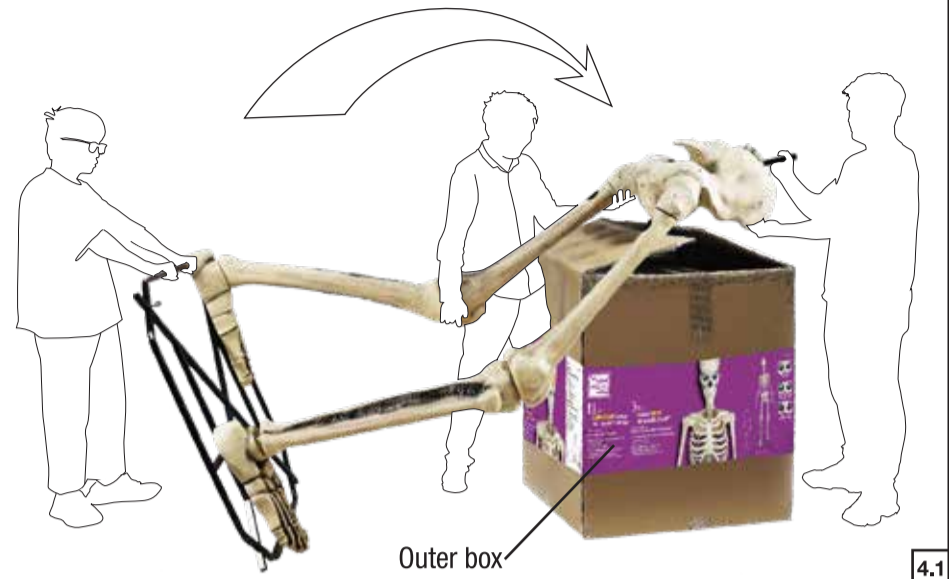




NOTE: Screw the loop into the area inside of the spine as shown.

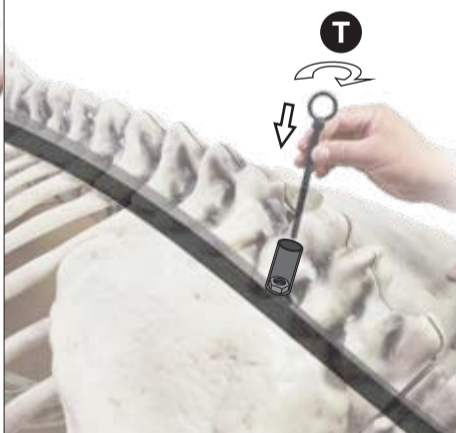

After connecting the wires, hide the excess inside the available cavity at the bottom of the (M) Rib Cage.

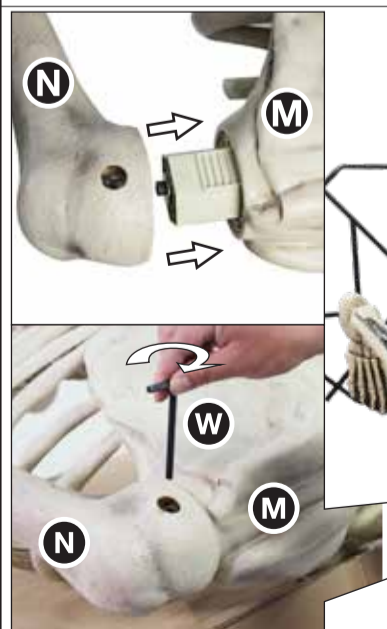

WARNING: Do NOT overtighten this bolt. Overtightening may result in damage to the product.

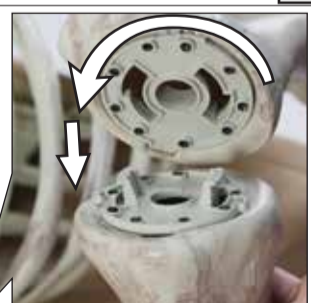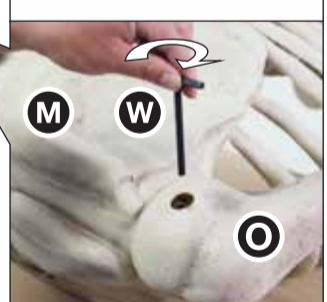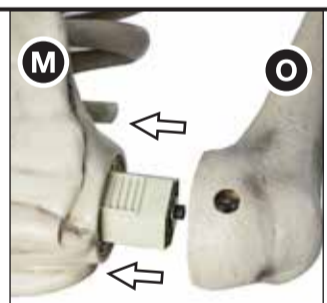

4.1

4.2

5.1

5.2

5.3

6.1

6.2

CAUTION: Cable may have sharp ends, use caution when assembling. If cable cannot reach, the upper body of the 12 Foot Skeleton needs to be lifted in its laying position. This should enable the cable to reach.

A **U**

U

7.1

CAUTION: Make sure head is locked into place.

M **M** **R** **L** **R**

After connecting the wires, hide the excess inside of the available cavity at the top of the (M) Rib Cage.

M **R** **R**

7.2

CAUTION: The cable must be secured before erecting the 12 Foot Skeleton. It is strongly advised that 3 adults participate in the assembly, standing the skeleton up, setting the skeleton down, and disassembly. The item must be laid down for disassembly.

NOTE: The arms can be posed to your preference. Please pose the arms before raising it vertical, otherwise a ladder will be needed.

8.1

S **S** **A** **S** **S**

9.1

V **V** **V** **V** **A**

9.2

NOTE: Power button and battery compartment are on the underside of the (K) Pelvis. Position 12 Foot Skeleton on flat surfaces only. Your 12 Foot Skeleton is now fully assembled. Insert new batteries and turn on to let the fun begin!

K

OPERATION INSTRUCTIONS:

To turn on the 12 Foot Skeleton with timer, press the button underneath the (K) Pelvis once. Press the same button again to turn it off.

The item is activated by pressing the button on the (K) Pelvis and has the following settings:

ON/Timer- This setting activates a 6 hour timer in which the LCD eyes are steady on. After 6 hours the LCD eyes will turn off for 18 hours before turning on again.

OFF- This setting will turn off the LCD eyes and the timer function.

BATTERY REPLACEMENT INSTRUCTIONS

Requires 4 x 1.5V C batteries (Not Included)

* You will need a small Phillips head screwdriver.

Locate the battery compartment on the product. Remove the battery compartment cover by using a small Phillips head screwdriver to unscrew the screw. After removing or installing the batteries, place the battery compartment cover into position, and secure the battery cover.

BATTERY WARNING:

Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel cadmium) batteries. Do not mix old and new batteries. Rechargeable batteries to be removed from the product before being charged. Only batteries of the same or equivalent type as recommended are to be used. Rechargeable batteries are only to be charged under adult supervision. Non-rechargeable batteries are not to be recharged. Batteries are to be inserted with the correct polarity. Remove batteries if consumed or if product is to be left unused for a long time. The supply terminals are not to be short-circuited. Dispose of batteries safely. DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK

This device complies with Part 15 of the FCC Rules . Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver, Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

CAN ICES-3 (B)/NMB-3 (B)

Distributed by Home Depot

2455 Paces Ferry Road Atlanta, GA 30339

1-877-527-0313

