

SAFETY RECALL ALERT

Home Accents Holiday Artificial Christmas Trees - Mode-Switching Foot-Pedal Controllers

| THD SKU # | THD Internet # | Model # | UPC | SKU Description |
|--------------------------|----------------|----------|--------------|--|
| 1004391988 1004147107 | 308370407 | W14N0127 | 030539038717 | 7.5 ft. Pre-Lit Braxton Color Changing 8-Function Artificial Christmas Tree with 700 Micro Dot LED Lights |
| 1004363928 1004213736 | 309034865 | W14N0157 | 030539039707 | 7.5 ft. Pre-Lit LED Starlin Slim Color Changing 8-Function Artificial Christmas Tree with 800 Micro Dot Lights |
| 1004363929 1004213737 | 308983986 | W14N0126 | 030539038700 | 7.5 ft. Pre-Lit LED White Uptown Color Changing Artificial Christmas Tree with 700 Micro Dot Lights |
| 1004213744 | 308983851 | W14N0149 | 030539039592 | 9 ft. 900L Micro Dot LED Braxton Color Changing with 8-Function Tree |
| 1004213742 | 308983980 | W14N0148 | 030539039585 | 9 ft. Pre-Lit LED Uptown Color Changing 8-Function Artificial Christmas Tree with 900 Micro Dot Lights |



| | |
|--|--|
| WILLIS ELECTRIC CO., LTD. Model No. W14N0127, SKU NO. 1004391988 120 V 60Hz 0.25 A 30 W Customer Service: 1-877-527-0313 Date Code: 05012019_2003186 | WILLIS ELECTRIC CO., LTD. Model No. W14N0127, SKU NO. 1004391988 120 V 60Hz 0.25 A 30 W Customer Service: 1-877-527-0313 Date Code: 05012019_2003186 |
|--|--|

The foot-pedal controller may overheat, posing a burn hazard.

Consumers should immediately stop using the mode-switching foot-pedal controllers and contact Willis Electric to receive a replacement foot pedal controller.

For more information, Consumers can contact Willis Electric at 866-210-5958 from 9 a.m. to 4 p.m. CDT, Monday through Friday or online at www.williscorporation.com