



# Power Express™ Lite

My Model is: \_\_\_\_\_



## 1-2-3...

# USER MANUAL

Français - page 15  
Español - página 20

### REPLACEMENT PARTS

• FILTER: F114

95192046 RD 10/16  
©2016 Technic Floor Care Technology Limited.  
All Rights Reserved. Distributed by Royal Appliances Wly. Co.  
Beverly, Oh. 44313



## LET'S GO.™

**THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY. IF USED COMMERCIALY WARRANTY IS VOID.**

### IMPORTANT SAFETY INSTRUCTIONS


When using an electrical appliance, basic precautions should always be followed, including the following:

- READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.
- ALWAYS FOLLOW THESE SAFETY INSTRUCTIONS.
- DO NOT LEAVE CLEANER UNATTENDED.


**WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:**

- Fully assemble before operating.
- Operate cleaner only at voltage specified on data plate on back of cleaner.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Not intended for use by children age 12 and under. Close supervision is necessary when used near children. To avoid injury or damage, keep children away from product, and do not allow children to place fingers or other objects into any openings.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center for inspection. Call 1-800-321-1134 for the nearest service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked. Keep free of dust, lint, hair and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs. To avoid personal injury or damage, and to prevent the cleaner from falling, always place cleaner at bottom of stairs or on floor. Do not place cleaner on stairs or furniture, as it may result in injury or damage.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or fine wood sandings or use in areas where they may be present.

## HOW TO USE AS A HAND VAC

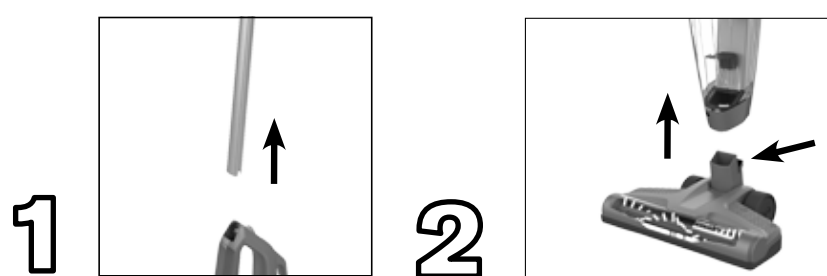

**1** SLIDE RELEASE BUTTON BACK THEN REMOVE HANDLE FROM UNIT.

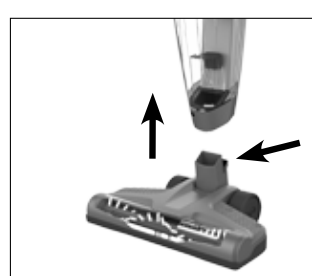

**2** RELEASE NOZZLE BY PRESSING THE TAB ON THE BACK OF NOZZLE AND PULL UNITS APART.

### CAUTION

Not to be used for grooming a pet.

5

## TROUBLESHOOTING

Any other servicing should be done by an authorized service representative. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, take it to a service center prior to continuing use.

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
Cleaner won't run	1. Power cord not firmly plugged into outlet. 2. Needs service.	1. Plug unit in firmly. 2. Call Customer Service: 1-800-321-1134
Cleaner won't pick up or low suction	1. Dirt cup not installed correctly. 2. Dirt cup full. 3. Clogged filter. 4. Dirt inlet tube clogged.	1. Review dirt cup removal and replacement. 2. Empty dirt cup. 3. Remove filter and clean. 4. Remove nozzle; remove obstruction.
Dust escaping from cleaner	1. Dirt cup full. 2. Dirt cup not installed correctly. 3. Filter not installed correctly. 4. Filter is dirty.	1. Empty dirt cup. 2. Review dirt cup removal & replacement. 3. Review filter removal & replacement. 4. Clean filter or replace.
Cleaner tools won't pick-up	1. Crevice tool clogged. 2. Dirt cup is full. 3. Filter clogged.	1. Remove crevice tool; remove obstruction. 2. Empty dirt cup. 3. Clean filter.
Brushroll will not turn	1. Brushroll may have an obstruction. 2. Motor protection device tripped. 3. Broken belt. 4. Internal component damage.	1. Make sure unit is turned off and unplugged. Remove nozzle by pressing the nozzle release button and pulling the nozzle in a downward motion. Remove any debris clogged in the nozzle airpath. Reassemble nozzle to the product. 2. Turn product to off position, product will reset in approximately 30 minutes. 3. Call for service: 1-800-321-1134 4. Call for service: 1-800-321-1134

**ANY OTHER SERVICING SHOULD BE DONE BY AN AUTHORIZED SERVICE REPRESENTATIVE**  
**CUSTOMER SERVICE (1-800-321-1134)**

In the event that further assistance is required, see your Yellow Pages for an authorized Royal Dealer or visit our website at [www.dirtdevil.com](http://www.dirtdevil.com). Costs of any transportation to and from any place of repair are to be paid by the owner. The service parts used in this unit are easily replaced and readily available from an authorized Royal Dealer or retailer. Always identify your cleaner by the model number and manufacturing code when requesting information or ordering replacement parts. (The model number appears on the bottom of the cleaner.)

13

## HI. WELCOME.

Congrats on purchasing your new Dirt Devil Power Express Lite. Inside, you'll find everything you want to know from the tools to how to.

So what are you waiting for? LET'S GO.™

### PRODUCT REGISTRATION

Warranty Registration  
Be sure to register your product online at [www.DirtDevil.com](http://www.DirtDevil.com) or call 1-800-321-1134 to register by phone.

Hint: Attach your sales receipt to this Owner's manual. Verification of date of purchase may be required for warranty service of your Dirt Devil™ product.

For quick reference, please record your product information below.

Model #: \_\_\_\_\_

Mfg. Code: \_\_\_\_\_

(Mfg. code located on the back or bottom of product)

Find GENUINE Replacement Parts at [www.dirtdevil.com](http://www.dirtdevil.com)

This product uses the following parts:  
FILTER: F114

### CAUTION: TO REDUCE THE RISK OF DAMAGE:

- Avoid picking up hard, sharp objects with this product, as they may cause damage.
- Store appropriately indoors in a dry place. Do not expose machine to freezing temperatures.

### SAVE THESE INSTRUCTIONS

#### WARNING:

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

- Please read these instructions carefully before using your product.
- Let us help you put your product together, order parts and accessories or answer any questions.
- Please Do Not Return This Product To The Store.

2


### WARNING

To reduce the risk of personal injury, turn power switch off before cleaning or servicing.

6

## HAND VAC ATTACHMENTS


### PET TOOL™ TO USE PET TOOL

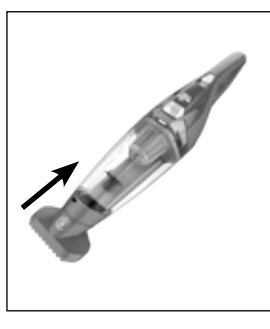

1

UNPLUG BEFORE CONNECTING THE PET TOOL. ATTACH PET TOOL BY INSERTING INTO NOZZLE OPENING. TO REMOVE, PULL APART GENTLY.

### TO STORE PET TOOL

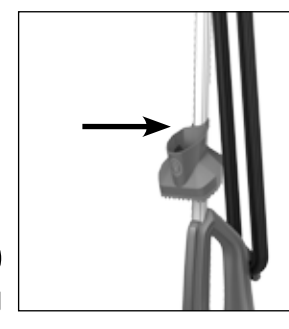

2


TO STORE PET TOOL, SNAP ONTO HANDLE TUBE.

\*Pet tool not included with all models.

10


## FILTER REMOVAL AND REPLACEMENT

TIP: To maintain performance, filter should be changed every 3-6 months, or as needed.

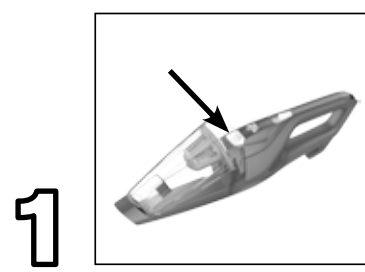


1

DEPRESS THE DIRT CUP RELEASE BUTTON WHERE IT SAYS FILTER.

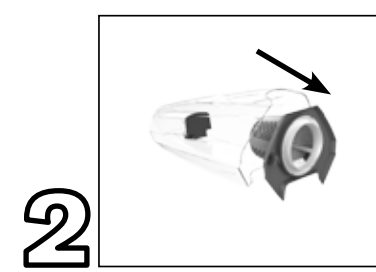


2

HOLD DIRT CUP OVER A WASTEBASKET. GRASP FILTER AND GENTLY PULL OUT FILTER BASKET.

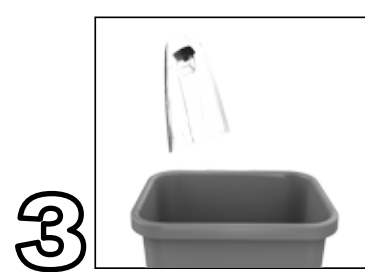

3

SHAKE DIRT AND DEBRIS OUT OF DIRT CUP.

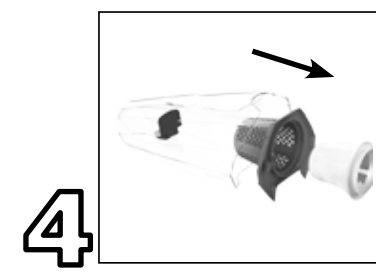

4

REMOVE THE FILTER FROM THE FILTER BASKET. BRUSH THE DUST AND DIRT OFF THE FILTER, OR SHAKE THE FILTER INSIDE OF THE WASTEBASKET.

For replacement filter F114 visit [dirtdevil.com](http://dirtdevil.com) or call us at (800) 321-1134.

### WARNING

To reduce the risk of personal injury, turn power switch off before cleaning or servicing.


11

## TABLE OF CONTENTS

- 1-2-3... 7
- Use as a stick vac 8
- How to use 8
- Use as a hand vac 9
- Hand vac attachments 10
- Filter removal and replacement 11
- Clean and rinse filter 12
- Troubleshooting 13
- Limited warranty 14


3

## HOW TO USE AS A STICK VAC

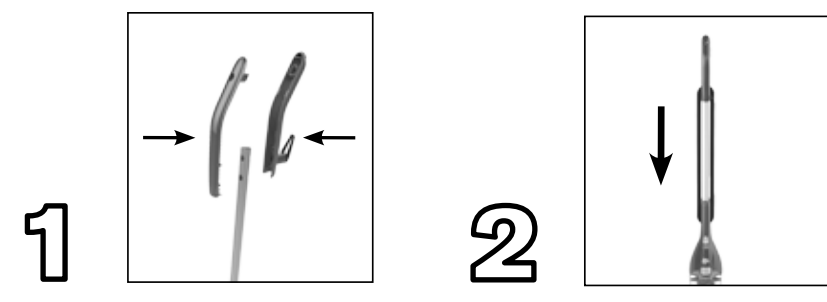


1

SURROUND HANDLE TUBE WITH THE TWO HANDLE GRIP PIECES AND PRESS TOGETHER UNTIL YOU HEAR A CLICK. BE SURE THE TUBE IS BETWEEN THE HANDLES BEFORE THEY ARE CLICKED TOGETHER.

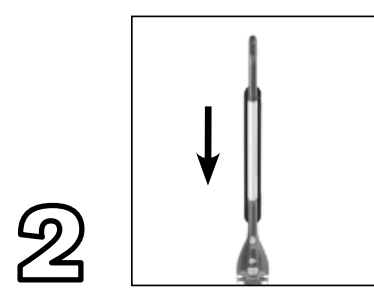


2

INSERT HANDLE TUBE INTO HAND VAC.

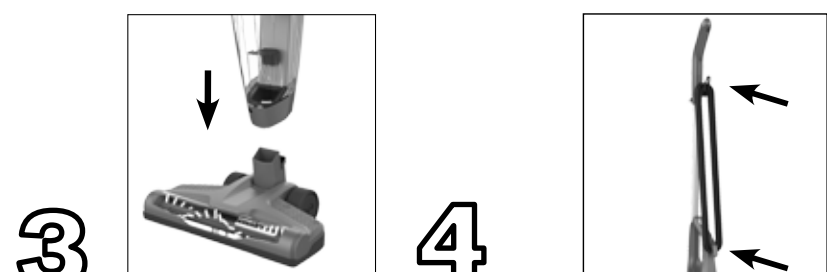

3

ATTACH FLOOR NOZZLE TO UNIT.

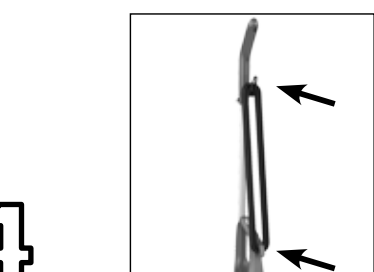

4

WHEN FINISHED, WRAP CORD AROUND HOOKS FOR CONVENIENT STORAGE. ATTACH THE PLUG END TO THE CORD.

7

## HOW TO USE



SUCTION ONLY

BRUSH ROLL ON OFF

Empty and clean the unit and filter after each use or after large pickups when the unit becomes full.

1

TO USE: SLIDE THE POWER SWITCH TO THE ON POSITION FOR STRAIGHT SUCTION, IDEAL FOR HARD FLOORS. SLIDE TO THE NEXT POSITION FOR THE BRUSH ROLL ON MODE, IDEAL FOR CARPET CLEANING.

2


TO TURN UNIT OFF: SLIDE THE POWER SWITCH TO THE OFF POSITION.

**LUBRICATION:** The motor and brushroll are equipped with bearings which contain sufficient lubrication for their lifetime. The addition of lubricant could cause damage. Do not add lubricant to motor or brushroll.

**NOTE:** Filter is reusable with water. Do not use soap/detergent. Let filter air dry for 24 hours or until completely dry. **LUBRICATION:** The motor is equipped with bearings which contain sufficient lubrication for its lifetime. The addition of lubricant could cause damage. Do not add lubricant to motor. For replacement filter F114 visit [dirtdevil.com](http://dirtdevil.com) or call us at (800) 321-1134.

4

## CLEAN AND RINSE FILTER

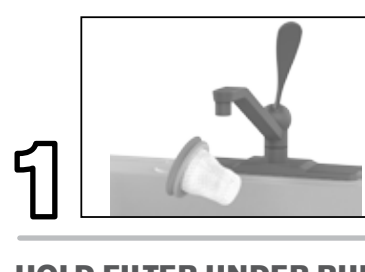


1

HOLD FILTER UNDER RUNNING WATER TO RINSE. DO NOT USE SOAP/DETERGENT. ALLOW FILTER TO COMPLETELY DRY FOR AT LEAST 24 HOURS BEFORE REPLACING IN DIRT CUP.



2

PUT FILTER BACK INTO THE FILTER BASKET AND PUT FILTER BASKET BACK INTO DIRT CUP

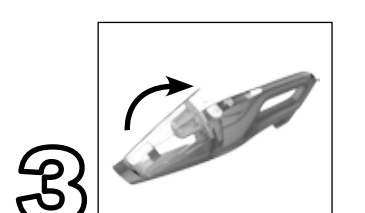

3

TO REATTACH DIRT CUP: ALIGN BOTTOM FIRST AND PIVOT DIRT CUP UNTIL IT SNAPS INTO PLACE.

12

## BONJOUR! BIENVENUE

Félicitations pour l'achat de votre nouvel aspirateur portatif Dirt Devil Power Express Lite. Vous trouverez à l'intérieur de ce manuel tout ce que vous devez savoir au sujet de l'utilisation de vos accessoires.

Alors, qu'attendez-vous? ALLONS-Y!™

### ENREGISTREMENT DU PRODUIT

Enregistrement de la garantie  
Assurez-vous d'enregistrer votre produit en ligne sur le site [www.dirtdevil.com](http://www.dirtdevil.com) ou en appelant au numéro 1 800 321-1134.

Conseil : Brochez vos reçus d'achat à ce manuel du propriétaire. La vérification de la date d'achat peut être requise pour une réparation au titre de la garantie de votre produit Dirt Devil™.

Veuillez inscrire les renseignements de votre appareil ci-dessous afin de les consulter rapidement.

Modèle #: \_\_\_\_\_  
Code du fabricant : \_\_\_\_\_  
(Vous trouverez le code du fabricant à l'arrière ou au bas de l'appareil)

Vous trouverez vos pièces de rechange d'ORIGINE en visitant le site [www.dirtdevil.com](http://www.dirtdevil.com)

Cet appareil est équipé des pièces suivantes :  
FILTRE F114



14

## Power Express™ Lite

Mon modèle est : \_\_\_\_\_



## 1-2-3...

## GUIDE DE MANUEL

### PIÈCES DE RECHANGE


• FILTRE : F114



## LET'S GO.™

15

## TABLE DES MATIÈRES



## 1-2-3...

- Comment utiliser comme aspirateur-balais 20
- Pour utiliser l'aspirateur 21
- Comment utiliser comme aspirateur à main 22
- Accesorios para aspiradora de mano 23
- Vide- poussière et filtre : retrait et réinstallation 24
- Nettoyage et rinçage du filtre d'évacuation 25



## Guide de dépannage

- 26
- 27



## Garantie

- 27

CE PRODUIT EST RÉSERVÉ À UN USAGE DOMESTIQUE. L'UTILISATION DE CE PRODUIT À DES FINS COMMERCIALES INVALIDE LA PRÉSENTE GARANTIE.

## CONSIGNES DE SÉCURITÉ IMPORTANTES

Lorsque vous utilisez un appareil électrique, vous devez toujours respecter certaines consignes de sécurité, dont les suivantes:

- LISEZ TOUTES LES INSTRUCTIONS AVANT D'UTILISER CET APPAREIL.
- TOUJOURS SUIVRE CES CONSIGNES DE SÉCURITÉ.
- NE LAISSEZ PAS L'ASPIRATEUR SANS SURVEILLANCE.
- AVERTISSEMENT : POUR RÉDUIRE LES RISQUES D'INCENDIE, DE DÉCHARGE ÉLECTRIQUE ET DE BLESSURE :
  - Assemblez complètement avant l'utilisation.
  - N'utilisez l'aspirateur qu'à la tension spécifiée sur la plaque signalétique située au dos de l'appareil.
  - Ne pas permettre que cet appareil soit utilisé comme un jouet. Ce produit n'est pas conçu pour être utilisé par des enfants de 12 ans et moins. Exercer une étroite surveillance lorsque l'appareil est utilisé à proximité d'enfants. Pour éviter les risques de blessures ou de dommages, garder le produit hors de la portée des enfants, et ne pas leur permettre de placer leurs doigts ou des objets dans les ouvertures.
  - Utiliser cet aspirateur uniquement de la façon décrite dans ce guide. Utiliser uniquement les accessoires et les produits recommandés par le fabricant.
  - Ne pas utiliser l'appareil si la fiche ou le cordon est endommagé. Si l'appareil fonctionne mal, s'il est tombé par terre ou dans l'eau, s'il est endommagé ou a été laissé à l'extérieur, il doit être apporté à un centre de réparation pour y être inspecté. Téléphoner au 1 800 321-1134 pour connaître le centre de réparation le plus proche.
  - Ne pas tirer ou transporter l'appareil par le cordon, ne pas se servir du cordon comme poignée, ne pas fermer de portes sur le cordon et ne pas contourner des coins ou des rebords tranchants avec le cordon. Ne pas placer le produit sur le cordon. Éviter de faire rouler l'appareil sur le cordon. Tenir le cordon éloigné des surfaces chaudes.
  - Ne débranchez pas l'appareil en tirant sur le cordon. Pour débrancher l'appareil, tirez sur la fiche, et non sur le cordon.
  - Ne manipulez pas la fiche ou l'appareil avec les mains mouillées.
  - N'insérez pas d'objets dans les ouvertures. N'utilisez pas l'appareil si ses orifices sont obstrués; enlever ces débris à la poussette, les peluches, les cheveux et tout ce qui pourrait réduire le débit d'air.
  - Gardez les cheveux, les vêtements amples, les doigts et toute partie du corps à l'écart des ouvertures et des pièces en mouvement.
  - Éteignez toutes les commandes avant de débrancher l'appareil.

18

- Être très prudent pendant l'utilisation dans les escaliers. Afin d'éviter les blessures ou les dommages et d'empêcher l'appareil de tomber, toujours le placer au bas de l'escalier. Ne pas placer l'appareil dans les escaliers ou sur un meuble, ce qui pourrait causer des blessures ou des dommages.
- Ne pas utiliser l'appareil pour ramasser des liquides inflammables ou combustibles, comme de l'essence, ou de la sciure de bois, ni l'utiliser à proximité de ces matériaux.
- Toujours éteindre cet appareil avant d'installer ou de retirer le suceur électrique.
- Éviter d'aspirer tout objet qui brûle ou fume, comme les cigarettes, les allumettes et les branches incandescentes. • Ne laissez pas l'appareil sans surveillance quand il est branché. Débranchez-le quand il n'est pas utilisé et avant qu'on faire l'entretien.


## MISE EN GARDE : POUR RÉDUIRE LES RISQUES DE DOMMAGES :

- Éviter de ramasser des objets durs ou aux arêtes tranchantes avec l'appareil, car ils peuvent endommager l'appareil.
- ## VEUILLEZ CONSERVER CES INSTRUCTIONS
- Entreposer l'appareil à l'intérieur. Ranger l'aspirateur après son utilisation pour éviter tout risque de chute.
  - Ne pas utiliser l'appareil sans son vide-poussière et/ou ses filtres.
  - AVERTISSEMENT : Cet appareil contient des produits chimiques reconnus par l'état de la Californie comme pouvant causer le cancer, entraîner des malformations congénitales ou causer d'autres dommages aux organes de reproduction. SE LAVER LES MAINS APRÈS L'UTILISATION DE L'APPAREIL.
  - Toute autre tâche d'entretien doit être confiée à un représentant de service autorisé.


## AVERTISSEMENT :

Afin de réduire les risques de choc électrique, cet appareil est muni d'une fiche polarisée une tige est plus large que l'autre). Cette fiche ne peut être insérée dans une prise de courant polarisée que dans un sens. Si la fiche ne s'insère pas complètement dans la prise, inversez-la. Si elle ne s'insère toujours pas, demandez à un électricien qualifié d'installer la prise appropriée. Ne modifiez jamais la fiche.


## COMMENT UTILISER COMME ASPIRATEUR-BALAIS

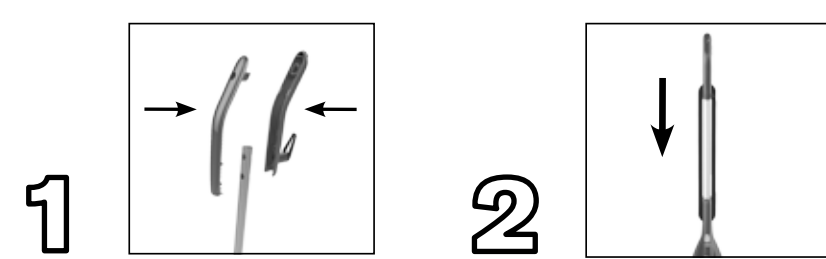


1 ENCLENCHEZ LES DEUX PIÈCES DE LA POIGNÉE AU TUBE EN EXERÇANT UNE PRESSION JUSQU'À ENTENDRE UN CLIQUETIS. ASSUREZ-VOUS QUE LE TUBE EST PLACÉ ENTRE LES POIGNÉES AVANT QUE ELLES SOIENT RACCORDÉES.

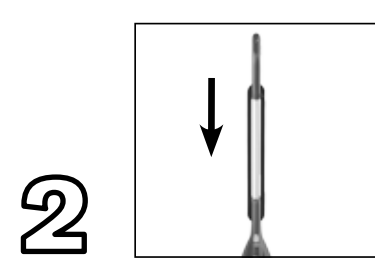

2 INSÉRER LA POIGNÉE LE TUBE EN ASPIRATEUR À MAIN.

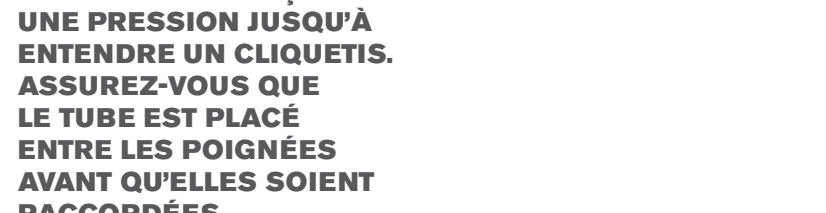

3 FIXER L'EMBOU POUR PLANCHER À L'APPAREIL

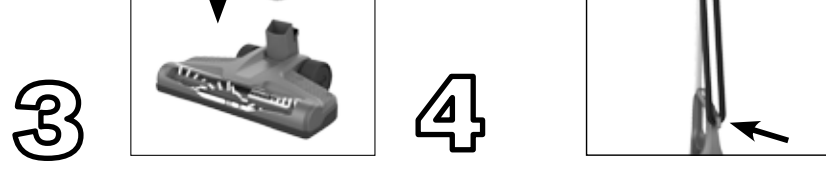

4 APRÈS UTILISATION, ENROULER LE CORDON AUTOUR DES CROCHETS POUR UN RANGEMENT PRATIQUE. FIXEZ LA FICHE AU CORDON.

16

