MR. RICE

by SUNPENTOWN

SC-163Z

Rice Cooker

Instruction Manual

Please read manual before use and keep manual for later reference.
(Warranty Card Included Inside)

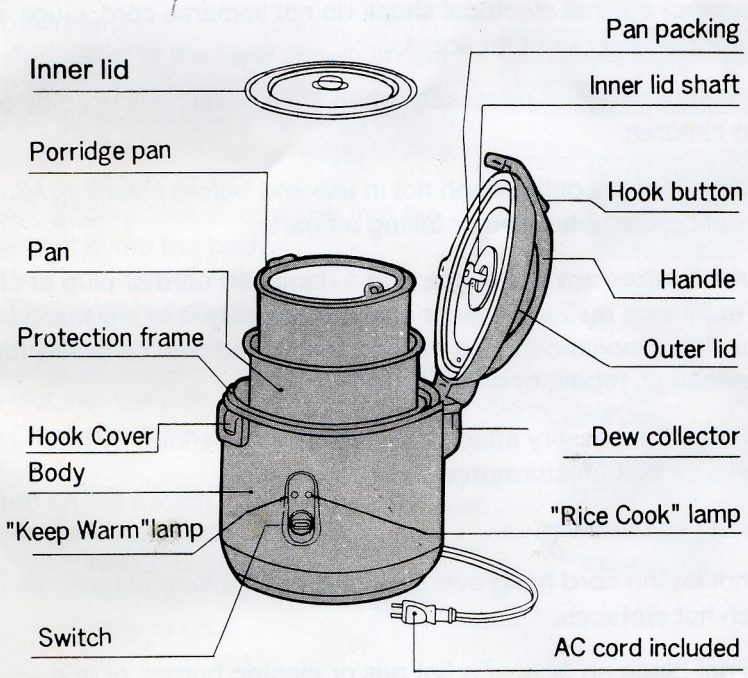

Accessories

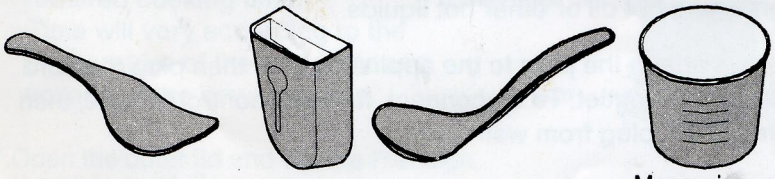

Rice Scoop | Scoop holder | Spoon | Measuring cup (180c.c.)

Before operating this unit, please read instructions completely.

HOW TO LOAD AND UNLOAD

1.Dew collector

- To remove, hold sides and pull out.
- To attach, reverse directions.

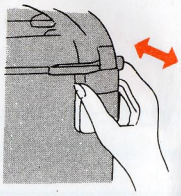

2.Scoop holder

- Attach as shown below.

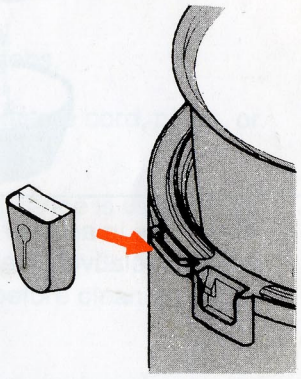

3.Inner lid

- To attach the inner lid, press onto the shaft.

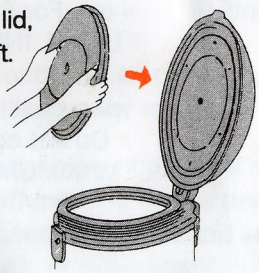

SPECIFICATIONS

Model	SC-163Z
Power Supply	120V/60Hz
Capacity	6 Cup
Thermal fuse	341°F
Dimensiones(HxWxD)	11.8(inch)×11(inch)×9.3(inch)
Weight	7.5 lbs
Porridge	Complete

SUNPENTOWN INTERNATIONAL INC.

PRECAUTIONS

1.If the pan is not in the cooker, cooking will not begin.

2.Always keep the pan bottom and heater clean and dry. Any foreign matter between them will cause cooker to malfunction.

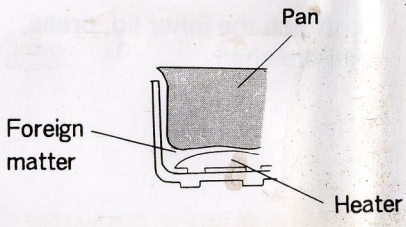

3.When the pan is not in the body, as well as right after cooking, the switch cannot be engaged. Do not depress with force.

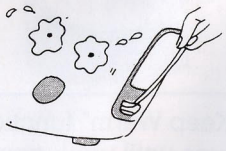

4.Using the "Keep Warm" function for more than 12 hours may cause discoloration or an objectionable odor to the rice.

5.Set the unit on a stable surface. Do not expose to water, high humidity or heat souces.

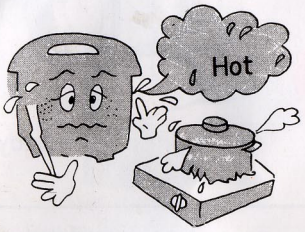

6.Do not cover the outer lid when in use.

7.Do not use the pan directly on an open flame.

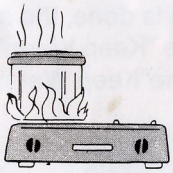

8.Do not immerse in water.

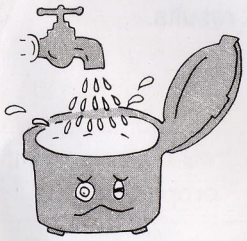

HOW TO USE (STEW)

1.Put foods such as chicken, duck, pork, beans, ect. into the Porridge pan, and add water into the pan.
*Do not add water more than LEVEL INDICATOR "3".

2.Put one cup of water into the pan, and then place the porridge pan in the cooker.
(Attn.:Put two cups of water in the pan when you cook raw foods.)

3.Close the outer lid, insert the plug, and press the switch. The " Porridge cook" lamp will remain on until the switch will pop up.
*Keep on steaming for about 15-20 minutes when you cook raw foods.

HOW TO CLEAN

Unplug before cleaning.
1.Soak the pan and inner lid in hot water and wash with a sponge.
2.Wipe the body with a damp cloth. Do not immerse in water.
3.The dew collector and scoop holder should be removed and cleaned.
- Do not use abrasive cleaners or steel wool. Clean with a non-metal brush or sponge.

Non-Stick coated pan

- Use a sponge to clean.
- Use a plastic or wooden rice scoop, not metal utensils that may damage the pan surface.
- The non-stick coating may discolor after long use, due to water and steam. This won't affect the non-stick or sanitary properties

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed; including the following:

1.Read all instructions.

2.Do not touch hot surfaces. Use handles or knobs.

3.To protect against electrical shock do not immerse cord, plugs, or product in water or other liquid.

4.Close supervision is necessary when any appliance is used by or near children.

5.Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.

6.Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or adjustment.

7.The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

8.Do not use outdoors.

9.Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.

10.Do not place on or near a hot gas or electric burner, or in a heated oven.

11.Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

12.Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off ", then remove the plug from wall outlet.

13.Do not use this appliance for other than its intended use.

14.Save these instructions.

OPERATING I

1.Measure rice with the included measuring cup.

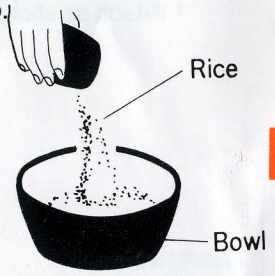

2.Put washed rice in the pan. Add water .

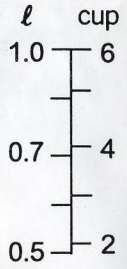

- Wash rice in another bowl until water is relatively clear.

- e.g. For 6 cups of rice, add water to LEVEL INDICATOR 6.
- Adjust water quantity to your personal taste.
- Do not cook more than the MAXIMUM LEVEL.

5.Close the outer lid until it clicks.

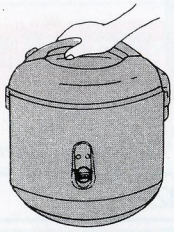

6.Attach the AC cord to the cooker and plug in. Immediately press the switch and the"Rice Cook" lamp tells you cooking has started.



- If the outer lid is not closed securely, cooking will be affected.

- Do not plug in until ready to cook. Otherwise, rice may be ruined.

NSTRUCTIONS

3.Set the pan in the cooker.

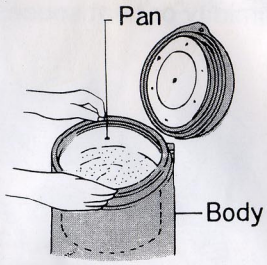

- Wipe the outside of the pan before use. A wet pan may cause a cracking noise while cooking and may damage the unit.

4.Place the inner lid onto the outer lid.

- To attach the inner lid, press onto the shaft.

7.When rice is done, the switch will pop up.The "Keep Warm" lamp lights to signal the"Keep Warm" function.

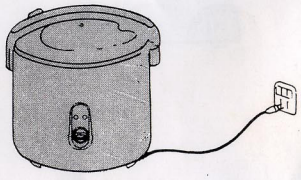

- After the switch pops up, leave covered for at least 15 minutes for best results.

8.Scoop and mix the rice well.

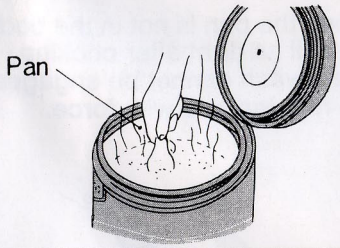

- The "Keep Warm" function continues until unplugged.

HOW TO USE (PORRIDGE)

1.Put washed rice in the porridge pan.
- Measure the rice according to the right table for the desired Porridge.
- Washing of the rice is the same as stated for rice cooking.

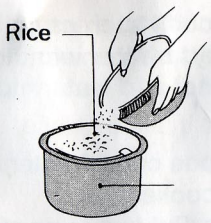

2.Add water.
- Add water to the level shown on the scale on the Porridge pan.
- For an example, add water to the level indicator "1" for one cup of rice.

Rice	1 cup	2 cup	3 cup
Porridge	4 bowls	8 bowls	12 bowls

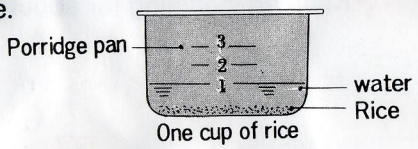

3.After adding 180c.c. of water into the pan,put it into the body.
- Add one cup of water.
- The water is a must for cooking.

4.Put the Porridge pan with the rice and water into the pan.
- Close the outer lid tightly.

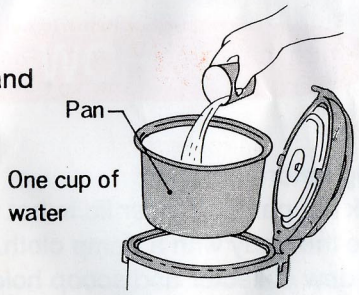

5.Turn on the switch.
- Plug in the AC cord and the "Keep Warm" lamp is on.
- Press the switch and the "Porridge cook" lamp is on.

6.Automatic keep warm function for cooking porridge.
- Refer to the table on the right for the required cooking time.
- Time will very according to the temperature of the air, water and voltage of the power source.

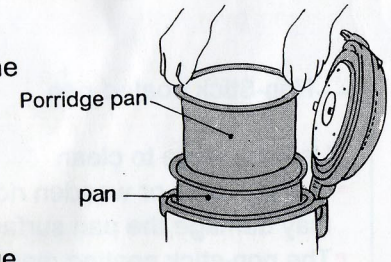

7.Open the outer lid and stir the Porridge, then it is ready to serve.
- Please stir the cooked porridge for best results.

Rice	1 cup	2 cup	3 cup
Time	Approx 35min	Approx 40min	Approx 45min