

Assembly Instructions

Nia Complete Pendant # PXS244

WARNING: BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirements.

1. Thread two screws through the mounting strap, then secure them with two lock nuts. Adjust the length of the screws if necessary.
2. Attach the mounting strap to the outlet box by using two mounting screws.
3. Measure the desired length of the cord (A) from the canopy to the top end of the socket. Leave additional 8" cord (B) above the canopy, then cut off the unnecessary cord. (See Fig.2)
4. Mark the 3" cord (C) from the top of the cord. Use a knife to peel off the insulation of the cord (C) carefully to show three inside wires out. (See Fig.2)

Caution: Cutting too deep may cut off three inside wires and destroy the insulation surface of the three inside wires.

5. Peel off the three wires from the top at about 5/8" length(D) to expose the copper for wiring.
6. Pull the cord down slightly until the strain relief touches the inside of the canopy. (See Fig.1)
7. Pull out the outlet wires and house grounding wire from the outlet box. Make wire connections with wire nuts:
 - The black wire from the fixture to the black wire from the power source.
 - The white wire from the fixture to the white wire from the power source.
 - The green wire from the fixture to the house grounding wire from the power source.
 Carefully put the wires back into the outlet box.
8. Attach the canopy to the mounting strap by inserting the screws, then secure it with the bolt nuts.
9. Attach the shade to the socket, and then secure it with socket ring.
10. Install a bulb (not included). Note relamping label at socket or packaging area for maximum allowed wattage.
11. Turn on the power at the main fuse or circuit breaker box.

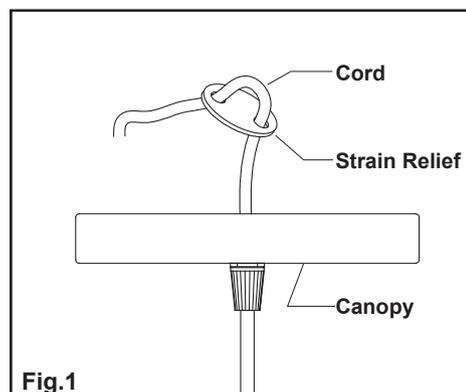
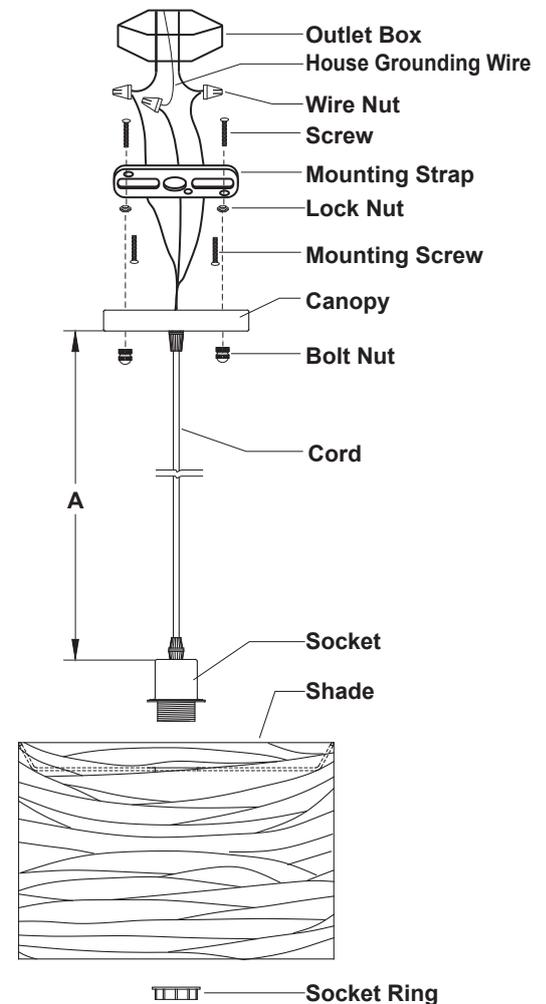


Fig.1

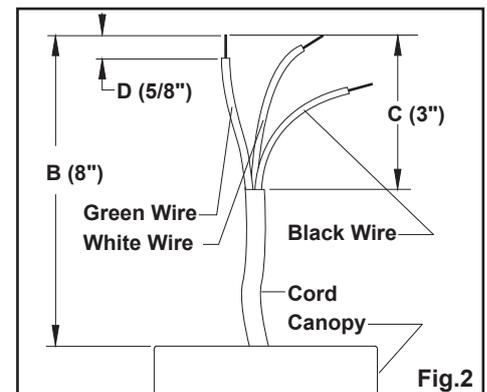


Fig.2