





1 Measure width of door and cut door bottom to length with hacksaw or scissors.

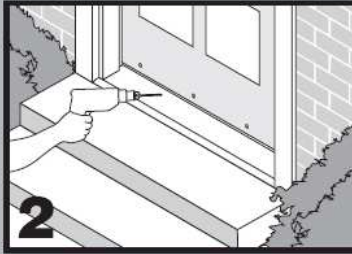

2 With door closed, position door bottom so vinyl seal compresses approximately 1/16" against threshold. Drill pilot holes in center of screw slots and attach door bottom with enclosed screws.

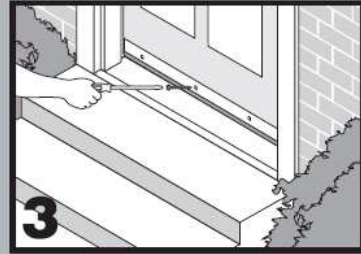

3 Final adjustment of door bottom may be made just prior to tightening of screws.

- 1** Mida el ancho de la puerta y corte la base para puerta a esa medida con una segueta o tijeras.
- 2** Con la puerta cerrada, coloque la base para puerta de modo que el sello de vinilo se comprima aproximadamente 1,6mm contra el sardinel. Taladre orificios piloto en el centro de las ranuras para los tornillos y fije a la puerta con tornillos incluidos.
- 3** El ajuste final de la base para puerta puede hacerse justo antes de apretar los tornillos.