





REACH Barrier – Garage Door Insulation Kit Install Instructions:

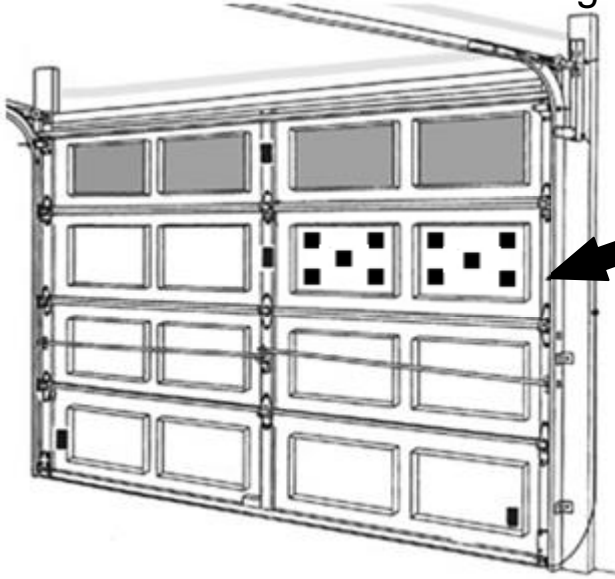

Begin by cleaning the surface of the inside door panels where the adhesive squares will be used to hold the radiant barrier panels in place. Don't trim the panels!

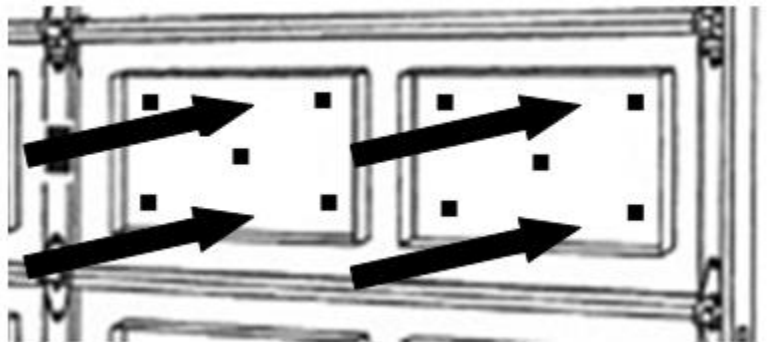

Practice/Step 1: It is best to use the extra size of the panel to help hold the panel in place. Simply “push” and “move” the panel in the proper position within the panel to the desired fit (**before using the adhesive squares!**) The panels can be trimmed but **only** if necessary. Once you “see” how the panels will fit proceed to the next step.

Step 2: Peel off backing of an adhesive square and stick one (1) square in each of the four corners of the garage door panel and one (1) in the center as shown. Once the squares have been stuck to the door peel off the top layer of paper to reveal the other sticky surface below.

Step 3: Once you have the squares in place and removed the paper to reveal the sticky surface, the radiant barrier panels can be pushed into place (like you did in practice! – Step 1)

Finish: Sticky adhesive requires 24 hours to become fully stuck. Once applied, if the adhesive is disturbed or for any other reason the squares will not stick to your door, any good adhesive (glue) will work.



NOTE: There are eight (8) radiant barrier panels in the kit. Each panel is 4 feet in length. It is recommended that you use five (5) adhesive squares per panel. (5) per panel multiplied by eight (8) panels equal 40 adhesive squares necessary to complete the install. 48 squares are included in your kit to complete the installation.