



GRONOMICS® “TOOL FREE ASSEMBLY”

34” x 95” x 19” RAISED GARDEN BED Parts Check List and Assembly Instructions

STEP I

A) Unpack all of the parts and organize them in ‘like’ stacks. Please read the instructions in its entirety before beginning assembly.

You should have:

Model #RGBT 34-95
Model #RGBT 34-95S

QUANTITY	PART DESCRIPTION	PART #
4	4” x 4” x 19” Corner Post	1901
2	4” x 4” x 19” Center Post	1902
Parts for the Sides		
6	31” x 5½” x 1” Side Rail	3101
10	45” x 5½” x 1” Side Rail	4501
2	45” x 5½” x 1” Side Rail (w/Logo)	4501L
Parts for the Center Support		
1	31” x 5½” x 1” Center Support Rail	3101
Packaged & Inspected by: _____ Date _____		

NOTE: If you need assistance with parts or have assembly questions, please contact Customer Service either via email at info@cwpmulch.com or phone at 763-753-7374.



GRONOMICS® “TOOL FREE ASSEMBLY”

STEP II

- A) Start with two 4” x 4” x 19” corner posts and one 4” x 4” x 19” center post, place the posts upside down.
- B) Slide both 45” x 5½” x 1” side rails w/logo upside down between each post. *(see figure 1)*
- C) Repeat the same process with the other two 4” x 4” x 19” corner posts and the last 4” x 4” x 19” center post.

(Figure 1)



(Figure 2)



STEP III

- A) Connect the two corner posts by sliding one 31” x 5½” x 1” side rail into each post.
(See figure 2)
- B) Slide the remaining eight 45” x 5½” x 1” side rails into the posts.
- C) Repeat this step with the remaining four 31” x 5” x 1” side rails.

(Figure3)



STEP IV

- A) Slide the bottom 31” x 5” x 1” support rail

Note: Ground preparation is optional, we recommend leveling area under frame of bed before placing bed and filling with soil.



GRONOMICS® “TOOL FREE ASSEMBLY”

95 x 80 Raised Garden Bed Trellis Kit Parts Check List and Assembly Instructions

STEP I


- A) Unpack all of the parts and organize them in ‘like’ stacks. Please read the instructions in its entirety before beginning assembly.

You should have:

Model #TK 95-80
Model #TK 95-80S

QUANTITY	PART DESCRIPTION	PART #
Parts		
2	Trellis Net	8007
1	4” x 4” x 80” Trellis Post (Left)	7000-Lt
1	4” x 4” x 80” Trellis Post (Right)	7000-Rt
1	4” x 4” x 80” Trellis Center Post	7002
2	45” x 5½” x 1” Side Rail w/Logo Notched Board	4501LN
Packaged & Inspected by: _____ Date _____		

NOTE: If you need assistance with parts or have assembly questions, please contact Customer Service either via email at info@gronomics.com or phone at 763-753-7374.

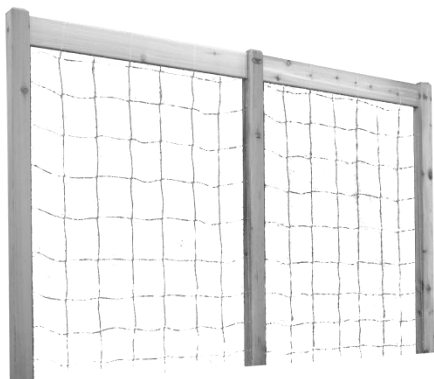

STEP II

- A) Slide the right and left trellis posts into the Raised Garden Bed frame.
- B) Slide the center trellis post into the Raised Garden Bed frame.
- C) Slide the two 45” x 5½” x 1” side rail into the posts.

Note: See trellis net assembly instructions.



GRONOMICS® “TOOL FREE ASSEMBLY”

95 x 80 Raised Garden Bed Trellis Net Assembly Instructions

STEP II

- A) Weave the two 45” x 5½” x 1” side rail through the trellis net, with the double strand of netting on the top. (see figure 1)

(Figure 1)



STEP III

- A) Stretch and secure the trellis net across the two 45” x 5½” x 1” side rail and lock into notched end. (see figure 2)
- B) Slide the 45” x 5½” x 1” side rail into the Raised Garden Trellis Posts.

(Figure 2)



STEP IV

- A) Stretch and fasten netting on lower corners Raised Garden Bed with tacks provided. (see figure 3)

(Figure 3)



NOTE: If you need assistance with parts or have assembly questions, please contact Customer Service either via email at info@gronomics.com or phone at 763-753-7374.