

How-To Seal

Español a termino del documento



All **Latex-ite**[®] asphalt driveway sealers are time-tested and performance proven. Professional grade formulas that are user friendly for the Do-It-Yourselfer. **Latex-ite**[®] driveway sealing products go on easier / faster, perform better and look the **BEST!** So use **Latex-ite**[®] brand asphalt driveway sealers (beware of lower cost ... Knock-Offs) and do it right the first time.

Tip for hot days: Mist off the driveway prior to sealing. Your job will be a lot easier!!!



Once the asphalt is **repaired and cleaned** ... you are ready to seal. **DON'T SEAL OVER PROBLEMS!** Apply only if weather is clear and dry. **DO NOT APPLY** when rain or fog is imminent or likely within 48 hours. Also, do not apply very late in the day. For best results both surface and air temperature should be above 55°F and rising for proper adhesion.

Stir



Premix 1/2 of the pails you expect to use. Then mix additional pails as needed.

If you prefer not to stir, both our [Latex-ite® Optimum™](#) and [Latex-ite® Ultra Shield™](#) are NO-STIR Sealers - all you have to do is pour and spread!

Mist

(only when the pavement is very HOT)


Start at the end of the driveway farthest from the street (start approximately 2 feet out). Apply a fine mist of water to the pavement to lightly dampen the pavement ... leave no standing puddles of water. Apply sealer to the dampened pavement. Remoisten as needed.




Pour



Start by pouring a ribbon of sealer across the width of the driveway about 2 feet from the end of the garage or house in a snake-like pattern. **Use our 18" Seal Right Squeegee.**

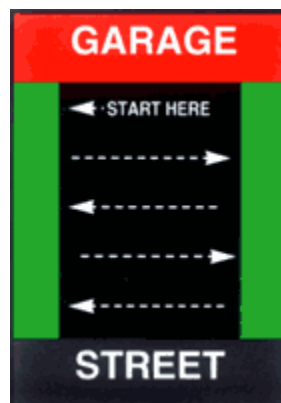

Seal

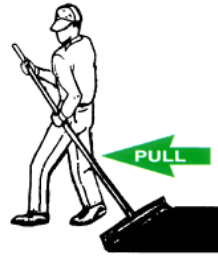

Once you've poured a bead across the driveway, use your squeegee to pull the sealer back and forth, in a moon shape, across the driveway starting near your house and working down towards the street. (Maintain a wet bead or edge to avoid streak marks.) See photos below. **Remember to drag squeegee back and forth ... do not push.**

Apply pressure to leave a thin coat. Two thin coats are better than one thick coat. As more sealer is required, pour it next to where you left off to slightly overlap (Maintain a wet bead or edge to avoid streak marks). Continue sealing project in one day if possible and without stopping to avoid your driveway sealer curing at a different rate... possibly leaving different shades of color.



**Use a squeegee properly
to get professional results:**



Make the job a lot easier and get professional results with our 18" Seal Right Squeegee.

Curing

Block off the driveway with the empty pails and stay off the driveway for a minimum of 24-48 hours. The sealer may take longer to cure if it is humid.

Clean Up



Latex-ite[®] water-based formulas make clean up quick and easy. Simply clean tools and empty buckets with plain water immediately after use. Buckets can be used for gardening, fishing, car washing, hobbies ...

CAUTION

Apply **Latex-ite**[®] sealers only if the ground/pavement temperature is above 55°F -- day or evening and rain is not forecast in 24 - 48 hours. Do not allow any of the sealers to freeze. Do not apply any Latex-ite[®] product to concrete.



En Español:

1. Limpiar...

Barrer y limpiar toda la entrada.

Eliminar manchas de aceite y combustible - enjuagar los restos con agua.

2. Sellar...

Evitar que las manchas de aceite penetren aplicando un sellador fuerte.

Va con blanco... se seca transparente. El sellador para manchas de aceite se vende en latexite.com

3. Rellenar...

Recortar el pico y verter el relleno en la grieta justo por debajo del borde asfáltico
No rellenar demasiado. Permanece maleable.

4. Reparar...

Reparar las grietas grandes y lugares hundidos aplicando en capas (de ¼" - ½" de espesor) del parche. Una vez curado, se podrá aplicar otro nivel... emparejar bordes.

5. Emparchar...

Aplicar el parche en surcos, baches y recortes... rellenar por sobre la superficie asfáltica... luego apisonar.
Esperar 2 semanas antes de sellar.

Mezlar...

Determinar la cantidad aproximada de baldes (ver cobertura), mezclar bien todos los baldes para lograr consistencia. Se puede ahorrar tiempo y esfuerzo con el kit para mezclar Latexite® Driveway Sealer Mix Kit en venta en latexite.com

Verter...

Barrer y limpiar bien la superficie. Si el pavimento está muy caliente, vaporizar con muy poca agua antes del sellado; cepillar los charcos. Delimitar la entrada con un pincel de pintura ancho o para aplicar papel en las paredes. Verter el sellador Latexite® por la parte superior de la entrada haciendo ondas.

Esparcir...

Distribuir el sellador de lado a lado con la escobilla a lo ancho de la entrada, retirando el exceso. Dos manos delgadas son mejores que una gruesa. Dejar secar bien la primera mano antes de aplicar la segunda. No utilizar la entrada durante 24-48 horas.

6. Sellar... para lograr MEJORES resultados... dejar curar el parche y las reparaciones un mínimo de 24 horas. Aplicar el sellador sólo si hay 55°F o más y si no hay pronóstico de lluvia para las próximas 24 horas.