



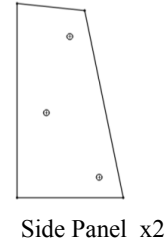



4438DAK & 5338DAK Adaptor Kit Installation Instructions

Kit Components:

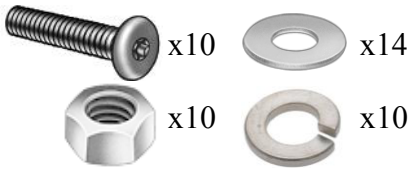

Step 1

While your window well cover is on the well, measure how far below the top most point of the cover your siding runs. Also measure how thick your siding is. These dimensions will determine the cuts needed in the side panels (below). Mark this on the side panels and cut them with a jigsaw (if available) or tin snips.

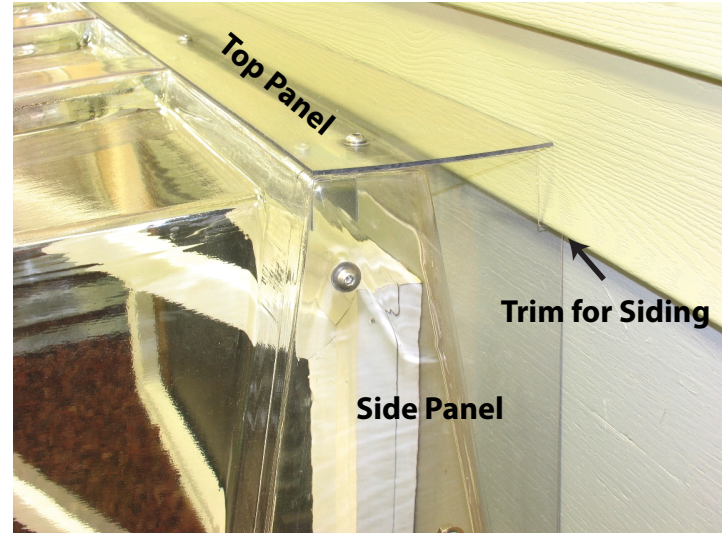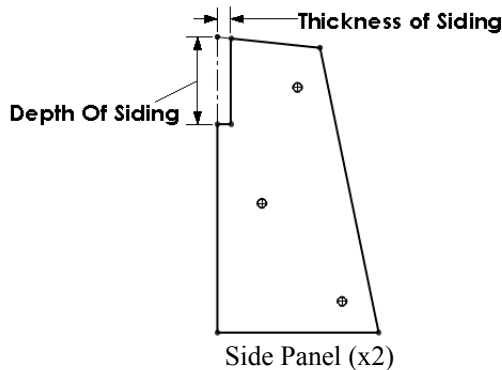


Step 2

Position and secure (tape works fine) each panel on the window well cover. The top panel should be centered with the longest edge against the siding. Side panels should be against the house and flush with the overhang of the top panel. Using a 1/4" bit, drill through the pre-drilled holes and through the window well cover.

Step 3

Remove tape and clear any dirt debris from cover and panels. Take protective film off of the panels. Bolt the panels to the well cover according to the diagram to the right. Do not over-tighten nuts as this could crack the polycarbonate.

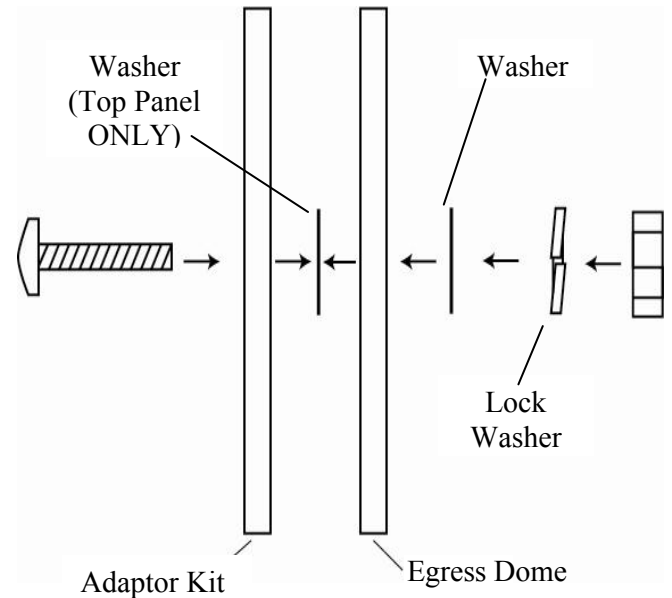

CLEANING: Window Well Covers may be cleaned with a mild solution of detergent and water. Use of harsh chemicals and scouring powders should be avoided.

If you have any questions or concerns, please feel free to give us a call at the number below and we will do our best to work with you.

